

# **DOCUMENTATION ISG-kernel**

# Functional description Distance control

Short Description: FCT-M3

© Copyright ISG Industrielle Steuerungstechnik GmbH STEP, Gropiusplatz 10 D-70563 Stuttgart All rights reserved www.isg-stuttgart.de support@isg-stuttgart.de

## Preface

#### Legal information

This documentation was produced with utmost care. The products and scope of functions described are under continuous development. We reserve the right to revise and amend the documentation at any time and without prior notice.

No claims may be made for products which have already been delivered if such claims are based on the specifications, figures and descriptions contained in this documentation.

#### Personnel qualifications

This description is solely intended for skilled technicians who were trained in control, automation and drive systems and who are familiar with the applicable standards, the relevant documentation and the machining application.

It is absolutely vital to refer to this documentation, the instructions below and the explanations to carry out installation and commissioning work. Skilled technicians are under the obligation to use the documentation duly published for every installation and commissioning operation.

Skilled technicians must ensure that the application or use of the products described fulfil all safety requirements including all applicable laws, regulations, provisions and standards.

#### Further information

Links below (DE)

https://www.isg-stuttgart.de/produkte/softwareprodukte/isg-kernel/dokumente-und-downloads

or (EN)

https://www.isg-stuttgart.de/en/products/softwareproducts/isg-kernel/documents-and-downloads

contains further information on messages generated in the NC kernel, online help, PLC libraries, tools, etc. in addition to the current documentation.

#### Disclaimer

It is forbidden to make any changes to the software configuration which are not contained in the options described in this documentation.

#### Trade marks and patents

The name ISG<sup>®</sup>, ISG kernel<sup>®</sup>, ISG virtuos<sup>®</sup>, ISG dirigent<sup>®</sup> and the associated logos are registered and licensed trade marks of ISG Industrielle Steuerungstechnik GmbH.

The use of other trade marks or logos contained in this documentation by third parties may result in a violation of the rights of the respective trade mark owners.

#### Copyright

© ISG Industrielle Steuerungstechnik GmbH, Stuttgart, Germany.

No parts of this document may be reproduced, transmitted or exploited in any form without prior consent. Non-compliance may result in liability for damages. All rights reserved with regard to the registration of patents, utility models or industrial designs.

## **General and safety instructions**

#### Icons used and their meanings

This documentation uses the following icons next to the safety instruction and the associated text. Please read the (safety) instructions carefully and comply with them at all times.

#### Icons in explanatory text

> Indicates an action.

⇒ Indicates an action statement.



# DANGER Acute danger to life!

If you fail to comply with the safety instruction next to this icon, there is immediate danger to human life and health.



## 

#### Personal injury and damage to machines!

If you fail to comply with the safety instruction next to this icon, it may result in personal injury or damage to machines.



### Attention

#### **Restriction or error**

This icon describes restrictions or warns of errors.



#### Notice

#### Tips and other notes

This icon indicates information to assist in general understanding or to provide additional information.



#### Example

#### General example

Example that clarifies the text.



### **Programing Example**

#### NC programming example

Programming example (complete NC program or program sequence) of the described function or NC command.



### Release Note

#### Specific version information

Optional or restricted function. The availability of this function depends on the configuration and the scope of the version.

## Table of contents

		Preface	2		
		General and safety instructions	3		
1		Overview	6		
2		Description			
2		Control	4.4		
3		Control	14		
4		Smoothing sensor data	15		
	4.	.1 Moving averaging filter	17		
	4.	4.2.1 Influence of parameters	18 18		
	4.	.3 Low-pass filters	19		
	4.	.4 Kalman filter with averaging filter model	20		
		4.4.1 Influence of parameters:	20		
	4.	.5 Kalman filter with exponential model	22		
		4.5.1 Influence of parameters:	22		
5		Operation mode of distance control	25		
	5.	.1 Specifying the workpiece surface (SET_POS, surface)	26		
	5.	.2 Specifying the distance (SET_DIST, distance)	32		
6		Programming	36		
7		Various distance control options	40		
7	7.	Various distance control options	<b>40</b>		
7	7. 7.	<ul> <li>Various distance control options.</li> <li>.1 Option: Use of distance sensor and motor encoder.</li> <li>.2 Option: Weighting of acceleration dependent on distance deviation</li></ul>	<b>40</b> 40 42		
7	7. 7. 7.	<ul> <li>Various distance control options</li></ul>	<b>40</b> 42 43		
7	7. 7. 7. 7.	<ul> <li>Various distance control options</li></ul>	<b>40</b> 42 43 44		
7	7. 7. 7. 7. 7.	<ul> <li>Various distance control options.</li> <li>Option: Use of distance sensor and motor encoder.</li> <li>Option: Weighting of acceleration dependent on distance deviation</li> <li>Option: Dead time reduction</li> <li>Option: Dynamic weighting of the lowering movement</li> <li>Changing parameters.</li> </ul>	<b>40</b> 42 43 44 46		
8	7. 7. 7. 7.	<ul> <li>Various distance control options</li></ul>	40 42 43 44 46 47		
8	7. 7. 7. 7. 8.	<ul> <li>Various distance control options</li></ul>	<ul> <li>40</li> <li>42</li> <li>43</li> <li>44</li> <li>46</li> <li>47</li> <li>47</li> </ul>		
8	7. 7. 7. 7. 8. 8.	<ul> <li>Various distance control options</li></ul>	40 42 43 44 46 47 47 50		
7 8 9	7. 7. 7. 7. 8. 8.	<ul> <li>Various distance control options</li></ul>	40 42 43 44 46 47 50 50 54		
7 8 9	<ol> <li>7.</li> <li>7.</li> <li>7.</li> <li>7.</li> <li>8.</li> <li>8.</li> <li>9.</li> </ol>	Various distance control options.         1       Option: Use of distance sensor and motor encoder.         2       Option: Weighting of acceleration dependent on distance deviation .         3       Option: Dead time reduction .         4       Option: Dynamic weighting of the lowering movement .         5       Changing parameters.         6       PLC interface .         1       Distance control states and transitions .         2       Control commands for distance control.	40 42 43 44 46 47 47 50 54		
7 8 9	<ol> <li>7.</li> <li>7.</li> <li>7.</li> <li>7.</li> <li>8.</li> <li>8.</li> <li>9.</li> <li>9.</li> </ol>	Various distance control options.         1       Option: Use of distance sensor and motor encoder.         2       Option: Weighting of acceleration dependent on distance deviation         3       Option: Dead time reduction         4       Option: Dynamic weighting of the lowering movement         5       Changing parameters.         7       Distance control states and transitions         2       Control commands for distance control.         7       Overview         1       Overview         2       Description	40 42 43 44 46 47 50 54 54 55		
7 8 9	<ol> <li>7.</li> <li>7.</li> <li>7.</li> <li>7.</li> <li>8.</li> <li>8.</li> <li>9.</li> <li>9.</li> <li>9.</li> </ol>	Various distance control options         1       Option: Use of distance sensor and motor encoder         2       Option: Weighting of acceleration dependent on distance deviation         3       Option: Dead time reduction         4       Option: Dynamic weighting of the lowering movement         5       Changing parameters         7       Distance control states and transitions         2       Control commands for distance control         8       Parameter         1       Overview         2       Description         3       Example of distance axis	<ul> <li>40</li> <li>40</li> <li>42</li> <li>43</li> <li>44</li> <li>46</li> <li>47</li> <li>47</li> <li>50</li> <li>54</li> <li>55</li> <li>71</li> </ul>		
7 8 9	7. 7. 7. 7. 8. 8. 8. 9. 9. 9.	Various distance control options         1       Option: Use of distance sensor and motor encoder.         2       Option: Weighting of acceleration dependent on distance deviation         3       Option: Dead time reduction         4       Option: Dynamic weighting of the lowering movement         5       Changing parameters.         7       PLC interface         1       Distance control states and transitions         2       Control commands for distance control.         Parameter       1         1       Overview         2       Description         3       Example of distance axis	<ul> <li>40</li> <li>40</li> <li>42</li> <li>43</li> <li>44</li> <li>46</li> <li>47</li> <li>47</li> <li>50</li> <li>54</li> <li>55</li> <li>71</li> <li>72</li> </ul>		
7 8 9 10	7. 7. 7. 7. 8. 8. 9. 9. 9. 9.	Various distance control options.         1       Option: Use of distance sensor and motor encoder.         2       Option: Weighting of acceleration dependent on distance deviation         3       Option: Dead time reduction         4       Option: Dynamic weighting of the lowering movement         5       Changing parameters.         7       PLC interface         1       Distance control states and transitions         2       Control commands for distance control.         Parameter	<ul> <li>40</li> <li>40</li> <li>42</li> <li>43</li> <li>44</li> <li>46</li> <li>47</li> <li>47</li> <li>50</li> <li>54</li> <li>55</li> <li>71</li> <li>72</li> <li>78</li> </ul>		
7 8 9 10 11	7. 7. 7. 7. 8. 8. 9. 9. 9. 9. 9. <b>0</b>	Various distance control options.         1       Option: Use of distance sensor and motor encoder.         2       Option: Weighting of acceleration dependent on distance deviation         3       Option: Dead time reduction         4       Option: Dynamic weighting of the lowering movement         5       Changing parameters.         PLC interface	<ul> <li>40</li> <li>40</li> <li>42</li> <li>43</li> <li>44</li> <li>46</li> <li>47</li> <li>50</li> <li>54</li> <li>55</li> <li>71</li> <li>72</li> <li>78</li> <li>79</li> </ul>		
7 8 9 10 1 <sup>-1</sup> 12	7. 7. 7. 7. 8. 8. 9. 9. 9. 9. 9. 12	Various distance control options         1       Option: Use of distance sensor and motor encoder.         2       Option: Weighting of acceleration dependent on distance deviation         3       Option: Dead time reduction         4       Option: Dynamic weighting of the lowering movement         5       Changing parameters.         7       PLC interface         1       Distance control states and transitions         2       Control commands for distance control.         Parameter       Parameter         1       Overview         2       Description         3       Example of distance axis         Test example with drive simulation       Error messages         Appendix       21         21       Suggestions, corrections and the latest documentation	<ul> <li>40</li> <li>40</li> <li>42</li> <li>43</li> <li>44</li> <li>46</li> <li>47</li> <li>47</li> <li>50</li> <li>54</li> <li>55</li> <li>71</li> <li>72</li> <li>78</li> <li>79</li> <li>79</li> </ul>		

## List of figures

Fig. 1:	Specifying the ideal workpiece surface for height control	7
Fig. 2:	Specifying the distance to workpiece for height control	8
Fig. 3:	Structure of distance control in conjunction with other compensations	10
Fig. 4:	Sensing the workpiece surface	11
Fig. 5:	TwinCAT configuration example for SERCOS (ID S-0-0053)	12
Fig. 6:	TwinCAT configuration example for CANopen DS402 (PDO 0x60E4, Subindex 1)	12
Fig. 7:	TwinCAT configuration example for ProfiDrive (G1_XIST2)	13
Fig. 8:	Test set-up to determine the filter effect	15
Fig. 9:	Unfiltered sensor data when crossing over an obstacle	16
Fig. 10:	Different filter effect with varying n_cycles	17
Fig. 11:	Different filter effect due to smoothing factor	18
Fig. 12:	Different filter effect with varying n_cycles	19
Fig. 13:	Different filter effect with varying n_cycles	20
Fig. 14:	Different filter effect with varying sigma	21
Fig. 15:	Different filter effect with varying n_cycles	22
Fig. 16:	Different filter effect with varying smoothing factor	23
Fig. 17:	Different filter effect with varying sigma	24
Fig. 18:	Sensing the workpiece surface	25
Fig. 19:	Specifying the ideal workpiece surface for distance control	26
Fig. 20:	Block diagram of distance control	26
Fig. 21:	Ideal workpiece	28
Fig. 22:	Real workpiece without distance control	29
Fig. 23:	Real workpiece with distance control	30
Fig. 24:	Constant workpiece surface with changed tool distance	31
Fig. 25:	Specifying the distance to workpiece for height control	32
Fig. 26:	Profiled workpiece surface with constant tool distance	33
Fig. 27:	Specifying the distance: distance	34
Fig. 28:	Block diagram of distance control with distance specification	35
Fig. 29:	Block diagram of distance control with distance sensor	40
Fig. 30:	Block diagram with distance sensor and motor encoder	41
Fig. 31:	Distance-dependent acceleration weighting	42
Fig. 32:	Reduction in velocity by dynamic weighting of the lowering movement	44
Fig. 33:	Reduction in acceleration by dynamic weighting of the lowering movement	44
Fig. 34:	Distance control state graph and transitions	47
Fig. 35:	View Option: Adaptive acceleration weighting	61

## 1 Overview

#### Task

Distance (and height control) has the task of controlling the distance of tools to workpieces. This takes place by additional electronic probe systems or sensors which detect the actual distance and then send the measurement to the controller.

#### Characteristics

Distance control is used for example:

- to compensate for workpiece thickness tolerances
- to prevent the tool from contacting the workpiece in the event of surface unevenness

#### Parametrisation

Extensive settings must be configured in the axis list for distance control. The section Parameter  $[\triangleright 54]$  contains a complete list.

#### Programming

Distance control is activated and deactivated either by the NC program by the axis-specific NC command <axisname> [ DIST\_CTRL ...] [▶ 36] or by the PLC.

#### Mandatory note on references to other documents

For the sake of clarity, links to other documents and parameters are abbreviated, e.g. [PROG] for the Programming Manual or P-AXIS-00001 for an axis parameter.

For technical reasons, these links only function in the Online Help (HTML5, CHM) but not in pdf files since pdfs do not support cross-linking.

## 2 Description

#### Task

Motions are generated by electronic probe systems or sensors. These motions should superimpose the programmed positions of axes when an NC program is interpolated.

This control helps to implement

- distance control (e.g. contact with the curved surface of a plate) or
- height control (e.g. to compensate for workpiece thickness tolerances).

Fig. 1: Specifying the ideal workpiece surface for height control



Fig. 2: Specifying the distance to workpiece for height control

#### Characteristics

A second measuring system is connected to the control system via an encoder. This measuring system can output axis-specific compensation values to an axis in addition to the interpolated command point to correct the actual position of the axis.

Distance control is enabled and disabled in the

- NC program or
- · via the SPS.

Variables relevant to distance control can be parameterised via the axis machine data.

Distance control operates in the interpolation cycle of the control system (GEO task).



#### Notice

Distance control is only available for SERCOS, PROFIdrive or CANopen drives.

#### Parameterisation overview

The motion generated by distance control can be influenced by machine data.

- · Activating a mean value or a low pass filter
- Maximum permissible correction value
- · Maximum additive axis velocity
- Maximum permissible actual value jump of the probe system
- Maximum upper axis position
- Minimum lower axis position
- Tolerance value
- Dynamic weighting dependent on distance (as of CNC Build V2.11.2804.02)
- Dynamic weighting dependent on lowering movement(as of CNC Build V2.11.2807.13)

Enable/disable is executed either by the NC program or the PLC.



Fig. 3: Structure of distance control in conjunction with other compensations



Fig. 4: Sensing the workpiece surface

#### **Correction of set position**

The actual workpiece surface produces a height offset:

 $Offset = Surface_{real} - Surface_{ideal}$ 

where

Surface<sub>real</sub> = Drivesensor + Heightsensor

Surface<sub>ideal</sub> = Set<sub>pos</sub>¶

This results in a correction of the programmed command position  $Pos_{Cmd}$  of the tool as follows:

 $Pos'_{cmd} = Pos_{cmd} + Offset$ 

 $Pos'_{cmd} = Pos_{cmd} + Drivesensor + Heightsensor - Set_{pos}$ 

#### **Configuration overview**

The encoder of the electronic probe system is connected to the controlled axis as actual value encoder 2. Make sure that the first configured encoder is used for axis position control and the second encoder for distance control. Encoder for distance control.

📴 Distance Control.tsm - TwinCAT System Manager	
Datei Bearbeiten Aktionen Ansicht Optionen Hilfe	
] 🗅 😂 📽 🖬 🎒 🖪 🙏 🖇 🖻 🕄 🛤 🤌 🗐 릚 🐽 🗸	🗸 🏙 💁 🧏 🔨 🚳 🖶 🔍 🖓 🖹 🖉
CNC - Konfiguration CNC - Task GEO CNC-Task	Allgemein       Konfiguration       Parameter       Eingang       Ausgang       Online       Param List         Name       Typ       Id       Ref         Drive status word       UINT 16       S-0-0135 <hidden>         WcState       UINT 16       P-7.4093       P.7_4093         Position feedback 1 value       INT 32       S-0-0051       LAGEIST_WE         Position feedback value 2 (external feedback)       INT 32       S-0-0053       S_0_00053         Image: Antigen       Einfügen       Löschen       Bearbeiten</hidden>
Bereit	Lokal (172.16.10.42.1.1) Config Mode

Fig. 5: TwinCAT configuration example for SERCOS (ID S-0-0053)

👺 CANopen.tsm - TwinCAT System Manager		<u>- 🗆 ×</u>
Datei Bearbeiten Aktionen Ansicht Optionen Hilfe		
] 🗅 📂 🖬 🖨 🗟,   X 🖻 🖻 🗿 👭 8   🖳 (	🗎 🗸 🎯 👧 🍓 🏷 🎯 💊 🖹 🔍 🖓 🚳 😒 😵 🛛 🎖	
Ausgänge	Allgemein Konfiguration Parameter Eingang Ausgang Online Param List	<b>_</b> _
XMaster_Achse     Y_Achse     Y_Achse     Y= 1_Achse     Ti_Achse     Z3_Achse     G    Fiputs     G    fiputs     G    fiputs	Name         Typ         Id         Ref           WcState         UINT 16         0         WCSTATE           statusword         UINT 16         0         DRIVE_STATUS           actual position         INT 32         0         POS_ACT           Supplementary position actual value         INT 32         0         60E4_01	
	Anfügen Einfügen Löschen Bearbeite	n
Xolave_Acrose	4	
Bereit	Lokal (172.16.10.42.1.1) Echtze	eit 7% 🛛 🎢

Fig. 6: TwinCAT configuration example for CANopen DS402 (PDO 0x60E4, Subindex 1)

<mark>蒡</mark> 2006_10_23.tsm - TwinCAT System Mana	ger				_ 🗆 🗵
Datei Bearbeiten Aktionen Ansicht Optionen	<u>H</u> ilfe				
D 😅 📽 🔛   🍜 🗟,   X 🖻 🖻 🝰	🛤 ð 📃 🙃 🗸 🏄 👧	i 🙆 💱 🖄 🎯	) 🗣	🖹 🔍 🕰 🚳 🔦 🕵	🧼 🕐
Inputs     Outputs	Allgemein Konfiguration Param	neter Eingang Au	isgang	Online Param List	<b>^</b>
	Name	Тур	ld	Ref	
	A_ZSW1	UINT 16	2	ZSW1	
A 75W1	A_NIST_B	INT 32	8	NIST_B	
A NIST B	A_25W2	UINT 16	4	ZSW2 61.79W	
A ZSW2		LIINT 32	11	G1 XIST1	
A G1 ZSW	A G1 XIST2	UINT 32	12	G1 XIST2	
A_G1_XIST1 →↑ A_G1_XIST2 ⊕ • Qutputs					
	An	fügen Einfüg	en	Löschen Bearbeiter	
•	·				F
Bereit			Loka	l (172.16.10.42.1.1) Echt:	zeit 7% //





## Attention

The axis-specific feed override and the axis-specific feedhold enable act on distance control (see [HLI// Control commands of an axis]).

When override is 0 or when feedhold is set, distance control is no longer active and the current value is frozen.

## 3 Control

Distance control can be used optionally with P, PI, PD or PID controllers. This helps to combine the different advantages of the individual controllers. If distance control with a P-only controller does not work fast enough or problems occur with oscillation, we advise you to execute control as a PD controller. The I component should only be considered for permanent control deviations.

Characteristics of individual controllers for distance control:

P controller	Weights the output value and affects distance control dynamics. Can be set using P-AXIS-00759 [▶ 67].
I controller	Permanent control deviations are completely compensated after a certain time. If there is no per- manent control deviation, we advise you to disable the I component using P-AXIS-00764 [▶ 67] = 0 to avoid a negative effect on distance control dynamics.
D controller	The faster the distance values change, the stronger the reaction of the D controller. This helps to reduce oscillations. Can be set using P-AXIS-00765 [▶ 68].

#### Step-by-step and iterative parameterisation of the controller:

- Setting the proportional component using P-AXIS-00759 [▶ 67]: First set the controller as a P-only controller. This means disabling the I and D controllers by using P-AXIS-00764 [▶ 67]=0 and P-AXIS-00765 [▶ 68]=0, respectively. To avoid controller instability, start with a low Kp factor. Normally, a good start value is Kp=0.2. Then observe the response of the control loop at a defined input step, i.e. a change in distance. You can increase the Kp factor step by step until there is a recognisable but rapid drop in oscillation.
- Setting the integral component using P-AXIS-00764 [▶ 67]: The integral component ensures that permanent control deviations are completely compensated after a certain time. If there are no permanent control deviations, you should disable the integral component.
- 3. The controller then operates as a PI controller. To avoid instability, start with a high integral action time value Tn. Normally, a good start value is Tn=5. In analogy to section 1, observe the response of the control loop at a defined change in distance and gradually reduce Tn. A good value for Tn is reached when the control deviation is compensated within the required time without causing any undesirable oscillations.
- 4. Setting the derivative component using P-AXIS-00765 [▶ 68]: The controller is then used as a PID or a PD controller. Again, start with a passive value for the derivative action time Tv. Normally, a good start value is Tv=0.01. As before, increase the derivative component step by step and observe the step response. The aim is to damp oscillations as much as possible without negatively affecting control loop dynamics.
- 5. Readjusting:

To obtain the best controller response, you can even readjust the parameters again. For example, you can correct the P component upwards by using the D component.

## 4 Smoothing sensor data

Sensor values may be noisy. This can make the distance controller excite the system with oscillations. Filters can help to smooth the input signal and improve the performance of the distance controller.

The following sections describe the effect of the filters and the influence of the individual parameters on the filter effect in a single test. For this test, a millimetre high obstacle approx. 2.8mm high was crossed by a sensor. The distance controller is disabled for this test in order to demonstrate the effect of the filters without any feedback from the distance controller.



#### Fig. 8: Test set-up to determine the filter effect

The figure below shows the unfiltered sensor data recorded.



#### Fig. 9: Unfiltered sensor data when crossing over an obstacle

When you select a filter, remember that the filters introduce a dead time into the system. For the distance controller, this means a slower reaction to changes in distance. When you configure the filter, you must compromise between filter effect and filter delay.

The aim of configuring the filter is to achieve the best possible smoothing of the measured values when traversing the smooth plane and, at the same time, the lowest possible delay when reacting to an obstacle.



### Notice

In order to optimise the performance of the distance control, you can also adjust the PID controller at the same time as you configure a suitable filter.



#### 

When you configure filters, remember that an enabled distance controller automatically causes a feedback on the filter. This can lead to undesired behaviour of the distance controller and even result in oscillations on the axis.



### 4.1 Moving averaging filter

The moving average filter is the sequence of arithmetic averages over a number P-AXIS-00413 [▶ 56] of measured values

#### Influence of the parameter:

It is possible to achieve good smoothing of sensor data with a moving average filter. However, smoothing sensor data causes a relatively large delay in the system. The following conditions for the parameters are active: The more measured values are included in the filter via P-AXIS-00413 [▶ 56], the better the smoothing, but the greater the reaction delay involved.



Fig. 10: Different filter effect with varying n\_cycles



kenngr.distc.filter\_type MOVING\_AVERAGE #Filter type
# Number of included measured values
kenngr.distc.n\_cycles 20



## 4.2 Exponentially weighted averaging filter

The exponentially weighted averaging filter expands the moving averaging filter by an exponential weighting of the included sensor data. Current measured values are weighted more heavily than older measured values. The weighting of individual measured values is calculated based on a smoothing factor (P-AXIS-00784). The smoothing factor indicates the percentage weighting of the current measured value.

#### 4.2.1 Influence of parameters

#### Smoothing factor (P-AXIS-00784):



The greater the weighting of the current measured value, the lower the filter effect but the faster the reaction to changes in the distance.

Fig. 11: Different filter effect due to smoothing factor

#### Number of measured values - n\_cycles (P-AXIS-00413):

The more measured values are included in the filter via P-AXIS-00413, the better the smoothing, but the greater the reaction delay involved. The greater the smoothing factor, the smaller the influence of P-AXIS-00413. Also, the influence of P-AXIS-00413 decreases steadily with increasing numbers due to the exponential weighting.







## Example

Example parameters: Exponentially weighted averaging filter

kenngr.distc.filter\_type EXPO\_MEAN #Filter type
kenngr.distc.n\_cycles 30 #Number of included measured values
kenngr.distc.smoothing\_factor 0.3 #Smoothing factor

## 4.3 Low-pass filters

The oscillation tendency may be suppressed better by using a low-pass filter if the sensor signal is subject to heavy noise.



### Example

**Example parameters** 

```
kenngr.distc.filter_type LOWPASS # Low-pass filter
kenngr.distc.low_pass_filter_order 2 # Low-pass filter
kenngr.distc.low_pass_filter_fg_f0 30 # Low-pass filter freq 30 Hz
```

## 4.4 Kalman filter with averaging filter model

The Kalman filter tries to estimate the next measured values of the sensor based on a prediction model. The filter first builds the prediction and then refines it by the specified uncertainty of the measured values. The basis of the prediction is the moving averaging filter [ $\triangleright$  17].

#### 4.4.1 Influence of parameters:

#### Number of measured values - n\_cycles (P-AXIS-00413):

The parameter P-AXIS-00413 [▶ 56] specifies the number of measured values that are included in the prediction model of the moving averaging filter. Accordingly, the larger the number of included measured values, the better the smoothing effect. The prediction characteristic of the Kalman filter reduces the dead time compared to a conventional moving averaging filter. However, it should be noted that the dead time of the prediction model leads to an oscillation at large changes in distance. The distance increases as the number of included measured values rises (P-AXIS-00413).



Fig. 13: Different filter effect with varying n\_cycles

#### Degree of uncertainty - sigma (P-AXIS-00783):

The parameter P-AXIS-00783 [▶ 70] indicates the degree of uncertainty of the recorded measured values. The lower the specified uncertainty of the measured values, the more the prediction from the moving averaging filter is approximated to the actual measured values.



Fig. 14: Different filter effect with varying sigma



kenngr.distc.filter_type kenngr.distc.n_cycles	KALMAN_MA 30	<pre>#Filter type #Number of included measured val-</pre>
ues		
kenngr.distc.kalman_sigma	1000	#Uncertainty of measured values

## 4.5 Kalman filter with exponential model

The Kalman filter tries to estimate the next measured values of the sensor based on a prediction model. The filter first builds the prediction and then refines it by the uncertainty of the measured values. The basis of the prediction is the exponentially weighted averaging filter [▶ 18].

#### 4.5.1 Influence of parameters:

#### Number of measured values - n\_cycles (P-AXIS-00413):

The parameter P-AXIS-00413 specifies the number of measured values that are included in the prediction model of the exponentially weighted averaging filter. Accordingly, the larger the number of included measured values, the better the smoothing effect. The prediction characteristic of the Kalman filter reduces the dead time compared to a conventional exponential averaging filter. However, it should be noted that the dead time of the averaging filter leads to an oscillation with large changes in distance. The distance increases as the number of included measured values rises (P-AXIS-00413).



Fig. 15: Different filter effect with varying n\_cycles

#### Smoothing factor (P-AXIS-00784)

The section Exponentially weighted averaging filter [▶ 18] explains the influence of the smoothing factor on the exponentially weight averaging filter. The oscillation caused by the dead time of the filter can be improved by a higher weighting of the current measured value. At the same time, however, this reduces the smoothing effect.



Fig. 16: Different filter effect with varying smoothing factor

#### Degree of uncertainty - sigma (P-AXIS-00783):

The parameter P-AXIS-00783 indicates the degree of uncertainty of the recorded measured values. The lower the specified uncertainty of the measured values, the more the prediction from the moving averaging filter is approximated to the actual measured values.



Fig. 17: Different filter effect with varying sigma

	Example
	Example parameters: Kalman filter with exponential model

kenngr.distc.filter_type	KALMAN_EXPO	#Filter type
kenngr.distc.n_cycles	30	#Number of included measured val-
ues		
kenngr.distc.kalman_sigma	1000	#Uncertainty of measured values
kenngr.distc.smoothing_fac	ctor 0.3	#Smoothing factor

## 5 Operation mode of distance control

Distance control is integrated after interpolation and superimposes the programmed motion. Distance control acts independently of the current state of the interpolator, i.e. it is active even when it is waiting for acknowledgements (e.g. M functions).

Distance control determines the actual absolute position of the workpiece surface with the aid of the axis motor encoder and an additional encoder sensor. The two encoders are coupled to one another, i.e. the values of the two encoders always act in opposite directions when the axes move.

The axis-specific feed override and feedhold act on distance control (see [HLI//Control commands of an axis]). When override is 0 or when the axis-specific feedhold is set, the current value of distance control is frozen.



Fig. 18: Sensing the workpiece surface



### Notice

The encoder position of the motor and the sensor position must act in opposite directions when the Z axis is lifted or lowered.

For example, if the Z axis is lifted and the encoder value of the motor increases, the encoder value of the sensor must be reduced. If required, the parameter P-AXIS-00230 can be used to invert the motion direction of the sensor.

## 5.1 Specifying the workpiece surface (SET\_POS, surface)

#### **Calculating deviation**

The deviation of the real workpiece surface from the specified command position (SET\_POS) is determined in each cycle by the electronic probe. Deviation results from:

Deviation = motor encoder + sensor encoder - set position (SET\_POS)

= actual workpiece surface position - set position (SET\_POS)

To compensate for the workpiece surface deviation, the drive position is additionally moved by the calculated offset of the distance control:

Drive setpoint = programmed setpoint (PCS) + distance control offset



Fig. 19: Specifying the ideal workpiece surface for distance control



Fig. 20: Block diagram of distance control

#### Selecting and deselecting via the NC program

The NC program activates and deactivates distance control and also freezes the current correction value. Example:

```
N10 Z[DIST_CTRL SET_POS=30] Set the position
Nxx Z[DIST_CTRL ON] Select
...
Nxx Z[DIST_CTRL OFF] Deselect
N999 M30
```

The complete CNC syntax is described in the Programming [ 36] chapter.

#### **Typical sequence**

Typical sequence for activating distance control:

- 1. The tool is replaced.
- 2. X and Y axes move to machining position.
- 3. Distance control is activated and the workpiece set position is set. The Z axis must then be located within the detection range of the distance sensor.
- 4. Sensor or probe ring signals distance; distance control corrects height errors.
- 5. Z axis is lowered.
- 6. Distance control is active; thickness tolerances or position differences are compensated.

Deactivating distance control:

- 1. Distance control is deactivated via the NC program
- 2. Distance control is inactive; thickness tolerances or position differences are no longer compensated; and the current offset remains active until the next position request.



#### **Operating principle**

With distance control, deviations in the position of the workpiece surface (actual position) can be corrected with respect to a specified set position:



Fig. 21: Ideal workpiece



#### Deviation

A deviation from the ideal workpiece surface (e.g. with a thinner workpiece) is detected by the sensor (encoder 2):



Fig. 22: Real workpiece without distance control

#### Offset compensation

After activation of distance control with SET\_POS=20 mm (expected workpiece height), the offset is compensated by distance control. As a result, there is no need to adapt the NC program (PCS position). The NC program assumes a constant workpiece surface of Z=20 mm.



Fig. 23: Real workpiece with distance control





Fig. 24: Constant workpiece surface with changed tool distance

#### **Height changes**

Changes in the workpiece surface are compensated by distance control. The NC program therefore assumes a plane workpiece. Height changes in the workpiece surface can be defined by programming the axis. At Z=SET\_POS the TCP tip touches the workpiece surface.

## 5.2 Specifying the distance (SET\_DIST, distance)

#### **Release Note**

Specifying the set distance for distance control is only available as of CNC Build V2.11.2800.28.

#### Distance

V260

In addition to specifying the workpiece surface for a given tool height (*see previous section*), the distance between the tool and the workpiece can also be specified directly in the NC program or via the PLC as of CNC Build V2.11.2800.28.

When distance is commanded via the PLC interface, the set distance can be respecified in every cycle.

In this case tool height is no longer changed by the NC program but is changed explicitly by distance control. This is especially of advantage when a constant distance needs to be maintained to a workpiece surface of any curvature.

For large changes, distance control is supported by additional programming of the Z axis.



Fig. 25: Specifying the distance to workpiece for height control

### Attention

If distance control is activated in "constant distance" mode, no further changes in distance to the workpiece can be specified for this axis in the NC program by explicit programming of the Z axis.



Fig. 26: Profiled workpiece surface with constant tool distance



Fig. 27: Specifying the distance: distance





Fig. 28: Block diagram of distance control with distance specification

## 6 Programming

Syntax:

### <axis\_name> [DIST\_CTRL [ON [ DRYRUN ] [ CONST\_DIST ]] | [OFF | CHECK\_POS | FREEZE | REF] SET\_POS=.. SET\_DIST=.. [ KP=.. ] [ I\_TN=.. ] [ D\_TV=.. ] [ FILTER\_TYPE=.. ] [ N\_CYCLES=.. ] [ FG\_F0=.. ] [ ORDER=.. ] [ SMOOTH\_FACT=.. ] [ KALMAN\_SIGMA=.. ] [ NO\_MOVE ] [ VAL1=.. - VAL5=.. ] { \ } ]

<axis_name></axis_name>	Name of the axis supporting the tool.
DIST_CTRL	Identifier for the "Sensed spindles" function. Must always be programmed as the <u>first</u> keyword.
ON	Distance control on when workpiece surface is specified. A set position (SET_POS) must be set at switch-on.
CONST_DIST	Activate distance control (ON) when a constant distance to the workpiece surface is spe- cified. A distance must be set with SET_DIST at switch-on. [as of Build V2.11.2804.03]
OFF	Deactivate distance control.
CHECK_POS	Check whether position is within the tolerance window.
FREEZE	Freeze the control distance across the workpiece. The axis position or the output correction value is maintained. Axis tracking is interrupted.
DRYRUN	In combination with ON, the axis is not tracked in DRYRUN mode when there are changes in the workpiece surface. This allows data to be evaluated without feedback from the controller (e.g. filter effect). <b>[as of V3.1.3079.23]</b>
	When distance control is activated, a set position must be set with SET_POS if the work- piece surface is specified.
	When distance control is activated, a set distance must be set with SET_DIST if a con- stant distance from the workpiece surface is specified.
REF	Reference measuring system (sensor) (only if there is no absolute measuring system).
SET_POS=	Specify the workpiece surface in [mm, inch] (absolute position). In the event of reset or program end, the set position is reset, i.e. a new set position must be specified before distance control is reactivated.
--------------	--
SET_DIST=	Specify the constant distance to the workpiece surface in [mm, inch]. In the event of re- set or program end, the distance is reset, i.e. a new distance must be specified before distance control is reactivated.
KP=	Weighting the distance control output values. Parameterisation can be executed analog- ous to P-AXIS-00759 [▶ 67]. The value range is limited to 0.0 < KP <= 2.0. For KP val- ues less than 1.0, the distance control dynamics are reduced; for KP values greater than 1.0, the dynamics are increased.
	A KP factor less than 1.0 reduces 1 possible distance control oscillation and steadies control in the event of minor distance errors. <b>[as of V2.11.2809.06 or V3.1.3079.06]</b>
I_TN=	Integral action time of the PID controller in [s]. The integral action time defines the time after which the P and I components of the manipulated variable are equal. Parameterisation can be executed analogous to P-AXIS-00764 [ $\triangleright$ 67]. The value range is limited to 0.0 <= I_TN <= 50.0. A large integral action time produces greater control stability. The shorter the integration action time, the greater the I component and the faster the control. A short integral action time excites oscillations more strongly. <b>[as of V2.11.2809.06 or V3.1.3079.06]</b>
D_TV=	Derivative action time of the PID controller in [s]. The derivative action time defines the time after which the P and D components of the manipulated variable are equal. Parameterisation can be executed analogous to P-AXIS-00765 [▶ 68]. The value range is limited to 0.0 <= D_TV <= 2.0. The larger the derivative action time, the stronger the D component. <b>[as of V2.11.2809.06 or V3.1.3079.06]</b>
FILTER_TYPE=	Filter type to filter sensor values according to P-AXIS-00782 [▶ 69]. <b>[as of</b> V3.1.3079.23]
N_CYCLES=	Number the measured values used for filtering according to P-AXIS-00413 [▶ 56]. [as of V3.1.3079.23]
FG_F0=	Cut-off frequency for the low-pass filter in [Hz] according to P-AXIS-00508. [as of V3.1.3079.23]
ORDER=	Order of the low-pass filter according to P-AXIS-00507. [as of V3.1.3079.23]
SMOOTH_FACT=	Smoothing factor of the exponential averaging filter according to P-AXIS-00784. Spe- cifies the weighting of the current measured value.
KALMAN_SIGMA	= Uncertainty of the included measured values according to P-AXIS-00783 [▶ 70]. [as of V3.1.3079.23]
NO_MOVE	By default, the resulting correction offset is deactivated when distance control is switched off. This motion can be suppressed by specifying NO_MOVE in combination with OFF. The channel is initialised with the changed axis position. The position offset is only deactivated at the next axis motion programmed in the NC program.
VAL1=VAL5=	Five freely assignable values in real format.
١	Separator ("backslash") for clear programming of the command over multiple lines.
T c	he keywords ON/OFF, FREEZE, DRYRUN, CHECK_POS and REF in the same command se- uence mutually cancel each other out.

The keywords SET\_POS, SET\_DIST and VAL1-VAL5 can always be programmed in combination with each other.



### Notice

If distance control is still active at program end, it is not automatically deselected. When a reset or axis error occurs, active distance control is always deselected automatically.



#### Notice

Parameters of the PID controller are not reset at program end.



#### **Programing Example**

#### Programming examples for distance control

#### %DIST\_1

```
; Set expected position of the workpiece surface N10 Z[DIST_CTRL SET_POS=30]
```

N20 Z[DIST\_CTRL ON] ;Select ; ... Nxx Z[DIST\_CTRL OFF] ;Deselect N999 M30

#### %DIST\_2

; Select + set expected position of the workpiece surface N10 Z[DIST CTRL ON SET POS=30]

; ...
Nxx Z[DIST\_CTRL FREEZE] ;Hold position
; ...
Nxx Z[DIST\_CTRL OFF] ;Deselect
N999 M30

#### %DIST\_3

; Select + set expected position of the workpiece surface N10 Z[DIST CTRL ON SET POS=50]

```
; Deactivate distance control; Z axis does not move
Nxx Z[DIST_CTRL OFF NO_MOVE]
; The generated compensation offset is included for motion to the target
point
; 100.
Nxx G0 Z100
N999 M30
```

#### %DIST 4

```
; Set_distance parameters
N10 Z[DIST_CTRL SET_POS=30 SET_DIST=10]
; Select with specified workpiece surface (SET_POS)
N20 Z[DIST_CTRL ON]
; ...
Nxx Z[DIST_CTRL OFF] ;Deselect
; ...
; Select with specified workpiece surface (SET_DIST)
Nxx Z[DIST_CTRL ON CONST_DIST]
; ...
Nxx Z[DIST_CTRL OFF ;Deselect
```

N999 M30

#### %DIST 5

```
N10 Z[DIST_CTRL FILTER_TYPE=KALMAN_MA] ;Select filter type
; Parametrise filter
N20 Z[DIST_CTRL N_CYCLES=30 KALMAN_SIGMA=1000]
; Activate distance control
N30 Z[DIST_CTRL ON CONST_DIST SET_DIST=1].
; ...
; Change filter
Nxx Z[DIST_CTRL FILTER_TYPE=KALMAN_EXPO SMOOTH_FACT=0.3]
.
.
Nxx Z[DIST_CTRL OFF]; Deselect
N999 M30
```

# 7 Various distance control options

### 7.1 Option: Use of distance sensor and motor encoder



#### **Release Note**

This option is available starting at CNC Build V2.11.2804.02 and higher.

#### **Distance sensor**

Normally the distance is just measured by the distance sensor. The actual position of the Z axis is not included.

#### Deviation = Set distance - Sensor value



#### Fig. 29: Block diagram of distance control with distance sensor

#### Distance sensor and motor encoder

As an extension, both the distance sensor and the Z actual value sensor can be used. The inverse coupling of the two encoders (motor, distance) generally causes a reduction in oscillation tendency.

Deviation = Set distance - Sensor value

$$\Delta d = d_{com} - d_{act} \qquad (Z_{offset,i} = Z_{offset,i-1} + d\epsilon)$$
  
$$d_{oct} = filter (d'_{oct} + Z_{oct} - Z_{com}) = filter (d'_{oct} - \Delta Z)$$



#### Fig. 30: Block diagram with distance sensor and motor encoder



kenngr.distc.mode\_dist\_use\_both\_encoder

1 # motor and distance encoder active

# 7.2 Option: Weighting of acceleration dependent on distance deviation



**Release Note** 

This option is available starting at CNC Build V2.11.2804.02 and higher.

#### Acceleration weighting

To reduce a possible oscillation the acceleration can be reduced for small deviations.



Fig. 31: Distance-dependent acceleration weighting

	Example Example parameters			
kennar dist	c use adaptive acceleration	1	# adaptive	

kenngr.distc.use_adaptive_acceleration	Ţ	# adaptive acceleration active
kenngr.distc.a_min	1000	# [mm/s*s] Min. acceleration
kenngr.distc.a_max	10000	# [mm/s*s] Max. acceleration
kenngr.distc.dist_error_a_min	250	# [0.1 μm] Min. distance error
kenngr.distc.dist_error_a_max	500	# [0.1 μm] Max. distance error



### 7.3 Option: Dead time reduction



### **Release Note**

This option is available starting at CNC Build V2.11.2804.02 and higher.

#### Dead time reduction

The dead time of distance control can be reduced by an optimized schedule of the CNC. This setting is generally recommended.



Example Example parameters

kenngr.distc.optimized\_scheduling 1 # Scheduling active

### 7.4 Option: Dynamic weighting of the lowering movement

#### **Release Note**

This option is available starting at CNC Build V2.11.2807.13 and higher.

#### Dynamic weighting of the lowering movement

The "dynamic weighting of the lowering movement" option can be used to reduce the speed and acceleration of the lowering movement towards the workpiece. The lifting movement normally uses high dynamics in order to be able to avoid obstacles or protrusions quickly. The weighting can be used to reduce the dynamics of the lowering movement compared to the lifting movement in order to approach the workpiece more slowly.

This option can also be combined with the "acceleration weighting dependent on distance deviation" option.







Fig. 33: Reduction in acceleration by dynamic weighting of the lowering movement



# Example

Example parameters

kenngr.distc.v_weight_down	500	<pre># Lowering movement P-AXIS-00415</pre>	at	50%	velocity of
kenngr.distc.a_weight_down	300	<pre># Lowering movement of P-AXIS-00416</pre>	at	30%	acceleration



### 7.5 Changing parameters

The parameters kenngr.distc.v\_max (P-AXIS-00415) and kenngr.distc.a\_max (P-AXIS-00416) for speed and acceleration which distance control uses to correct deviations by constance control can be changed using ISG Objects.

The objects provided are in the GEO task and are:

Name	Туре	Unit	Index-Group	Index-Offset
DISTCTRL::v_max	SGN32	µm/s	0x20300	0x10152 (*)
DISTCTRL::a_max	SGN32	mm/s^2	0x20300	0x10153 (*)

(\*) for the first axis, otherwise + 0x10000 \* axis\_index (e.g. 0x30152 for the third axis)



### Notice

Take note that the new values are only adopted and active in the internal distance control work data for the following transitions for security reasons:

- 1. from INACTIVE to ACTIVE state or
- 2. from FREEZE to ACTIVE state

Parameters can be changed directly from the ISG object browser.

Mr ADS-Objekt-Browser für Tv	vinCat			· · · · · · · · · · · · · · · · · · ·			x
<u>D</u> atei <u>S</u> prache <u>O</u> bjektListe	Extras	<u>H</u> ilfe					
Schnittstelle: GEO(551)	Tar	get: local	•		Intervall festlenen	Reconnect	ear
Plattform	ID 🛆	Gruppe	Offset	Bezeichner	Datentyp	Länge_	К
i Achsen	301	0x20300	0x1014E	dc_brake_control.ax_enabled_not_moved	BOOLEAN	1	0
	302	0x20300	0x1014F	sercos_steuer_ext	UNS16	2	C
POS-CTRL	303	0x20300	0x10150	sercos_steuer_int	UNS16	2	0
⊕ Achse 2	304	0x20300	0x10151	add-encoder.abs_pos_offset	SGN64	8	0
i Achse 3	305	0x20300	0x10152	DISTCTRL::v_max	SGN32	4	
	306	0x20300	0x10153	DISTCTRL::a_max	SGN32	4	
	307	U^3U3UU	0~1015/	f indo fived etco mese		- <b>-</b> ►	••
Objekte insgesamt: 2706			_	Target: 127.0.0.1.1.1 (loc	al) connected		:

# 8 PLC interface

### 8.1 Distance control states and transitions

#### Alternative commanding via SPS interface

Basic condition: Distance control is enabled for the axis (see P-AXIS-00328).

In addition to the NC program, distance control can also be commanded via the PLC interface (see [HLI//Distance control]) by specifying the required status transitions (e.g. activating or deactivating) and specifying command positions via the DistanceControl control unit.

The current state of the distance control unit can be viewed in the state of the DistanceControl control unit. The control unit state also includes the current actual position of the workpiece surface, the current distance, the active command source (0=NC program,1=PLC) and the current output position offset.

#### Explanation of figure:

Distance control has 6 internal states which are depicted in the figure below together with the permitted transitions. Transitions, such as a transition to error state, are displayed automatically and cannot be commanded.

A change in the "Active" and "Active constant Distance" states is only permitted in the "Freeze" or "Inactive" states.



Fig. 34: Distance control state graph and transitions

Defined states of distance control

State	Value	Meaning
HLI_DIST_CTRL_STATE_IN- ACTIVE	0	Distance control is deactivated. The specified offset ("actual_offset") is 0.
HLI_DIST_CTRL_STATE_A CTIVE	1	Distance control is active and adjusts the axis to the workpiece sur- face.
HLI_DIST_CTRL_STATE_FR EEZE	2	Distance control is active. The offset ("actual_offset") is frozen, i.e. the axis is not adjusted to the workpiece surface.
HLI_DIST_CTRL_STATE_TU RNING_OFF	3	Distance control was deactivated. The actual active offset ("ac- tual_offset") is run out. As soon as the offset is 0, an automatic switch to INACTIVE state takes place.
HLI_DIST_CTRL_STATE_A CTIVE_CONST_DIST	4	Distance control is active and adjusts the axis to the workpiece sur- face. Continuous specification of the set distance of the tool to the workpiece surface.
HLI_DIST_CTRL_STATE_E RROR	5	Distance control is in error state, e.g. due to an incorrect state trans- ition or due to an error in the position controller. Only a transition to TURNING OFF is possible to exit this state.
HLI_DIST_CTRL_STATE_D RYRUN_CONST_DIST	6	Distance control is active, however axis is not adjusted to workpiece surface. This allows the evaluation of data, for example filter effect without feedback from the control system. Continuous commanding of the set distance of the tool to the workpiece surface.
HLI_DIST_CTRL_STATE_D RYRUN_SETPOS	7	Distance control is active, however axis is not adjusted to workpiece surface. This allows the evaluation of data, for example filter effect without feedback from the control system.



Transition	Value	Meaning
HLI_DIST_CTRL_OFF	0	Distance control is deactivated. The program switches to the TURN- ING OFF state in which the position offset is run out. The state then switches automatically to the INACTIVE state.
HLI_DIST_CTRL_ON	1	Distance control is activated. When activated a command position for the workpiece surface must be transferred in the "position" datum. If no absolute encoder is used, distance control must first be referenced.
HLI_DIST_CTRL_FREEZE	2	The current position offset is frozen. Axis adjustment to the actual workpiece surface is ended.
HLI_DIST_CTRL_REF	3	Referencing distance control if no absolute encoder is used. Refer- encing is only permitted in the INACTIVE state. With this transition a reference position must additionally transferred in the "position" datum.
HLI_DIST_CTRL_ON_CONS T_DIST	4	Activating distance control with continuous distance specification. On activation, a set position must be specified. If the distance sensor supplies no absolute values, distance control must be refer- enced in advance.
HLI_DIST_CTRL_DRYRUN	5	Activate distance control for pure evaluation of data. No axis track- ing in case of changes to the workpiece surface. When activated a command position for the workpiece surface must be transferred in the "position" datum. If no absolute encoder is used, distance con- trol must first be referenced.
HLI_DIST_CTRL_CONST_DI ST	6	Activate distance control for pure evaluation of data. No axis track- ing in case of changes to the workpiece surface. On activation, a set position must be specified. If the distance sensor supplies no abso- lute values, distance control must be referenced in advance.

### 8.2 Control commands for distance control

Commanding dis	Commanding distance control					
Description	This control unit can influence the distance control of the axis. This is dependent on whether the distance control function is selected in the axis parameters (see P-AXIS-00328).					
Data type	MC_CONTROL_DISTANCE_CONTROL, see description of Control unit with usage check					
Access	PLC reads state_r and writes command_w + enable_w					
ST path	gpAx[axis_idx]^.lr_mc_control.distance_control					
Flow control of cor	mmanded values					
ST element	.command_semaphor_rw					
Signal flow	$PLC \rightarrow CNC$					
Data type	BOOL					
Peculiarities	Consumption data item					
Access	CNC accepts the commanded values when this element has the value TRUE. After success- ful acceptance the CNC sets this value to FALSE.					
	PLC sets this value to TRUE when the commanded value is enabled for acceptance by the CNC. The commanded values can only be updated by the PLC if this element has the value FALSE.					
Commanded value	es					
ST element	.command_w					
Signal flow	$PLC \rightarrow CNC$					
Data type	HLI_DISTANCE_CONTROL_COMMAND					
Access	PLC writes					
Distance control st	tate					
ST element	.state_r					
Signal flow	$CNC \rightarrow PLC$					
Data type	HLI_DISTANCE_CONTROL_STATE					
Access	PLC is reading					
Redirection	Redirection					
ST element	.enable_w					

Distance control state					
Description	This entry reads the distance control state.				
Signal flow	$PLC \rightarrow CNC$				
Data type	HLI_DISTANCE_CONTROL_STATE				
ST Path	gpAx[axis_idx]^.lr_mc_control.distance_control.state_r				
Access	PLC is reading				
Elements of the da	ata type				
Element	.actual_state				
Data type	UDINT				
Access	PLC is reading				
Value range/De- scription	See table: Distance control states and transitions [▶ 47]				
Element	.actual_position				
Data type	DINT				
Unit	0.1 μm or 0.0001°				
Access	PLC reads				
Description	This data item indicates the current actual position of the workpiece surface detected by the sensing controller.				
Characteristics	This data item is entered only if distance control is activated in the axis parameters (see P-AXIS-00328).				
Element	.actual_offset				
Data type	DINT				
Unit	0.1 μm or 0.0001°				
Access	PLC reads				
Description	This data item indicates the current position offset of distance control by which the axis was moved due to deviations between the actual workpiece surface and the specified position (SET_POS). The following applies in stationary state (constant workpiece surface and position offset completely run out): Position offset = SET_POS – actual_position				
Characteristics	This data item is entered only if distance control is activated in the axis parameters (see P-AXIS-00328).				

Command for dist	Command for distance control					
Description	This entry commands distance control.					
Signal flow	$PLC \rightarrow CNC$					
Data type	HLI_DISTANCE_CONTROL_COMMAND					
ST Path	gpAx[ <i>axis_idx</i> ]^.lr_mc_control.distance_control. <b>command_w</b>					
Access	PLC writes					
Elements of the data type						
ST element	.transition					
Data type	UDINT					
Value range/De- scription	See Table - Permissible transitions to command distance control [▶ 49]					
ST element	.position					
Data type	DINT					
Value range	[DINT_MIN, DINT_MAX]					
Description	The meaning depends on the commanded transition: HLI_DIST_CTRL_ON: Command position of the workpiece surface (SET_POS) HLI_DIST_CTRL_REF: Reference position of the workpiece surface (REF_POS)					

٦

Cyclic command for o	distance control
Description	This entry specifies cyclic set values are specified (position of workpiece surface or set distance).
Signal flow	$PLC \rightarrow CNC$
Data type	HLIDistanceControlCyclicCommand
ST Path	pAC[axis_idx]^.addr^.McControlLr_Data.MCControl_DistanceControl.CyclicCommand
Access	PLC writes
Elements of the data ty	ipe
ST element	.D_Position
Data type	DINT
Value range	[DINT_MIN, DINT_MAX]
Description	The meaning depends on the commanded transition: HLI_DIST_CTRL_ON: Command position of the workpiece surface (SET_POS) HLI_DIST_CTRL_REF: Reference position of the workpiece surface (REF_POS)
ST element	.D_Distance
Data type	DINT
Value range	[DINT_MIN, DINT_MAX]
Description	Specification of the distance to workpiece surface after selection by transition HLI_DIST_CTRL_ON_CONST_DIST.

# 9 Parameter

# 9.1 Overview

ID	Parameter	Description
P-AXIS-00328	lr_param.dis- tance_control_on	Enabling of distance control
P-AXIS-00414	kenngr.distc.max_devi- ation	Maximum position offset [0.1 μm]
P-AXIS-00415	kenngr.distc.v_max	Maximum velocity [µm/s]
P-AXIS-00416	kenngr.distc.a_max	Maximum acceleration [mm/s^2]
P-AXIS-00417	kenngr.distc.max_act_ value_change	Maximum permissible change speed of measured distance [0.1 $\mu\text{m}/$ cycle]
P-AXIS-00418	kenngr.distc.ref_offset	Reference point offset for control measuring system
P-AXIS-00419	kenngr.distc.max_pos	Upper limit for measuring system
P-AXIS-00420	kenngr.distc.min_pos	Lower limit for measuring system
P-AXIS-00421	kenngr.distc.tolerance	Tolerance band for limits
P-AXIS-00428	kenngr.distc.check_sw _limit_switch	Consideration of distance control in software limit switch monitoring
P-AXIS-00500	kenngr.distc. mode_dist_use_both_e ncoder	Option: Coupling of distance sensor and motor encoder
P-AXIS-00501	kenngr.distc. use_adaptive_acceler- ation	Ontion: Adaptive weighting of acceleration
P-AXIS-00502	kenngr.distc.a_min	
P-AXIS-00416	kenngr.distc.a_max	
P-AXIS-00504	kenngr.distc.dist_er- ror_a_min	
P-AXIS-00505	kenngr.distc.dist_er- ror_a_max	
P-AXIS-00509	kenngr.distc.optim- ized_scheduling	Option: Dead time reduction
P-AXIS-00533	kenngr.distc.v_weight_ down	Velocity weighting for the lowering movement
P-AXIS-00534	kenngr.distc.a_weight_ down	
P-AXIS-00422	Ir_hw[1].encoder_res- olution_num	Numerator distance resolution of the additive sensor measuring system [increments]
P-AXIS-00423	lr_hw[1].encoder_res- olution_denom	Denominator distance resolution of the additive sensor measuring system [0.1 $\mu\text{m}]$

ID	Parameter	Description
P-AXIS-00230	lr_hw[1].vz_istw	Sign reversal of actual sensor values
P-AXIS-00424	lr_hw[1].mode_act_pos	Definition of the sensor value range: Linear scale or modulo hand- ling of sensor values

P-AXIS-00759	kenngr.distc.kp	Weighting the distance control output values
P-AXIS-00764	kenngr.distc.i_tn	Integral action time of the PID controller
P-AXIS-00765	kenngr.distc.d_tv	Derivative action time of the PID controller
P-AXIS-00782	kenngr.distc.filter_type	
P-AXIS-00507	kenngr.distc.low_pass_ filter_order	
P-AXIS-00508	kenngr.distc.low_pass_ filter_fg_f0	
P-AXIS-00413	kenngr.distc.n_cycles	Smoothing sensor data
P-AXIS-00783	kenngr.distc.kal- man_sigma	
P-AXIS-00784	kenngr.distc.smooth- ing_factor	

# 9.2 Description

P-AXIS-00328	Enabling of distance control (spindle with touch probe)	
Description	The distance control for a spindle with touch probe is enabled with this parameter. The activa- tion is done by a special command in the NC program [PROG//section 'Distance controlled spindles'].	
Parameter	Ir_param.distance_control_on	
Data type	BOOLEAN	
Data range	0/1	
Axis types	T, R	
Dimension	Т:	R:
Default value	0	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00413	Filtering of sensor values	
Description	Sensor values may be noisy. To keep excitation of the machine low, the setpoints for distance control can be smoothed by a filter. The parameter specified the number of values that are used for filtering.	
Parameter	kenngr.distc.n_cycles	
Data type	SGN32	
Data range	0 ≤ n_cycles < 100	
Axis types	T, R	
Dimension	T: R:	
Default value	4	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00414	Maximum position offset	
Description	The correction value of the axis that was calculated via distance control may not exceed this machine data item.	
	An error message is issued if this value is exceeded. The correction value is limited.	
Parameter	kenngr.distc.max_deviation	
Data type	SGN32	
Data range	0 ≤ max_deviation < MAX(SGN32)	
Axis types	T, R	
Dimension	Τ: 0.1μm	R: 0.0001 °
Default value	50000	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00415	Maximum velocity	
Description	The parameter defines the maximum speed at which a position offset is cleared. Distance compensation is dynamically limited to maximum velocity to limit any resulting excit- ation.	
Parameter	kenngr.distc.v_max	
Data type	SGN32	
Data range	0 ≤ v_max < MAX(SGN32)	
Axis types	T, R	
Dimension	T: 0.001 mm/s	R: 0.001°/s
Default value	5000	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00416	Maximum acceleration	
Description	The parameter defines the maximum acceleration at which a position offset is cleared. Correction of the distance is limited dynamically with respect to the maximum acceleration to limit the resulting excitation. If no acceleration is specified, the maximum axis acceleration is used automatically (see P-AXIS-00008).	
Parameter	kenngr.distc.a_max	
Data type	SGN32	
Data range	$0 \le a_{max} \le MAX(SGN32)$	
Axis types	T, R	
Dimension	T: 1 mm/s²	R: 1°/s²
Default value	0	
drive types.	SERCOS, Profidrive, CANopen	
Remarks	Then this parameter is 0, the maximum axis acce	leration P-AXIS-00008 is used.

P-AXIS-00417	Maximum permissible change speed of measured distance	
Description	The parameter defines the maximum permissible change in speed of the measured distance within one cycle. After activation of distance control, the sensor's actual values are mon- itored for change. When the maximum permissible change speed is exceeded, the error message ID 70329 is output. This detects problems with actual value detection.	
Parameter	kenngr.distc.max_act_value_change	
Data type	SGN32	
Data range	0 ≤ max_act_value_change < MAX(SGN32)	
Axis types	T, R	
Dimension	T: μm/s	R: 0.0001°/s
Default value	5000	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00418	Reference point offset for measuring system	
Description	The value range of the sensor measuring system can be moved by an offset via this ma- chine data item. This is necessary in the case of absolute position sensors, for example, to define the reference point, i.e. the sensor position that is adjusted if the spindle touches the ideal workpiece surface.	
Parameter	kenngr.distc.ref_offset	
Data type	SGN32	
Data range	MIN(SGN32) ≤ ref_offset < MAX(SGN32)	
Axis types	T, R	
Dimension	T: 0.1µm	R: 0.0001 °
Default value	0 (No offset)	
Drive types	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00419	Upper limit for measuring system	
Description	The following parameter defines the upper limit of the sensor. An error message is gener- ated if it is exceeded while distance control is active.	
Parameter	kenngr.distc.max_pos	
Data type	SGN32	
Data range	0 ≤ max_pos < MAX(SGN32)	
Axis types	T, R	
Dimension	T: 0.1µm	R: 0.0001 °
Default value	50000	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00420	Lower limit for measuring system	
Description	The following value defines the lower limit of the sensor. An error message is generated if it is exceeded while distance control is active.	
Parameter	kenngr.distc.min_pos	
Data type	SGN32	
Data range	0 ≤ min_pos < MAX(SGN32)	
Axis types	T, R	
Dimension	T: 0.1µm	R: 0.0001 °
Default value	-50000	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00421	Tolerance band for limits	
Description	This parameter defines a minimum distance from the minimum and maximum sensor posi- tions.	
	If this distance is undershot, the CNC generates the error messages ID 70330 or ID 70576. If the tolerance band is specified by zero, the limits of the minimum and maximum sensor positions from the axis parameters P-AXIS-00419 and P-AXIS-00420 have a direct effect.	
Parameter	kenngr.distc.tolerance	
Data type	SGN32	
Data range	0 ≤ tolerance < MAX(SGN32)	
Axis types	T, R	
Dimension	Τ: 0.1μm	R: 0.0001 °
Default value	0	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00428	Consideration of distance control in software limit switch monitoring	
Description	This parameter defines whether the calculated distance control offset is included in the soft- ware limit switch monitor (see [FCT-A2]).	
Parameter	kenngr.distc.check_sw_limit_switch	
Data type	BOOLEAN	
Data range	<ul><li>0: Offset of distance control is not considered in software limit switch monitoring (Standard).</li><li>1: Offset of distance control is considered in software limit switch monitoring.</li></ul>	
Axis types	T, R, S	
Dimension	Т:	R,S:
Default value	0	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00500	Option: Coupling of distance sensor and motor encoder	
Description	As an extension, both the distance sensor and the Z actual value sensor can be used. The inverse coupling of the two sensors can reduce an oscillation tendency.	
Parameter	kenngr.distc.mode_dist_use_both_encoder	
Data type	BOOLEAN	
Data range	0: No coupling 1: Coupling of motor encoder and distance sensor active	
Axis types	T, R	
Dimension	T:	R:
Default value	0	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00501	Option: Adaptive weighting of acceleration	
Description	To reduce a possible oscillation the acceleration can be reduced for small deviations.	
Parameter	kenngr.distc.use_adaptive_acceleration	
Data type	BOOLEAN	
Data range	0: No adaptive weighting of acceleration 1: Adaptive weighting of acceleration active	
Axis types	T, R	
Dimension	Т:	R:
Default value	0	
drive types.	SERCOS, Profidrive, CANopen	
Remarks	In addition the following limits for acceleration and distance error must be configured: P- AXIS-00502 or P-AXIS-00416 and P-AXIS-00504 or P-AXIS-00505	



#### Fig. 35: View Option: Adaptive acceleration weighting

P-AXIS-00502	Minimum acceleration	
Description	The parameter defines the minimal acceleration of distance control.	
Parameter	kenngr.distc.a_min	
Data type	UNS32	
Data range	1 MAX (UNS32)	
Axis types	T, R	
Dimension	T: mm/s²	R: mm/s²
Default value	500	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00504	Minimum distance error	
Description	The parameter defines the minimum distance error of distance control up to which a_min (P-AXIS-00502) is used.	
Parameter	kenngr.distc.dist_error_a_min	
Data type	UNS32	
Data range	0 ≤ dist_error_a_min < MAX(UNS32)	
Axis types	T, R	
Dimension	T: 0.1µm	R: 0.0001 °
Default value	1000	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00505	Maximum distance error	
Description	The parameter defines the maximum distance error of distance control from which a_max (P-AXIS-00416) is used.	
Parameter	kenngr.distc.dist_error_a_max	
Data type	UNS32	
Data range	0 ≤ dist_error_a_max < MAX(UNS32)	
Axis types	T, R	
Dimension	T: 0.1µm	R: 0.0001 °
Default value	5000	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00507	Order of the filter	
Description	The filter's order describes its behaviour with regard to the drop in the frequency response. The following applies: Frequency drop = - P-AXIS-00507 * 20 dB/decade	
Parameter	kenngr.distc.low_pass_filter_order	
Data type	UNS32	
Data range	06	
Axis types	T, R	
Dimension	Т:	R:
Default value	4	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00508	Characteristic frequency of a filter	
Description	The parameter defines the value of a filter's characteristic frequency.	
Parameter	kenngr.distc.low_pass_filter_fg_f0	
Data type	REAL64	
Data range	0 ≤ low_pass_filter_fg_f0 < MAX(REAL64)	
Axis types	T, R	
Dimension	T: Hz	R: Hz
Default value	25	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00509	Option: Dead time reduction	
Description	The dead time of distance control can be reduced by an optimized schedule of the CNC.	
Parameter	kenngr.distc.optimized_scheduling	
Data type	BOOLEAN	
Data range	0: Without optimized scheduling 1: Optimized scheduling active	
Axis types	T, R	
Dimension	T:	R:
Default value	0	
drive types.	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00533	Weighting factor for velocity of lowering movement	
Description	This parameter weights the velocity (see P-AXIS-00415) of the lowering movement (towards the workpiece). This can be useful since the lifting movement is normally highly dynamic in order to avoid an obstacle or elevation quickly. With the weighting factor it is possible to use a reduced velocity for the lowering movement towards the workpiece.	
Parameter	kenngr.distc.v_weight_down	
Data type	UNS32	
Data range	0 ≤ v_weight_down < 2000	
Axis types	T, R	
Dimension	T: 0.1%	
Default value	0 *	
Drive types	SERCOS, Profidrive, CANopen	
Remarks	* The weighting is deactivated, lifting and lowering movement use the identical velocity P- AXIS-00415. This parameter is available from CNC version V2.11.2807.13 onwards.	

P-AXIS-00534	Weighting factor for acceleration of lowering movement	
Description	This parameter weights the velocity (see P-AXIS-00416) of the lowering movement (towards the workpiece). This can be useful since the lifting movement is normally highly dynamic in order to avoid an obstacle or elevation quickly. With the weighting factor it is possible to use a reduced acceleration for the lowering movement towards the workpiece.	
Parameter	kenngr.distc.a_weight_down	
Data type	UNS32	
Data range	0 ≤ a_weight_down < 2000	
Axis types	T, R	
Dimension	T: 0.1%	R: 0.1%
Default value	0 *	
Drive types	SERCOS, Profidrive, CANopen	
Remarks	* The weighting is deactivated, lifting and lowering movement use the identical acceleration P-AXIS-00416.	
	This parameter is available from CNC version V2.11.2807.13 onwards.	

P-AXIS-00422	Numerator distance resolution of the additive sensor measuring system	
Description	The distance resolution of the sensor measuring system is specified as the quotient P-AXIS-00423 in the dimension [increments/0.1 $\mu$ m] for translatory axes or [increments/10^-4°] for rotary axes. The number of sensor increments must be specified in P-AXIS-00422.	
Parameter	Ir_hw[i].encoder_resolution_num	
Data type	UNS32	
Data range	0 < encoder_resolution_num < MAX(UNS32)	
Axis types	T, R, S	
Dimension	T: increments	R,S: increments
Default value	1	
Drive types		
Remarks	This entry is valid for 'lr_hw[i].*' with i ≥ 1! The resolution of the motor sensor 'lr_hw[0].*' is defined by P-AXIS-00233 and P- AXIS-00234.	

P-AXIS-00423	Denominator distance resolution of the additive sensor measuring system	
Description	The distance resolution of the sensor measuring system is specified as the quotient P-AXIS-00422 / P-AXIS-00423 in the dimension [increments/0.1 $\mu$ m] for translatory axes or [increments/10^-4°] for rotary axes. The amount of the travel range must be specified in this parameter.	
Parameter	Ir_hw[i].encoder_resolution_denom	
Data type	UNS32	
Data range	$0 \leq \text{encoder}_{\text{resolution}_{\text{denom}}} < MAX(UNS32)$	
Axis types	T, R, S	
Dimension	Τ: 0.1 μm         R,S: 0.0001°	
Default value	1	
Drive types		
Remarks	This entry is valid for 'lr_hw[i].*' with i ≥ 1!	
	The resolution of the motor sensor 'lr_hw[0].*' is defined by P-AXIS-00233 and P-AXIS-00234.	

P-AXIS-00230	Sign reversal of actual value	
Description	This parameter defines the sign reversal of the actual value.	
Parameter	lr_hw[i].vz_istw	
Data type	BOOLEAN	
Data range	0/1	
Axis types	T, R, S	
Dimension	T: R,S:	
Default value	0	
Drive types		
Remarks	These entries are not taken over when the axis parameters list is updated. Updates only be- come effective when the controller is rebooted.	

P-AXIS-00424	Handling of the additive sensor values	
Description	This parameter defines whether the sensor positions are to be considered as linear or mod- ulo values. By default, it can be handled according to the axis type or an individual default can be defined. When sensor values are handled according to the set axis type (see P- AXIS-00018), values are considered linear for the TRANSLATOR axis type, while modulo handling applies to the ROTATOR axis type.	
Parameter	Ir_hw[i].mode_act_pos	
Data type	UNS16	
Data range	0, 1, 2 where: 0: depending on axis type (default) 1 : linear 2 : modulo	
Axis types	T, R	
Dimension	Т:	R:
Default value	0	
Drive types		
Remarks	This entry is valid for 'lr_hw[i].*' with $i \ge 1$ ! The setting of the sensor value range for the motor sensor 'lr_hw[0].*' is defined by P-AXIS-00122.	

P-AXIS-00759	Weighting the distance control output values	
Description	The parameter weights the cyclic output value of the distance control. This may affect the distance control dynamics. For kp values less than 1.0, the distance control dynamics are reduced; for kp value greater than 1.0, the dynamics are increased.	
Parameter	kenngr.distc.kp	
Data type	REAL64	
Data range	0.0 < kp <= 2.0	
Axis types	T, R	
Dimension	Т:	R:
Default value	1.0	
drive types.	SERCOS, Profidrive, CANopen	
Remarks	A kp factor less than 1.0 reduces a possible distance control oscillation and steadies the control in the event of minor distance errors. This parameter is available as of CNC Build V2.11.2809.06 or V3.1.3079.06.	

P-AXIS-00764	Integral (I) action time of the PID controller	
Description	This parameter weights the I component of the PID controller. The integral action time defines the time after which the P and I components of the manipulated variable are equal.	
	A large integral action time produces greater control stability. The shorter the integration ac- tion time, the greater the I component and the faster the control.	
	Disable the I component by i_tn = 0.	
Parameter	kenngr.distc.i_tn	
Data type	REAL64	
Data range	0.0 <= i_tn <= 50.0	
Axis types	T, R	
Dimension	T: s	R: s
Default value	0.0	
drive types.	SERCOS, Profidrive, CANopen	
Remarks	To begin with, it is advisable to select a high initial value for the integral action time setting (e.g. 5) to avoid instability in the control loop. You can then reduce the integral action time step by step to obtain the effect you require. If there are no permanent control deviations, do not use the I component at first.	
	This parameter is available as from Build 2809.06 or 3079.06.	

P-AXIS-00765	Derivative (D) action time of the PID controller	
Description	This parameter weights the D component of the PID controller. The derivative action time defines the time after which the P and D components of the manipulated variable are equal. The derivative action time stabilises controller behaviour and reduces oscillations. The larger the derivative action time, the stronger the D component. Disable the D component by d_tv=0.	
Parameter	kenngr.distc.d_tv	
Data type	REAL64	
Data range	0.0 <= d_tv <= 2.0	
Axis types	T, R	
Dimension	T: s	R: s
Default value	0.0	
drive types.	SERCOS, Profidrive, CANopen	
Remarks	To begin with, it is advisable to select a low initial value for the derivative action time setting to avoid instability in the control loop (e.g.: 0.01). You can then reduce the derivative action time step by step to obtain the effect you require. This parameter is available as from Build 2809.06 or 3079.06.	

P-AXIS-00782	Filter type for smoothing sensor values		
Description	In some cases, the sensor values are noisy. The oscillation tendency can be possibly suppressed by using a suitable filter. The following filter types can be selected for distance control:		
	• DEFAULT: Moving average filter where P-AXIS-00413 [▶ 56] = 4		
	MOVING_AVERAGE: Moving average filter		
	<ul> <li>LOWPASS Low-pass filter</li> </ul>		
	KALMAN_MA: Kalman filter with prediction from	n average filter	
	• EXPO_MEAN: Exponential weighted average f	ilter	
	KALMAN_EXPO: Kalman filter with prediction f	rom exponentially weighted average filter	
Parameter	kenngr.distc.filter_type		
Data type	STRING		
Data range	DEFAULT MOVING_AVERAGE		
	LOWPASS		
	KALMAN_MA		
	EXPO_MEAN		
	KALMAN_EXPO		
Axis types	T, R		
Dimension	T:	R:	
Default value	DEFAULT		
Drive types	SERCOS, Profidrive, CANopen		
Remarks	<ul> <li>The following filter parameters are still required for each of the filter types::</li> <li>MOVING_AVERAGE: P-AXIS-00413 [▶ 56]</li> <li>LOWPASS: P-AXIS-00507 [▶ 63], P-AXIS-00508 [▶ 63] (As of v3.1.3079.21 this setting replace the parameter P-AXIS-00506)</li> <li>KALMAN_MA: P-AXIS-00413 [▶ 56], P-AXIS-00783 [▶ 70]</li> </ul>		
• EXPO_MEAN: P-AXIS-00413 [▶ 56], P-AXIS-00784 [▶ 7		0784 [▶ 70]	
	• KALMAN_EXPO: P-AXIS-00413 [▶ 56], P-AXIS-00784 [▶ 70], P-AXIS-00783 [▶ 70		

P-AXIS-00783	Uncertainty of measurement values	
Description	The parameter indicates the degree of deviation of measurement values from actual values. The higher this value, the better the filter effect. However, any overshoots are amplified.	
Parameter	kenngr.distc.kalman_sigma	
Data type	REAL64	
Data range	1.0 ≤ P-AXIS-00783 ≤ 10000.0	
Axis types	T, R	
Dimension	Т:	R:
Default value	4	
Drive types	SERCOS, Profidrive, CANopen	
Remarks		

P-AXIS-00784	Smoothing factor	
Description	The parameter indicates the weighting of the current measurement value. Example: At a smoothing factor of 0.5, 50% of the current value is included in the average value.	
Parameter	kenngr.distc.smoothing_factor	
Data type	REAL64	
Data range	0 < P-AXIS-00784 ≤ 1.0	
Axis types	T, R	
Dimension	T:	R:
Default value	0.7	
Drive types	SERCOS, Profidrive, CANopen	
Remarks		

# 9.3 Example of distance axis



## Programing Example

### Distance axis

# Distance control		
lr_param.distance_control_on	1	Enables the distance control function
kenngr.distc.max_abweichung	2000000	<pre># [0.1µm] Max. permissible deviation</pre>
kenngr.distc.v_max	50000	<pre># [µm/s] Max. velocity of distance controller</pre>
kenngr.distc.a_max	10000	<pre># [mm/s*s] Max. acceleration</pre>
kenngr.distc.max_istw_sprung	10000000	<pre># Max. actual value jump/cycle</pre>
kenngr.distc.ref_offset	0	# Reference point offset
kenngr.distc.max_pos	1500000	# [0.1µm] Max. position
kenngr.distc.min_pos	-1500000	# [0.1µm] Min. position
kenngr.distc.toleranz	50000	<pre># [0.1µm] Tolerance value of probing depth</pre>
kenngr.distc.check_sw_limit_switch	. 1	<pre># Distance control offset monitor</pre>
kenngr.distc.optimized_scheduling	1	# Opt. scheduling active
<pre>kenngr.distc.mode_dist_use_both_en coder</pre>	-1	# Motor and distance encoder active
<pre>#kenngr.distc.use_adaptive_accel- eration</pre>	1	Adaptive weighting of acceleration active
kenngr.distc.a_min	1000	<pre># [mm/s*s] Min. acceleration</pre>
kenngr.distc.a_max	10000	<pre># [mm/s*s] Max. acceleration</pre>
kenngr.distc.dist_error_a_min	250	# [0.1 μm] Min. distance
kenngr.distc.dist_error_a_max	500	# [0.1 μm] Max. distance
kenngr.distc.filter_type	KALMAN_MA	# Kalman filter active
kenngr.distc.n_cycles	20	<pre># Number of measured values for fil- tering</pre>
kenngr.distc.sigma	1000	# Uncertainty of measured values

# **10** Test example with drive simulation

#### **PLC test environment**

Configuration of a Z axis according to CANopen DS402 drive with additional distance sensor (0x60E4\_01).

#### **Configuration of CAN drive**

🗾 CANopen DistCtrl Simu -	TwinCAT System Manager	X
<u>File E</u> dit <u>A</u> ctions <u>V</u> iew <u>O</u> ption	s <u>H</u> elp	
: D 🚅 📽 🖪 🎒 🐧 🐰		9 <sup>10</sup>
🕀 🐼 SYSTEM - Configuratic 🥂		
🚊 🗓 CNC - Configuration 📄	General Configuration Parameter Input Output Online Param List	H
🖃 📑 CNC-Task GEO		
🗈 📑 CNC-Task SD/	Name Type Id Ref	
E E CNC-Task CO	statusword UINT 16 0 DBIVE STATUS	-
CNC-Task GEC	actual position INT 32 0 POS_ACT	-
	Supplementary position actual value INT 32 0 60E4_01	
Ausgalige		
🛁 Kanal_1	Append Insert Delete Edit	
NC - Configuration 🥃		
		~
Peady	Local (172 16 10 22 1 1) RTime 2%	
Reddy	Local (172:10:10:22:11)	
🗾 CANopen DistCtrl Simu -	TwinCAT System Manager	$\mathbf{X}$
CANopen DistCtrl Simu - File Edit <u>A</u> ctions <u>Vi</u> ew Option	- TwinCAT System Manager	
<b>File Edit Actions View Option</b>	- TwinCAT System Manager	×
CANopen DistCtrl Simu         File       Edit       Actions       View       Option         Image: Construction of the second se	- TwinCAT System Manager	<b>2</b> <sup>10</sup>
CANopen DistCtrl Simu         File       Edit       Actions       View       Option         Image: Construction       Image: Construction       Image: Construction       Image: Construction       Image: Construction	- TwinCAT System Manager	
CANopen DistCtrl Simu - File Edit Actions View Option SYSTEM - Configuration CNC - Configuration CNC - Task GEO	- TwinCAT System Manager	) X
CANopen DistCtrl Simu - Eile Edit Actions View Option SYSTEM - Configuration CNC - Configuration CNC - Configuration CNC - Task GEO CNC - Task SD/ CNC - Task SD/	- TwinCAT System Manager	× *
CANopen DistCtrl Simu -	- TwinCAT System Manager	
CANopen DistCtrl Simu - File Edit Actions View Option SYSTEM - Configuration CNC - Configuration CNC - Configuration CNC - Task GEO CNC - Task CO CNC - Task GEO CNC - Task GEO	- TwinCAT System Manager	
CANopen DistCtrl Simu - File Edit Actions View Option SYSTEM - Configuration SYSTEM - Configuration CNC - CONF	- TwinCAT System Manager	
CANopen DistCtrl Simu - Eile Edit Actions View Option SYSTEM - Configuration CNC - Configuration CNC - Configuration CNC - Configuration CNC - Task GEO CNC - Task SD/ CNC - Task CO CNC - Task GEO CNC - Task GEO CNC - Task GEO Augănge Augănge Ausgănge Achsen	- TwinCAT System Manager	
CANopen DistCtrl Simu - File Edit Actions View Option SYSTEM - Configuration CNC - Configuration CNC - Configuration CNC - Task GEO CNC - Task GEO Ausgänge Ausgänge Achsen X	- TwinCAT System Manager	
CANopen DistCtrl Simu - File Edit Actions View Option SYSTEM - Configuration CNC - Configuration CNC - Configuration CNC - Task GEO CNC - Task GEO Ausgänge Ausgänge Achsen X CNC - X	- TwinCAT System Manager	
CANopen Dist Ctrl Simu - Eile Edit Actions View Option SYSTEM - Configuration CNC - Configuration CNC - Configuration CNC - Task GEO CNC - Task GEO CNC - Task CO CNC - Task CO CNC - Task CO CNC - Task GEO Ausgänge Ausgänge Ausgänge Achsen X X X X X X X X X X X X X	- TwinCAT System Manager	
CANopen Dist Ctrl Simu - Eile Edit Actions View Option SYSTEM - Configuration CNC - Configuration CNC - Configuration CNC-Task GEO CNC-Task SD/ CNC-Task GEO CNC-Task GEO CNC-Task GEO CNC-Task GEO CNC-Task GEO Ausgänge Ausgänge Achsen Ausgänge Achsen CNC - Configuration CNC - Configuration CNC - Configuration	- TwinCAT System Manager	
CANopen DistCtrl Simu - File Edit Actions View Option SYSTEM - Configuration CNC - Configuration CNC - Configuration CNC - Task GEO CNC	- TwinCAT System Manager s Help General Configuration Parameter Input Output Online Param List Name Type Id Ref controlword UINT 16 0 DRIVE_CTRL target position INT 32 0 POS_NOM Append Insert Delete Edit	
CANopen DistCtrl Simu - File Edit Actions View Option SYSTEM - Configuration CNC - Configuration CNC - Configuration CNC-Task GEO CNC-Task GEO CNC-Ta	- TwinCAT System Manager	


## Simulation in PLC

Simulation of CAN-PDO via PLC inputs/outputs

📴 CANopen DistCtrl Simu - TwinCAT Sys	tem Manag	er					(		×
<u>File E</u> dit <u>A</u> ctions <u>V</u> iew <u>O</u> ptions <u>H</u> elp									
D 📽 📽 🖬 🎒 🗛   X 🖻 🖻 🔒	M 👌 🔜	🙃 🗸	💣 🕯	🙆 🖄 💱 🏵	🗣 🖹 🔍	⊕≌ 66∕ '	🏡 🕵	🤌 🕑	?
CNC-Task GEO-Prozessabbild 🔥	Name			Online	Туре	Size	>Addr	In/Out	U
		NCODER	Х	0×000493E0 (300000)	DINT	4.0 0	0.0	Output	0
Ausgänge	SENSOR	_ENCOD	х	0xFFFB6C21 (-2999	DINT	4.0 4	4.0	Output	0
	DRIVE_S	TATUS	X	0x0037 (55)	UINT	2.0 8	3.0	Output	0
	WC_SIA	IE	х	UXUUUU (U)	UINT	2.0 1	12.0	Output	U
Sa Kanal 1									
KC - Configuration									
🚊 🙀 PLC - Configuration									
E ILC_CANopen_Dist_Ctrl									
PLC_CANopen_Dist_Ctrl-Prozessal									
E Standard									
i⊒ 😂 Èingänge									
DRIVE_CMD_POS_IN									
WC STATE									
🕎 Cam - Configuration									
🖃 🛒 I/O - Configuration									
📰 I/O Devices									
			_	1111					
Ready					Local (17	2.16.10.22	.1.1) R	lime 2%	

The drive encoder and the distance sensor are also subject to slight random noise.

## Turning on the drives

The drive can be run after setting the drive enables (drive on, torque, feedhold off).

🏂 TwinCAT PLC Control	- PLC_CANopen_Dist_Ctrl_Sim	u.pro - [Distance_Contro	ot]		
🔄 Datei Bearbeiten Projekt	Einfügen Extras <u>O</u> nline <u>F</u> enster <u>H</u>	ilfe			- 8 ×
Bausteine					^
⊡ 🔄 Test 📄 AckMFun (F	Drive On	Set	Reset	Override 1000	
distance_cc	Torque permission	Set	Reset		
	Release feedhold	Set	Reset		
👘 🗐 SercosDrive 🗸					
	NFB	Set	Reset		
			Target: Local (172.16.10.22.1.1), Laufzeit: 1	INLINE: SIM LÄUFT BP FORCE (	JB LESEN

## Approaching a set position

🗾 CANopen DistCtrl Simu	- TwinCAT	System M	anager			
<u>File E</u> dit <u>A</u> ctions <u>V</u> iew <u>O</u> ption	ns <u>H</u> elp					
i D 📽 📽 🖬   🍜 🖪   3	( <b>B B</b> S	48	📙 🙃 🗸	💣 🙆 🙍 💱	× © 🗣 [	E 🔍 🔑 🚱 🍫
SYSTEM - Configuration     CNC - Configuration	General SD/	A Para NP I	Para PZV Para	VE Var Online	Param List	
E CNC-Task GEO	Name	Actual Velo	Setp. Velo	Override	Set No.	Tool
	Kanal_1	0.0	0.0	100.0	(none)	0
- 🔶 CNC-Task GEO-						
Eingänge	Name	Actual Pos.	Lag Dist.	Target Pos.	Actual Velo	State
Ausgange	X (X)	0.0000	0.0000	0.0000	0.0	Ready
Kanal_1	Y (Y)	0.0000	0.0000	0.0000	0.0	Ready
👜 NC - Configuration	Z (Z)	40.0000	-0.0001	39.9999	300.0	Ready
PLC - Configuration     Gam - Configuration						
🖃 👿 I/O - Configuration						
I/O Devices						
'±~≘ă Mappings						
	📃 Single St	ep MC	01 / Selected (Inte	erp Empty)		
	📃 Block Igr	iore 🗌	Manual	Automatic		ADI
	Program/MD	l: Z4	0			
	 F1	– . F2 F	+ ++ F3 F4	♦ (0) F5 F	<b>0</b> 6 <b>F</b> 8	
Ready					Local (172.16.10.	22.1.1) RTime 2%

🞉 TwinCAT PLC Control	- PLC_CANopen_Dist_Ctrl_Simu.pr	ro* - [Distance_Control]		
🔄 Datei Bearbeiten Projekt	<u>E</u> infügen E <u>x</u> tras <u>O</u> nline <u>F</u> enster <u>H</u> ilfe			_ @ ×
🔁 Bausteine 🖻 – 🔄 Test	Log. achs_nr 3	Axis index 2		
		Set position [0.1um]: 400000	Transition: 1	Set transition
E SercosDriveOn E SercosReleasel E SercosTorqueP	State: 1	Surface Position: 400005	Act. offset:	5
L I Visual (PRG) MAIN (PRG) UserInitialisations (F	Surface offset 0	Drive encoder: 400007	Drive enc. res. 1	. 000000
		Distance sensor: 1	Sensor enc. res 1	.000000 sensor zero
	-			v
		Target: Local (172.16.10.2	2.1.1), Laufzeit: 1 ONLINE: SIM	LÄUFT BP FORCE ÜB LESEN

1. Referencing the sensor, "sensor zero", 2. Entering the set position, 3. Position=400000, 4. Turning on distance control, 5. Transition=1 (ON)

In the transmitted set position (SET\_POS) the distance sensor supplies the value = 0.

## Changing the surface position "Surface offset"

🎉 TwinCAT PLC Control	- PLC_CANopen_Dist_Ctrl_Simu.pi	ro - [Distance_Control]		
🔄 <u>D</u> atei <u>B</u> earbeiten <u>P</u> rojekt	<u>E</u> infügen E <u>x</u> tras <u>O</u> nline <u>F</u> enster <u>H</u> ilfe			_ @ X
1 2 2 2 4				
Bausteine D	Log. achs_nr 3	Axis index 2	]	
distance_contro		Set position [0.1um]: 400000	Transition: 1	Set transition
····· SercosDriveOn ···· SercosReleasel	State: 1	Surface Position: 409999	Act. offset:	917
SercosTorqueP				
UserInitialisations (F	Surface offset 10000	Drive encoder: 400915	Drive enc. res. 1.	. 000000
		Distance sensor: 9081	Sensor enc. res 1.	.000000 sensor zero
<b>I</b>		Target: Local (172.16.10.2	2.1.1), Laufzeit: 1 ONLINE: SIM	LÄUFT BP FORCE ÜB LESEN

The changed surface position results in a change in the measured distance sensor.

This causes a re-adjustment of the real axis position until the distance sensor supplies the value = 0 again. In other words the desired distance to surface is reached in this case.

STWINCAT PLC Control	- PLC_CANopen_Dist_Ctrl_Simu.pr	o - [Distance_Control]		
🔄 Datei Bearbeiten Projekt	<u>E</u> infügen E <u>x</u> tras <u>O</u> nline <u>F</u> enster <u>H</u> ilfe			_ @ ×
🖹 🗲 🖬 📲 🚳 🛷 +E				
Bausteine D 🔄 Test	Log. achs_nr 3	Axis index 2	]	
		Set position [0.1um]: 400000	Transition: 1	Set transition
SercosDriveOn	State: 1	Surface Position: 409999	Act. offset:	9999
Visual (PRG)				
UserInitialisations (F	Surface offset 10000	Drive encoder: 409996	Drive enc. res. 1	. 000000
		Distance sensor: -1	Sensor enc. res 1	.000000 sensor zero
				~
<b>!</b>		Target: Local (172.16.10.2	22.1.1), Laufzeit: 1 ONLINE: SIM	I LÄUFT BP FORCE ÜB LESEN

## "Freezing" of the current height, transition=2 (FREEZE)

If distance control is interrupted (transition = FREEZE = 2), a changed sensor value (–20000) has no influence on axis correction in this time.



After re-activation of distance control the current sensor value is restored.



## **Turning off**

## Transition=0 (OFF)

After deselection of distance control (transition = OFF = 0) the position offset caused by the distance sensor is cancelled.

🧏 TwinCAT PLC Control	- PLC_CANopen_Dist_Ctrl_Simu.pro -	[Distance_Control]		
🔄 <u>D</u> atei <u>B</u> earbeiten <u>P</u> rojekt	<u>E</u> infügen E <u>x</u> tras <u>O</u> nline <u>F</u> enster <u>H</u> ilfe			_ 8 ×
1 🔁 🖬 📲 🚳 🛷 +				
Bausteine	Log. achs_nr 3	Axis index 2	]	
distance_contro	9	Set position [0.1um]: 400000	Transition: 0	Set transition
SercosDriveOn	State: 0	Surface Position: 0	Act. offset: (	
Visual (PRG)				
MAIN (PRG)	Surface offset -20000	Drive encoder: 399997	Drive enc. res. 1.0	00000
		Distance sensor: -20002	Sensor enc. res 1.0	00000 sensor zero
< >				
				<b>~</b>
		Target: Local (172.16.10.2	2.1.1), Laufzeit: 1 ONLINE: SIM 👖	AUFT BP FORCE UB LESEN

# 11 Error messages

## The following error messages can occur when distance control is active:

- P-ERR-70329 Actual value change of sensor signal greater than limit
- P-ERR-70330 Sensor completely run out
- P-ERR-70331 Excessive sensing deviation
- P-ERR-70332 Distance control still active at program end
- P-ERR-70333 Distance control active for axis that is to be specified.
- P-ERR-70334 On repeat selection, deselection of distance control not yet complete
- P-ERR-70335 Distance control selected without programmed position
- P-ERR-70336 Function is not available

#### Appendix 12

12.1

# Suggestions, corrections and the latest documentation

Did you find any errors? Do you have any suggestions or constructive criticism? Then please contact us at documentation@isg-stuttgart.de. The latest documentation is posted in our Online Help (DE/EN):



QR code link: https://www.isg-stuttgart.de/documentation-kernel/ The link above forwards you to: https://www.isg-stuttgart.de/fileadmin/kernel/kernel-html/index.html



## Notice

## Change options for favourite links in your browser;

Technical changes to the website layout concerning folder paths or a change in the HTML framework and therefore the link structure cannot be excluded.

We recommend you to save the above "QR code link" as your primary favourite link.

## PDFs for download:

DE:

https://www.isg-stuttgart.de/produkte/softwareprodukte/isg-kernel/dokumente-und-downloads

EN:

https://www.isg-stuttgart.de/en/products/softwareproducts/isg-kernel/documents-and-downloads

E-Mail: documentation@isg-stuttgart.de

# Keyword index

# A axis

axis		
(	Command distance control	50
Ľ	Distance control command	52
Ľ	Distance control cyclic command	53
Ľ	Distance control state	51

# D

Distance control		
Command	50,	52
cyclic command		53
State		51

# Ρ

P-AXIS-00230	66
P-AXIS-00328	55
P-AXIS-00413	56
P-AXIS-00414	56
P-AXIS-00415	57
P-AXIS-00416	57
P-AXIS-00417	58
P-AXIS-00418	58
P-AXIS-00419	59
P-AXIS-00420	59
P-AXIS-00421	60
P-AXIS-00422	65
P-AXIS-00423	65
P-AXIS-00424	66
P-AXIS-00428	60
P-AXIS-00500	61
P-AXIS-00501	61
P-AXIS-00502	62
P-AXIS-00504	62
P-AXIS-00505	62
P-AXIS-00507	63
P-AXIS-00508	63
P-AXIS-00509	63
P-AXIS-00533	64
P-AXIS-00534	64
P-AXIS-00759	67
P-AXIS-00764	67
P-AXIS-00765	68
P-AXIS-00782	69
P-AXIS-00783	70
P-AXIS-00784	70



© Copyright ISG Industrielle Steuerungstechnik GmbH STEP, Gropiusplatz 10 D-70563 Stuttgart All rights reserved www.isg-stuttgart.de support@isg-stuttgart.de

