



DOCUMENTATION ISG-kernel

Kinematic transformations

Short Description:
KITRA

© Copyright
ISG Industrielle Steuerungstechnik GmbH
STEP, Gropiusplatz 10
D-70563 Stuttgart
All rights reserved
www.isg-stuttgart.de
support@isg-stuttgart.de

Documentation version: 1.20
Release: 07/03/2023

Preface

Legal information

This documentation was produced with utmost care. The products and scope of functions described are under continuous development. We reserve the right to revise and amend the documentation at any time and without prior notice.

No claims may be made for products which have already been delivered if such claims are based on the specifications, figures and descriptions contained in this documentation.

Personnel qualifications

This description is solely intended for skilled technicians who were trained in control, automation and drive systems and who are familiar with the applicable standards, the relevant documentation and the machining application.

It is absolutely vital to refer to this documentation, the instructions below and the explanations to carry out installation and commissioning work. Skilled technicians are under the obligation to use the documentation duly published for every installation and commissioning operation.

Skilled technicians must ensure that the application or use of the products described fulfil all safety requirements including all applicable laws, regulations, provisions and standards.

Further information

Links below (DE)

<https://www.isg-stuttgart.de/produkte/softwareprodukte/isg-kernel/dokumente-und-downloads>
or (EN)

<https://www.isg-stuttgart.de/en/products/softwareproducts/isg-kernel/documents-and-downloads>
contains further information on messages generated in the NC kernel, online help, PLC libraries, tools, etc. in addition to the current documentation.

Disclaimer

It is forbidden to make any changes to the software configuration which are not contained in the options described in this documentation.

Trade marks and patents

The name ISG®, ISG kernel®, ISG virtuos®, ISG dirigent® and the associated logos are registered and licensed trade marks of ISG Industrielle Steuerungstechnik GmbH.

The use of other trade marks or logos contained in this documentation by third parties may result in a violation of the rights of the respective trade mark owners.

Copyright

© ISG Industrielle Steuerungstechnik GmbH, Stuttgart, Germany.

No parts of this document may be reproduced, transmitted or exploited in any form without prior consent. Non-compliance may result in liability for damages. All rights reserved with regard to the registration of patents, utility models or industrial designs.

General and safety instructions

Icons used and their meanings

This documentation uses the following icons next to the safety instruction and the associated text. Please read the (safety) instructions carefully and comply with them at all times.

Icons in explanatory text

- Indicates an action.
- ⇒ Indicates an action statement.



DANGER

Acute danger to life!

If you fail to comply with the safety instruction next to this icon, there is immediate danger to human life and health.



CAUTION

Personal injury and damage to machines!

If you fail to comply with the safety instruction next to this icon, it may result in personal injury or damage to machines.



Attention

Restriction or error

This icon describes restrictions or warns of errors.



Notice

Tips and other notes

This icon indicates information to assist in general understanding or to provide additional information.



Example

General example

Example that clarifies the text.



Programming Example

NC programming example

Programming example (complete NC program or program sequence) of the described function or NC command.



Release Note

Specific version information

Optional or restricted function. The availability of this function depends on the configuration and the scope of the version.

Table of contents

Preface	2
General and safety instructions	3
1 Introduction	9
1.1 Specification of kinematics ID and offset data	11
1.2 Rotary axes and direction of rotation	12
1.3 Linear axes and motion direction	12
1.4 Further documentation concerning transformations.....	13
2 Kinematic transformations	14
2.1 KIN_TYP_1 – 5-axis kinematics/single-column bed machine.....	14
2.2 KIN_TYP_2 – 5-axis kinematics with rotary/swivel head	17
2.3 KIN_TYP_3 - four-axis kinematics with double spindle head (top spindle).....	19
2.4 KIN_TYP_4 - four-axis kinematics with double spindle head (top spindle).....	21
2.5 KIN_TYP_5 – 4-axis kinematics with crosshead for 4 tools.....	23
2.6 KIN_TYP_6 – 4-axis kinematics with underfloor milling tool	27
2.7 KIN_TYP_7 – 5-axis kinematics with man. auxiliary axis (drilling).....	29
2.8 KIN_TYP_8 – 5-axis kinematics with man. auxiliary axis (sawing).....	32
2.9 KIN_TYP_9 – 5-axis kinematics (boring and milling unit)	35
2.10 KIN_TYP_10 – 5-axis kinematics (sawing)	38
2.11 KIN_TYP_11 – 5-axis kinematics with oblique tool head.....	41
2.12 KIN_TYP_12 – Tripod kinematics	44
2.13 KIN_TYP_16 – 5-axis kinematics.....	49
2.14 KIN_TYP_17 – five-axis kinematics with 2 manual auxiliary axes	52
2.15 KIN_TYP_18 – five-axis kinematics with 2 manual auxiliary axes (sawing)	55
2.16 KIN_TYP_19 – Tripod kinematics	58
2.17 KIN_TYP_21 – Lambda kinematics	61
2.18 KIN_TYP_22 – 5-axis kinematics with X/Y workpiece table	64
2.19 KIN_TYP_23 – 5-axis kinematics with X/Y/B workpiece table	66
2.20 KIN_TYP_25 – 5-axis kinematics with plasma/laser head	69
2.21 KIN_TYP_28 – 5-axis kinematics.....	73
2.22 KIN_TYP_30 – 4-axis kinematics	76
2.23 KIN_TYP_33 – 5-axis kinematics with oblique tool head	78
2.24 KIN_TYP_34 – 4-axis kinematics with X/C workpiece table	81
2.25 KIN_TYP_37 – Flexpicker kinematics	83
2.26 KIN_TYP_52 – 5-axis kinematics with A/B workpiece table	86
2.27 KIN_TYP_57 – 5-axis kinematics with B/C workpiece table	88
2.28 KIN_TYP_58 – Five-axis kinematics with A/C workpiece table	92
2.29 Cardanic kinematics.....	96
2.29.1 KIN_TYP_59 – Cardanic kinematics with C/A head	96
2.29.1.1 Saw blade with TCP function	101
2.29.1.2 Special function: Flange-mounted underfloor milling tool	104
2.29.2 KIN_TYP_60 – Cardanic kinematics with C/B head	106
2.30 KIN_TYP_61 – 5-axis kinematics with Y/A workpiece table	111

2.31 KIN_TYP_63 – 5-axis kinematics with X/Y/B workpiece table	115
2.32 KIN_TYP_64 – 6-axis kinematics with C/A/C workpiece table.....	119
2.33 KIN_TYP_70 – 5-axis kinematics.....	123
2.34 KIN_TYP_76 – 5-axis kinematics with MTCP oblique tool head.....	127
2.35 KIN_TYP_80 – 5-axis kinematics with A/B workpiece table	130
2.36 KIN_TYP_81 – 5-axis kinematics with B/A workpiece table	134
2.37 KIN_TYP_82 – 6-axis kinematics with C workpiece table.....	139
2.38 KIN_TYP_85 – Lever arm kinematics	142
2.39 KIN_TYP_207- five-axis kinematics with inclined tool	144
2.40 KIN_TYP_209 - Tripod with rotary/swivel workpiece table	146
3 Robot kinematics.....	155
3.1 KIN_TYP_36 – SCARA kinematics.....	155
3.2 KIN_TYP_45 – 6-axis articulated robot kinematics.....	160
3.2.1 Moved workpiece.....	165
3.2.2 Flange coordinate system.....	168
4 Classification of transformations	172
4.1 Transformation type	172
4.2 Kinematic type.....	175
4.3 Application.....	178
4.4 Tube machining transformations.....	181
5 Definition of terms	182
6 Appendix	183
6.1 Suggestions, corrections and the latest documentation.....	183

List of figures

Fig. 1:	Coordinate systems and motion directions.....	12
Fig. 2:	Kinematics of the single-column bed machine	14
Fig. 3:	Offsets in tool head.....	15
Fig. 4:	Offsets on workpiece holder	15
Fig. 5:	Kinematics of the 5-axis milling machine with rotary/swivel head	17
Fig. 6:	Sizes L, TX, HD1, HD2 and HD3 of the rotary/swivel head.....	18
Fig. 7:	Front view	18
Fig. 8:	Kinematic structure of the 4-axis milling machine with double spindle head.....	19
Fig. 9:	Side view and front view of the double spindle head (upper spindle).....	20
Fig. 10:	Kinematic structure of the 4-axis milling machine with double spindle head.....	21
Fig. 11:	Side view and front view of the double spindle head (bottom spindle).....	22
Fig. 12:	4-axis kinematics with crosshead for 4 tools	23
Fig. 13:	Tool crosshead	24
Fig. 14:	Tool crosshead with zero positions of the tools 1 to 4	25
Fig. 15:	4-axis kinematics with underfloor milling tool	27
Fig. 16:	Tool head for underfloor milling (zero position where HD4 = 0)	28
Fig. 17:	5-axis kinematics (boring and milling tool with manual auxiliary axis A)	29
Fig. 18:	5-axis boring and milling tool (zero position where HD3=0, HD4=0, CM=0)	30
Fig. 19:	5-axis kinematics (sawing tool with manual auxiliary axis A)	32
Fig. 20:	5-axis sawing tool (zero position where HD5 = 0, HD4 = +90, CM=0)	33
Fig. 21:	5-axis kinematics (boring and milling unit).....	35
Fig. 22:	5-axis boring and milling tool (zero position where HD3 = 0, AM=0, HD4=0, CM=0).....	36
Fig. 23:	5-axis kinematics (sawing tool).....	38
Fig. 24:	5-axis sawing tool (zero position where HD5 =0, CM=0, HD4 =0, AM =90).....	39
Fig. 25:	Axis configuration of the 5-axis machine with oblique angle head	41
Fig. 26:	Angles and lengths at the oblique angle head.....	42
Fig. 27:	Tripod kinematics	45
Fig. 28:	Vector representation of strut kinematics	46
Fig. 29:	Offset dimensions of strut kinematics	47
Fig. 30:	Axis configuration of 5-axis machine	49
Fig. 31:	Parameters of rotary/swivel head	50
Fig. 32:	5-axis kinematics (drilling and milling tool with manual auxiliary axes C and A)	52
Fig. 33:	Drilling and milling tool (zero position where HD3 = 0, HD4 = 0)	53
Fig. 34:	5-axis kinematics (sawing tool with manual auxiliary axes C and A).....	55
Fig. 35:	Sawing tool (zero position where HD5 = 0, HD4 = +90).....	56
Fig. 36:	Tripod kinematics	58
Fig. 37:	Kinematic offsets	59
Fig. 38:	Lambda kinematics.....	61
Fig. 39:	Lambda kinematics, variant 1	62
Fig. 40:	Lambda kinematics, variant 2	62
Fig. 41:	Axis configuration of 5-axis machine	64
Fig. 42:	Kinematic offsets	65
Fig. 43:	Axis configuration of 5-axis machine	66

Fig. 44:	Kinematic offsets	67
Fig. 45:	5-axis kinematics (plasma/laser head)	69
Fig. 46:	5-axis plasma/laser head (zero position where HD3 = 0, AM=0, HD4=0, CM=0)	70
Fig. 47:	When the head is in oblique position, the torch tip is at a constant height above the workpiece, i.e. where A!= 0 is the effective length L2 > L1.	71
Fig. 48:	5-axis kinematics	73
Fig. 49:	Tool head (zero position where HD3 = 0, A=0, HD4=0, C=0)	74
Fig. 50:	4-axis kinematics (drilling and milling unit)	76
Fig. 51:	Offsets of 4-axis kinematics.....	77
Fig. 52:	5-axis oblique tool head.....	78
Fig. 53:	Oblique tool head axis in zero position, HD7=0.....	79
Fig. 54:	Oblique tool head with 180 degree head offset in zero position, HD7=1	80
Fig. 55:	4-axis C axis kinematics	81
Fig. 56:	Origin offsets in rotary C axis workpiece holder	82
Fig. 57:	Overhead Flexpicker kinematics	83
Fig. 58:	Offset dimensions of Flexpicker kinematics	84
Fig. 59:	Kinematics of 5-axis milling machine.....	86
Fig. 60:	Definition of offset parameters.....	87
Fig. 61:	Definition of offset parameters in front view	87
Fig. 62:	Kinematics of 5-axis machine with BC workpiece table	88
Fig. 63:	Offsets in Y/Z view.....	89
Fig. 64:	Offsets in X/Z view.....	90
Fig. 65:	Kinematics of 5-axis machine with AC workpiece table	92
Fig. 66:	Offsets in X/Z view.....	93
Fig. 67:	Offsets in Y/Z view.....	94
Fig. 68:	Cardanic kinematic with CA head.....	96
Fig. 69:	Offsets of cardanic CA 5-axis head	97
Fig. 70:	Cardanic head with ideal head geometry (intersection of C-A axis is located in tool axis).....	99
Fig. 71:	Cardanic head with offset C axis (C axis not located in tool axis).....	100
Fig. 72:	Cardanic head with saw tool and TCP at saw tooth	102
Fig. 73:	Angle representations – saw tool and TCP	103
Fig. 74:	Cardanic head with underfloor milling tool.....	105
Fig. 75:	Cardanic head with underfloor milling tool with offset C.....	106
Fig. 76:	Cardanic kinematic with CB head	107
Fig. 77:	Offsets of cardanic CB 5-axis head	108
Fig. 78:	Cardanic head with ideal head geometry (intersection of C and B axis located in tool axis)	110
Fig. 79:	Axis configuration of 5-axis machine	111
Fig. 80:	Offsets of tool head	112
Fig. 81:	Offsets of workpiece holder	112
Fig. 82:	Ideal and real z zero position.....	113
Fig. 83:	Axis configuration of 5-axis machine	115
Fig. 84:	Offsets of tool head	116
Fig. 85:	Offsets of workpiece holder	116
Fig. 86:	Ideal and real Z zero position	117
Fig. 87:	Kinematic structure of 6-axis machine with CAC workpiece table.....	119

Fig. 88:	Parameters of CAC workpiece table in X/Z representation	120
Fig. 89:	Parameters of CAC workpiece table in Y/Z representation	121
Fig. 90:	Axis configuration of 5-axis machine	123
Fig. 91:	Tool head parameters	124
Fig. 92:	Angular offset of rotary/swivel head	125
Fig. 93:	Axis configuration of 5-axis machine	127
Fig. 94:	Tool head parameters	128
Fig. 95:	Angle offset of bevel head with regard to mounting	129
Fig. 96:	Axis configuration of 5-axis machine	130
Fig. 97:	Offsets of tool head	131
Fig. 98:	Offsets of workpiece holder	131
Fig. 99:	Ideal and real Z zero position	132
Fig. 100:	Axis configuration of 5-axis machine	134
Fig. 101:	Offsets of tool head	135
Fig. 102:	Offsets of workpiece holder	136
Fig. 103:	Ideal and real Z zero position	137
Fig. 104:	Axis configuration of 6-axis machine	139
Fig. 105:	Tool head parameters	140
Fig. 106:	Offsets on workpiece holder	140
Fig. 107:	Position of the coordinate system.....	142
Fig. 108:	Axis configuration for left-handed beam	143
Fig. 109:	Axis configuration for right-handed beam.....	143
Fig. 110:	5-axis kinematic (metal cutting tool with manual auxiliary axis A)	144
Fig. 111:	5-Axis metal cutting tool with 90 degree angle setting	145
Fig. 112:	Cutting height	146
Fig. 113:	Trip kinematics with CA rotary/swivel table	148
Fig. 114:	Offset dimensions of strut kinematics.....	149
Fig. 115:	Angle offset HD30 of the CA rotary/swivel table.....	150
Fig. 116:	CA rotary/swivel table offsets	151
Fig. 117:	Angle offset HD30 of the CB rotary/swivel table.....	152
Fig. 118:	CB rotary/swivel table offsets	153
Fig. 119:	SCARA kinematics	156
Fig. 120:	SCARA kinematics in zero position (C1=0, C2=0, C3=0, HD8=0)	157
Fig. 121:	6-axis articulated robot	160
Fig. 122:	HD offset data in side view	161
Fig. 123:	Zero position for HD145 and HD15	161
Fig. 124:	Articulated robot, top view	162
Fig. 125:	Tool offsets of the fixed position tool	166
Fig. 126:	Procedure for defining the orientation with rotation sequence Z Y“ X“	166
Fig. 127:	The orientation of the robot flange and the world	167
Fig. 128:	Offset from the flange to the black dot in the workpiece.....	167

1 Introduction

Mandatory note on references to other documents

For the sake of clarity, links to other documents and parameters are abbreviated, e.g. [PROG] for the Programming Manual or P-AXIS-00001 for an axis parameter.

For technical reasons, these links only function in the Online Help (HTML5, CHM) but not in pdf files since pdfs do not support cross-linking.

Transformation types

The transformations listed below are 3, 4, 5 and 6-axis kinematic transformations. They are only required on machines with

- non-Cartesian axis arrangement or
- with rotary axes

to adjust orientation if programming takes place in the WCS (Workpiece Coordinate System). In general, this case results in non-linear equations that reflect the correlation between workpiece coordinates and machine coordinates.

Workpiece axes are axes that are located on the workpiece side in the kinematic chain. Tool axes are axes which are on the tool side.

A distinction is made between the following transformation types

- **RTCP Transformation (Rotation Tool Centre Point):** In this case, spatial positions are programmed in the WCS. The tool direction is set by programming the rotary machine axes (e.g. B and C are independent of the machine). Auxiliary functions permit automatic tool orientation to rotated coordinate systems in space.

Example of NC program line: N10 X100 Y20 Z30 B0 C0

- **Complete transformation:** In this case, spatial curves and the tool machining orientation are programmed by position and orientation (point-vector sequences) and are always independent of the machine type with 6 coordinates (*).

Example of NC program line: N10 X100 Y20 Z30 A0 B0 C1

(*) Depending on the degrees of freedom of a kinematic feature, only the position may be programmed by 3 coordinates (e. g. Tripod).



Notice

Transformations are additional options and subject to the purchase of a license.

Attention

When kinematic transformation is active, axis-specific tool offsets in `ax_versatz[<ax_index>]` (P-TOOL-00006) are only taken into consideration if axes are not influenced by the transformation function. Depending on the transformation type, they typically refer to all axes with index > 2 when RTCP is used.

The axis-specific tool offsets of the first three axes (index 0, 1, 2) are **not** taken into account when transformation is active. If tool offsets should also be effective for these axes when transformation is active, enter the values in the kinematic offsets of the tool (P-TOOL-00009) mentioned above.

The necessary kinematic-specific axis configuration setting must be entered in the channel parameters.

It is essential to use the correct axis index sequence for the selected transformation.

1.1 Specification of kinematics ID and offset data

Kinematics ID

The ID required to use a specific kinematic feature results from the specified kinematic type as follows:

KIN_TYP_1 1

KIN_TYP_2 2

etc.

Attention



As of Version V3.00.3012.00, the structures *kin_step[i].trafo[j].** or *trafo[j].** **replace** the definition of kinematic data programmed with *kinematik[i].**.

The previous structure *kinematik[i].** is no longer supported.

Example



Specification of kinematics ID and offset parameters

In CNC versions < V3.00, the kinematics ID and offset parameters (HD offsets) of a kinematic are specified as follows:

```
kinematik[9].param[0]      500000
kinematik[9].param[1]      0
kinematik[9].param[2]      0
kinematik[9].param[3]      0
```

with every additional transformation, e.g. Kinematic ID 60

```
kinematik[60].param[0]      200000
kinematik[60].param[1]      0
```

As of V3.00, the kinematic must be specified as follows:

```
trafo[0].id                9
trafo[0].param[0]           5000000
trafo[0].param[1]           0
trafo[0].param[2]           0
trafo[0].param[3]           0
```

with every additional transformation, e.g. Kinematic ID 60

```
trafo[1].id                60
trafo[1].param[0]           2000000
trafo[1].param[1]           0
```

The identical specification of the kinematic with ID 9 to denote multi-step transformations looks like this:

```
kin_step[0].trafo[0].id      9
kin_step[0].trafo[0].param[0] 5000000
```

```
kin_step[0].trafo[0].param[1]      0
kin_step[0].trafo[0].param[2]      0
kin_step[0].trafo[0].param[3]      0
```

The kinematic for a second transformation step is specified as follows:

```
kin_step[1].trafo[0].id          20
kin_step[1].trafo[0].param[0]    3000000
```



Notice

The HDI offsets of a kinematic correspond with the kinematic offsets in the channel parameters, either kinematik[ID].param[i-1] or trafo[idx].param[i-1].

Alternatively, these offsets can be entered in the corresponding value of the tool parameters (P-TOOL-00009).

The units of the offset parameters are 10 E-4 mm for translatory offsets and 10 E-4° for rotary offsets.

1.2

Rotary axes and direction of rotation

The figure below shows the positive rotation directions of rotary axes. The base is a right-handed Cartesian coordinate system.

Rotation is referred to as positive if it is counter-clockwise when viewed in the direction of the arrowhead of the coordinate system axis. If the rotary axis rotates around the X axis, it is referred to as the "A axis"; when it rotates around the Y axis, it is referred to as the "B axis" and so on. If not separately stated, these rotation directions are used in kinematic transformations involving rotary axes.

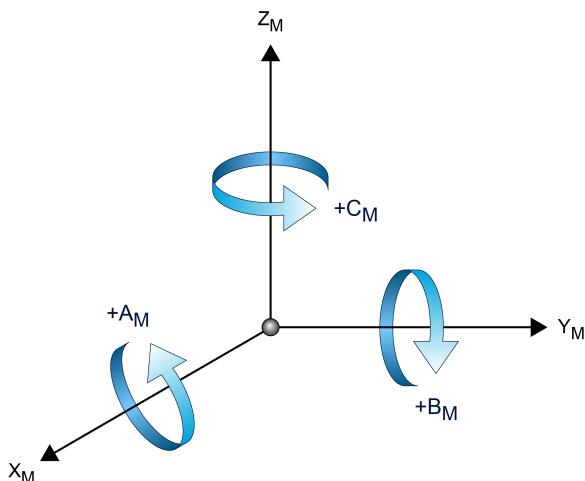


Fig. 1: Coordinate systems and motion directions

1.3

Linear axes and motion direction

The motion directions of linear axes must be adjusted so that the relative motion between tool and workpiece is the same as in 2.5 D mode. This means that when linear axes move the workpiece, the motion direction is opposite to the directions of the exs of the workpiece coordinate system.

1.4

Further documentation concerning transformations

The function description [FCT-M5] describes transformations for tube machining.

Transformation ID	Description
15	Round tube, lateral surface (3/4-axis)
78	Round tube, projection (3/4-axis)
79	Polygonal tube, profiled tube (3/4-axis)
90	Round tube, lateral surface (5/6-axis)
93	Polygonal tube, profiled tube (5/6-axis)

The function description [FCT-C27] describes the Universal Kinematics using ID 91.

The function description [FCT-C35] contains the functionality of the couple kinematic with ID 210.

The integration of user-defined transformations is described in the description of the transformation interface [McCOM-TRAFO].

2 Kinematic transformations

2.1 KIN_TYP_1 – 5-axis kinematics/single-column bed machine

Kinematic structure

The kinematic structure of this machine consists of 2 translatory axes and 1 rotary axis in the workpiece as well as 1 translatory axis and 1 rotary axis in the tool.

Axis configuration in NC channel		
Axis identifier	X, Y, Z, B, C	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	Z, B	X, Y, C

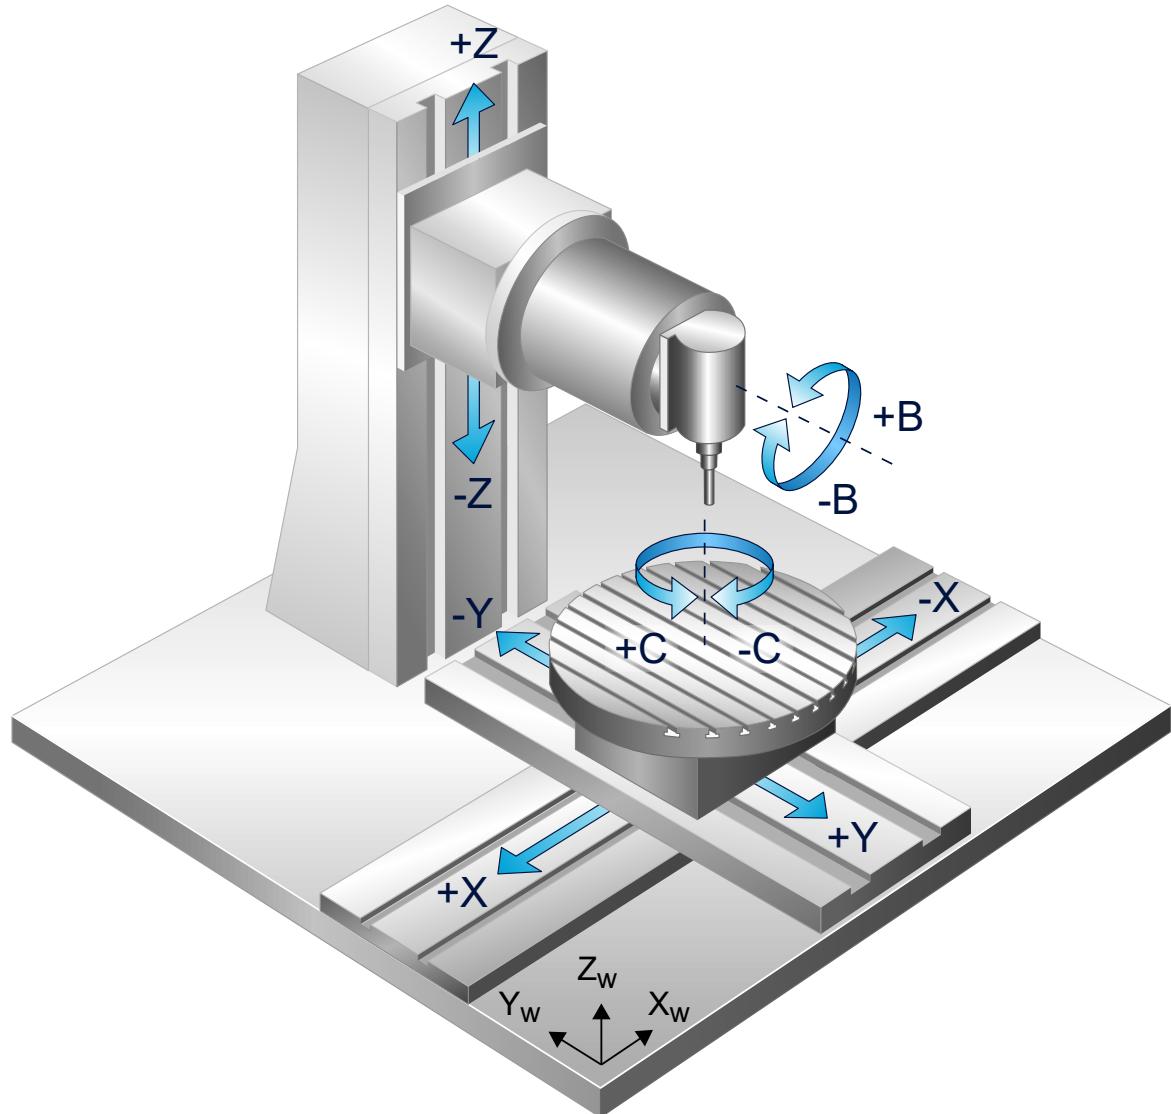


Fig. 2: Kinematics of the single-column bed machine

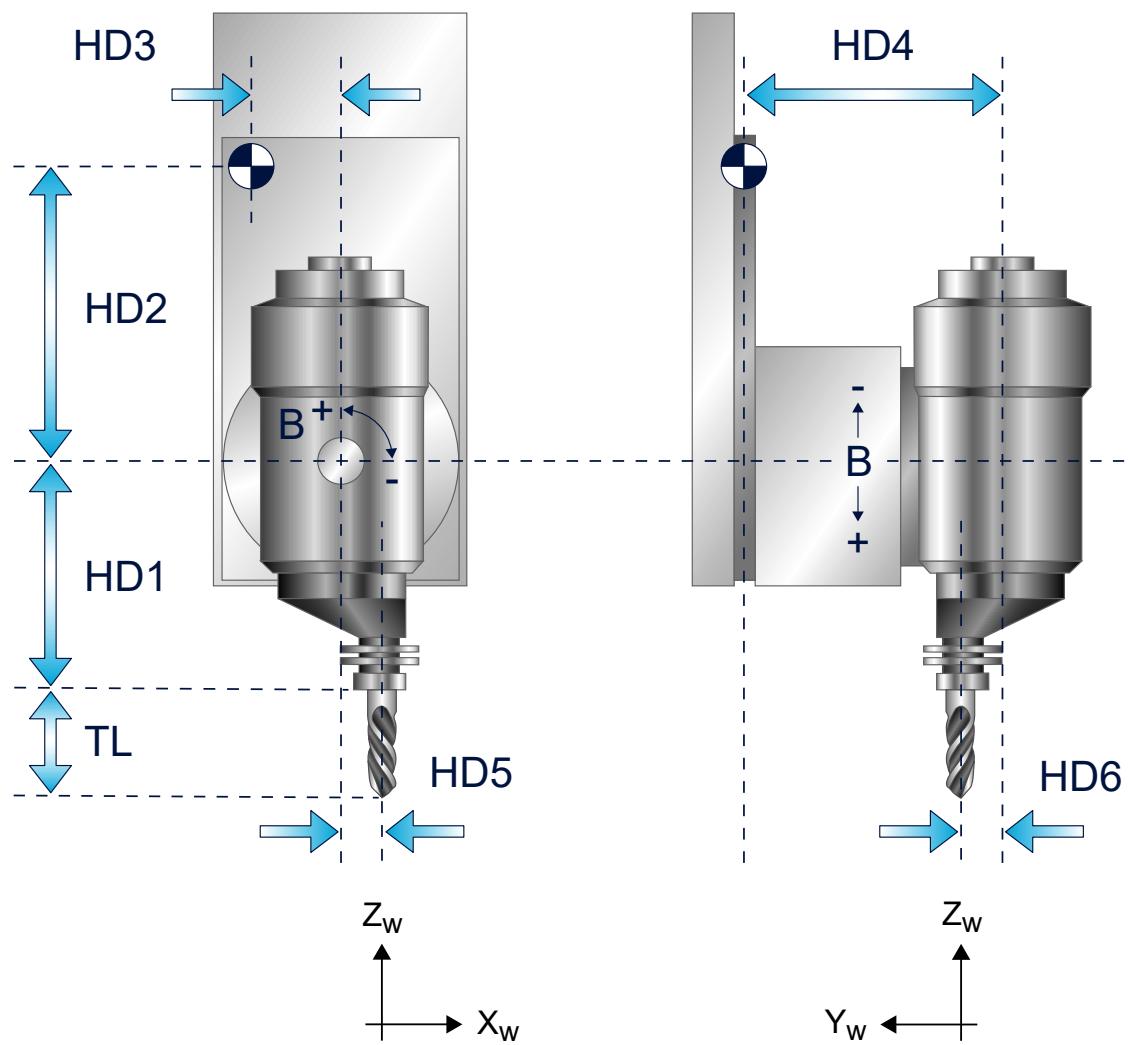


Fig. 3: Offsets in tool head

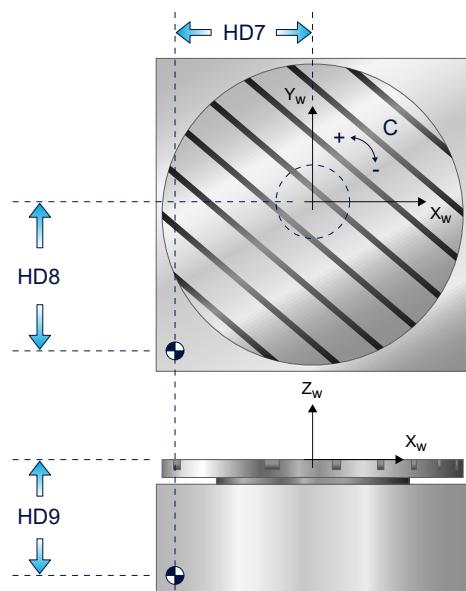


Fig. 4: Offsets on workpiece holder

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset tool holding device to rotation point B axis	10 E-4 mm
HD2	1	Z offset rotation point B-axis to reference point tool slide	10 E-4 mm
HD3	2	X offset reference point tool slide to rotation point B axis	10 E-4 mm
HD4	3	Y offset reference point tool slide to rotation point B axis	10 E-4 mm
HD5	4	X offset rotation point B axis to tool holding device	10 E-4 mm
HD6	5	Y offset rotation point B axis to tool holding device	10 E-4 mm
HD7	6	X offset machine origin MNP to rotary axis C	10 E-4 mm
HD8	7	Y offset machine origin MNP to rotary axis C	10 E-4 mm
HD9	8	Z offset machine origin MNP to rotary axis C	10 E-4 mm
HD10	9	Rotary offset rotary axis B	10 E-4 mm
HD11	10	Rotary offset rotary axis C	10 E-4 mm
HD13	12	Rotation direction B axis (*), 0: negative, 1positive	[-]
HD14	13	Rotation direction C axis, 0 positive, 1 negative	[-]

(*) The rotation direction of the B axis is mathematically negative.

2.2

KIN_TYP_2 – 5-axis kinematics with rotary/swivel head

Kinematic structure

The kinematic structure of this machine consists of 3 translatory axes and 2 rotary axes in the tool (rotary/swivel head).

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, A, B	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
NC axes	Tool axes	Workpiece axes
X, Y, Z, A, B	-	-

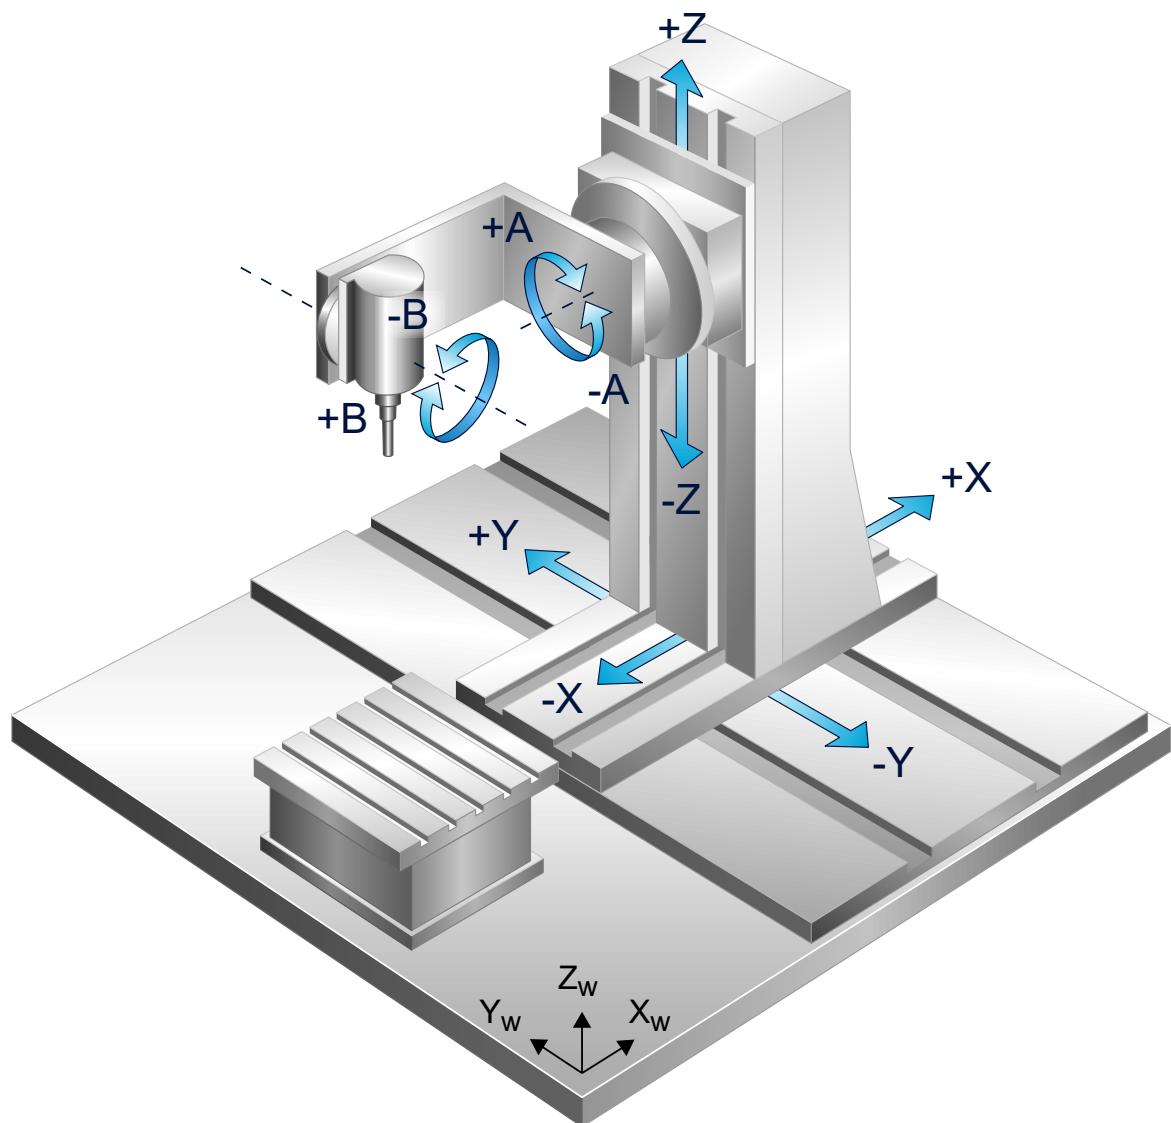


Fig. 5: Kinematics of the 5-axis milling machine with rotary/swivel head

The geometry constants HD1, HD2 and HD3 are required to describe the rotary/swivel head of the machine in the figure above. The figure below shows their application. The rotary/swivel head is shown in top view.

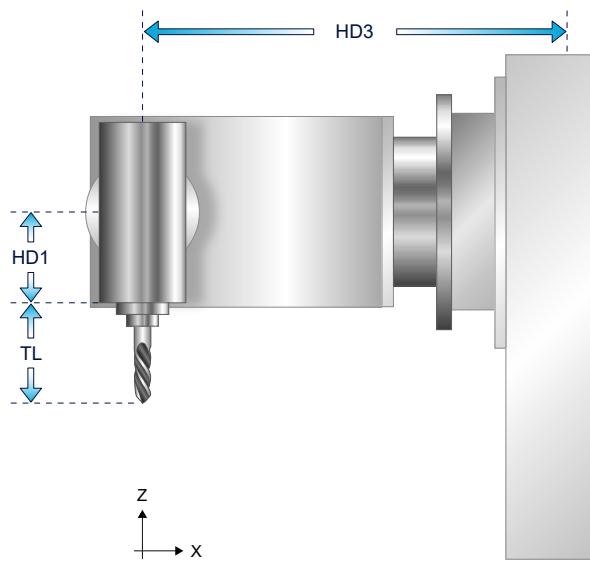


Fig. 6: Sizes L, TX, HD1, HD2 and HD3 of the rotary/swivel head

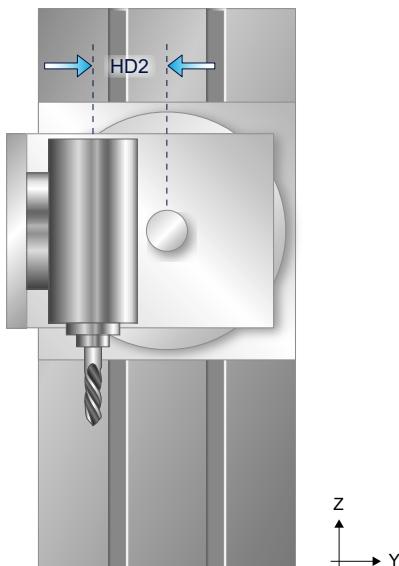


Fig. 7: Front view

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Offset tool holding device to rotation point B axis	10 E-4 mm
HD2	1	Y offset from B axis to A axis	10 E-4 mm
HD3	2	X offset from B axis to A axis	10 E-4 mm

2.3 KIN_TYP_3 - four-axis kinematics with double spindle head (top spindle)

Kinematic structure

The kinematic structure of the machine consists of 3 translatory axes and 1 rotary axis in the tool (double spindle head).

The KIN_TYP_4 selects the bottom spindle.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, B	
Axis index	0, 1, 2, 3	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, B	-

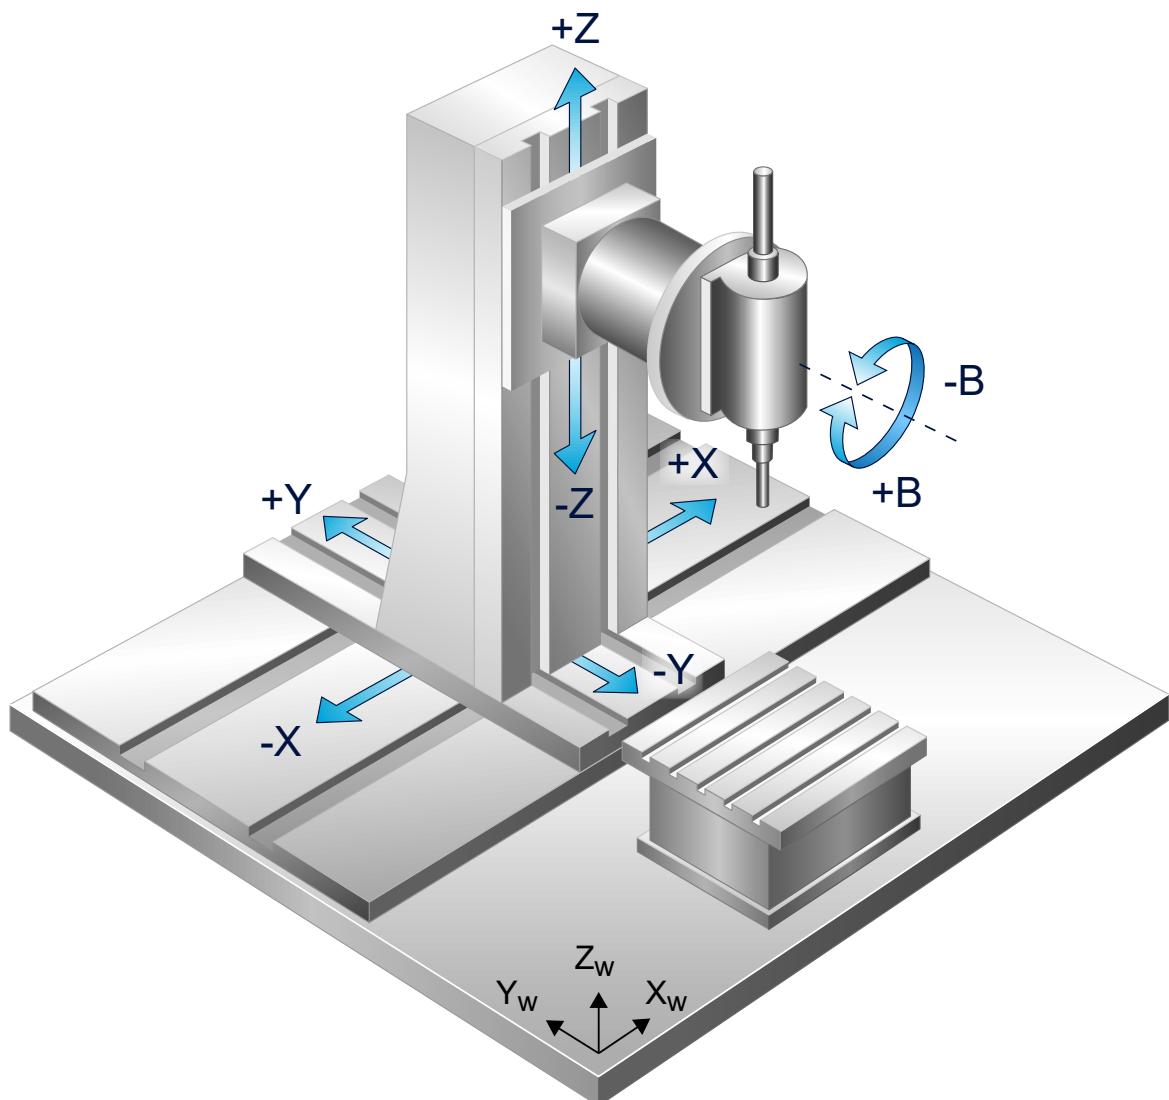


Fig. 8: Kinematic structure of the 4-axis milling machine with double spindle head

The top figure shows the structure of the milling head for the zero position of the B axis. It features 2 spindles (referred to in this document as *top* and *bottom* spindle irrespective of the current position of the B axis) so that 2 tools can be clamped rotated by 180° relative to each other.

A command in the NC program allows selection of the two spindles or which of the 2 tools is currently active.

If the top spindle is active, the programmed value for the B axis must be changed as follows:

$$b_M = b_M + 180^\circ$$

Thus, changing spindles means rotating the B axis through an angle of 180° and translatory shifts of all 3 linear axes. This is due to the geometry constants when RTCP is active.

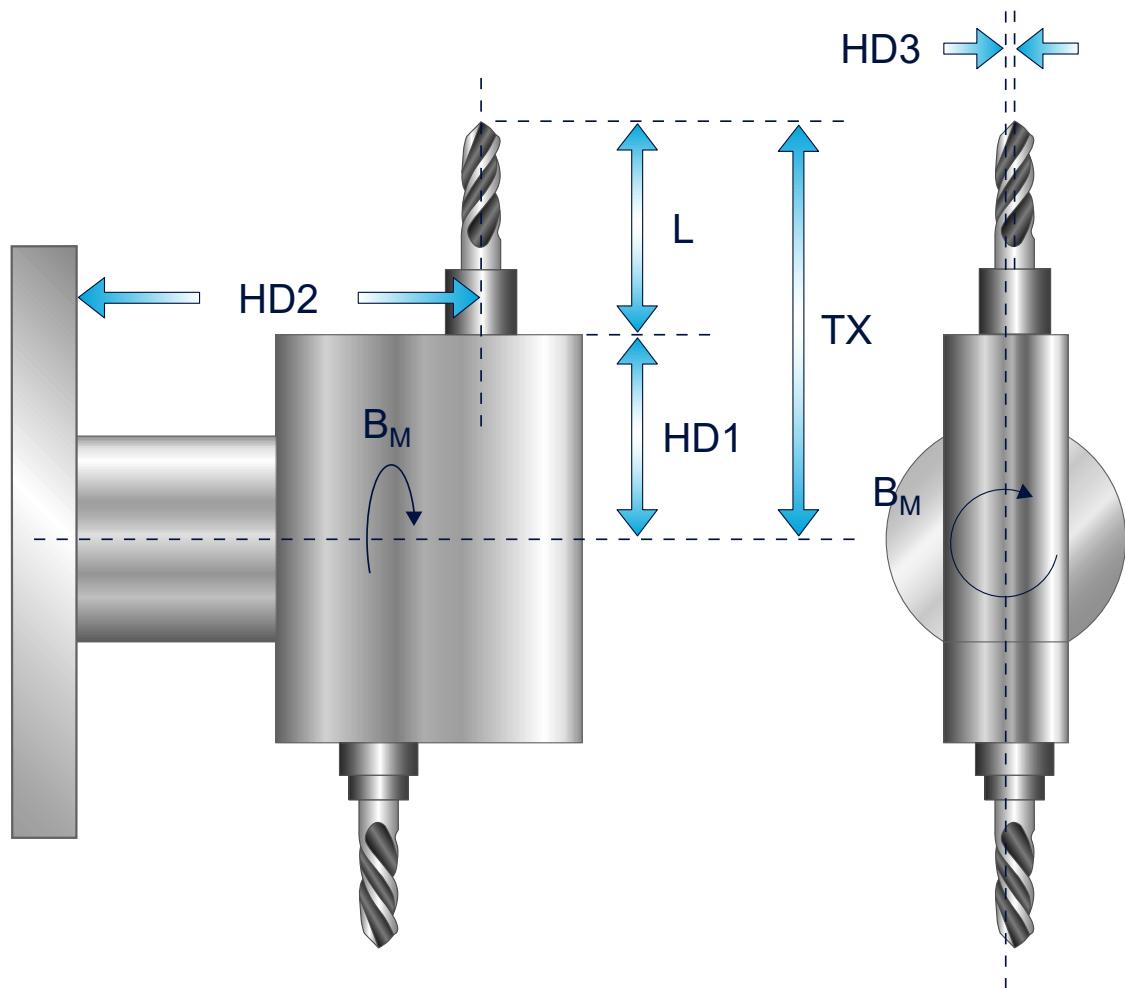


Fig. 9: Side view and front view of the double spindle head (upper spindle)

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Offset tool holding device to rotation point B axis	10 E-4 mm
HD2	1	Y offset tool head	10 E-4 mm
HD3	2	X offset from tool holding device to B axis	10 E-4 mm

2.4 KIN_TYP_4 - four-axis kinematics with double spindle head (top spindle)

Kinematic structure

The kinematic structure of the machine consists of 3 translatory axes and 1 rotary axis in the tool (double spindle head).

The KIN_TYP_3 selects the top spindle.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, B	
Axis index	0, 1, 2, 3	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, B	-

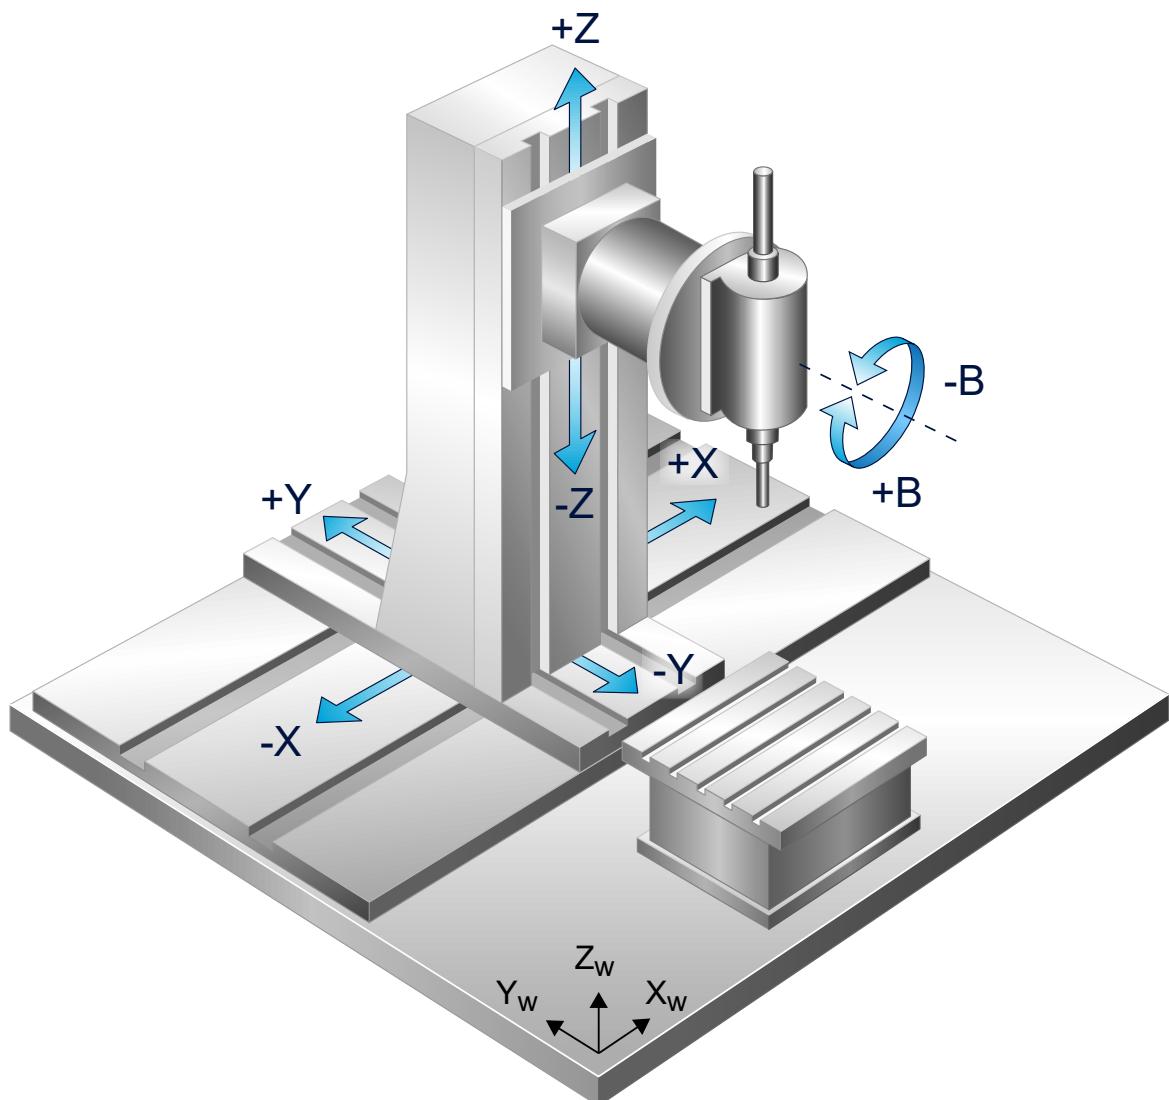


Fig. 10: Kinematic structure of the 4-axis milling machine with double spindle head

The top figure shows the structure of the milling head for the zero position of the B axis. It features 2 spindles (referred to in this document as *top* and *bottom* spindle irrespective of the current position of the B axis) so that 2 tools can be clamped rotated by 180° relative to each other.

A command in the NC program allows selection of the two spindles or which of the 2 tools is currently active.

If the top spindle is active, the programmed value for the B axis must be changed as follows:

$$b_M = b_M + 180^\circ$$

Thus, changing spindles means rotating the B axis through an angle of 180° and translatory shifts of all 3 linear axes. This is due to the geometry constants when RTCP is active.

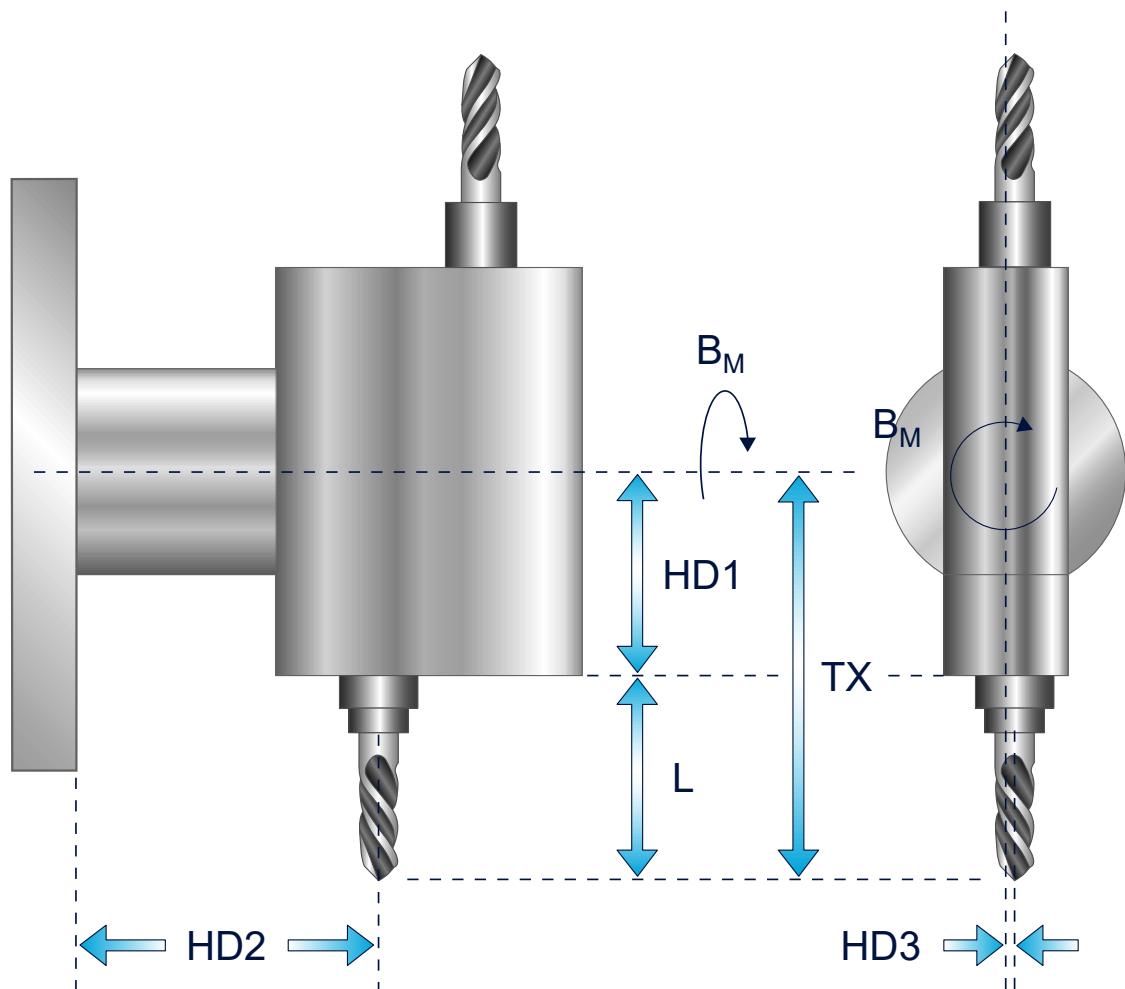


Fig. 11: Side view and front view of the double spindle head (bottom spindle)

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Offset tool holding device to rotation point B axis	10 E-4 mm
HD2	1	Y offset tool head	10 E-4 mm
HD3	2	X offset from tool holding device to B axis	10 E-4 mm

2.5 KIN_TYP_5 – 4-axis kinematics with crosshead for 4 tools

Kinematic structure

The kinematic structure consists of 3 translatory axes and 1 rotary axis in the tool.

Axis configuration in the NC channel	
Axis identifier	X, Y, Z, C
Axis index	0, 1, 2, 3
Kinematic structure	
NC axes	Tool axes Workpiece axes
	X, Y, Z, C -

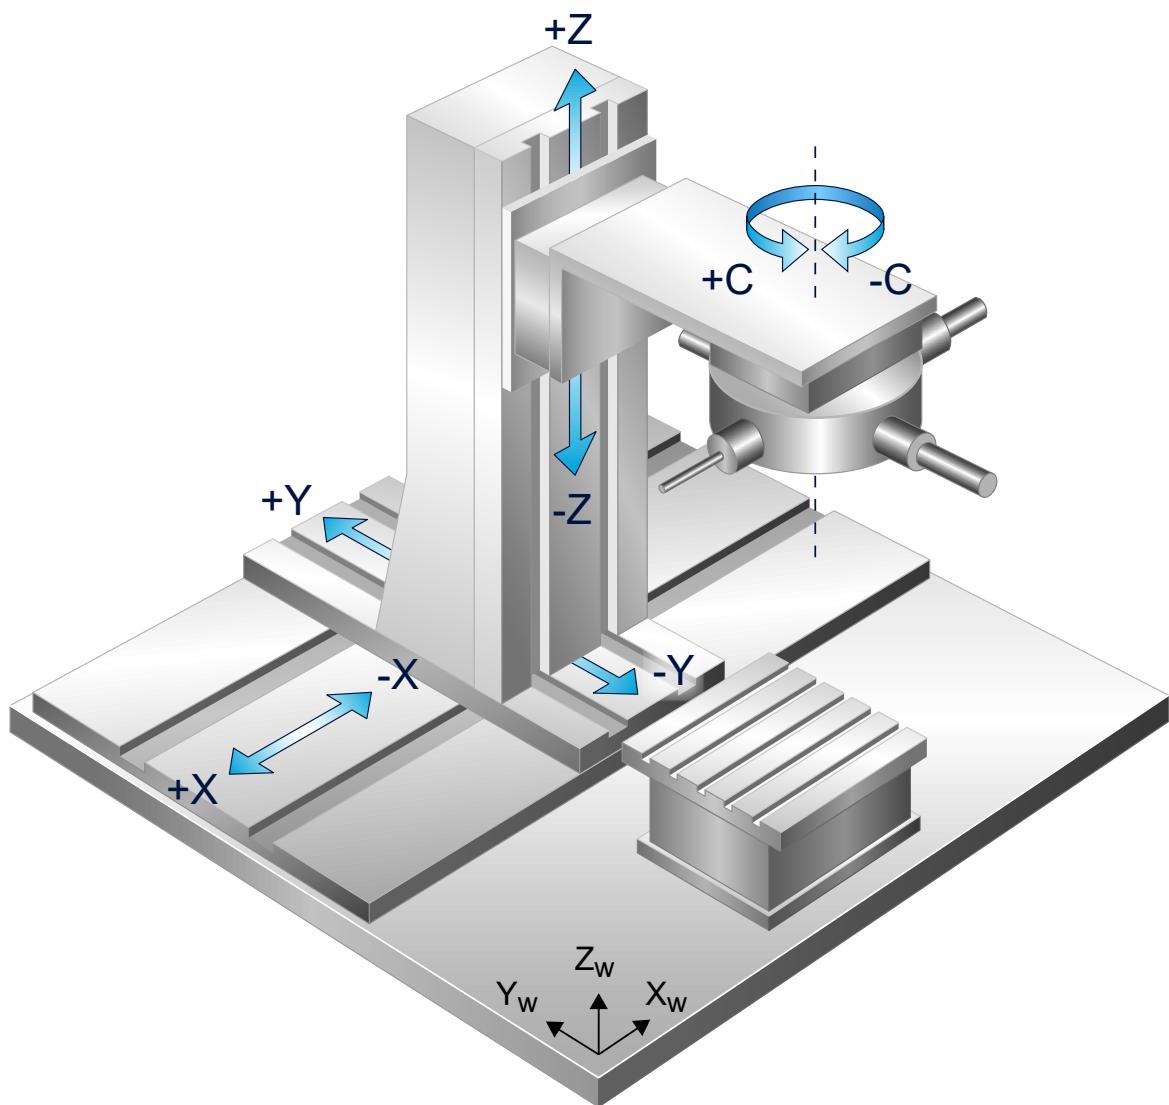


Fig. 12: 4-axis kinematics with crosshead for 4 tools

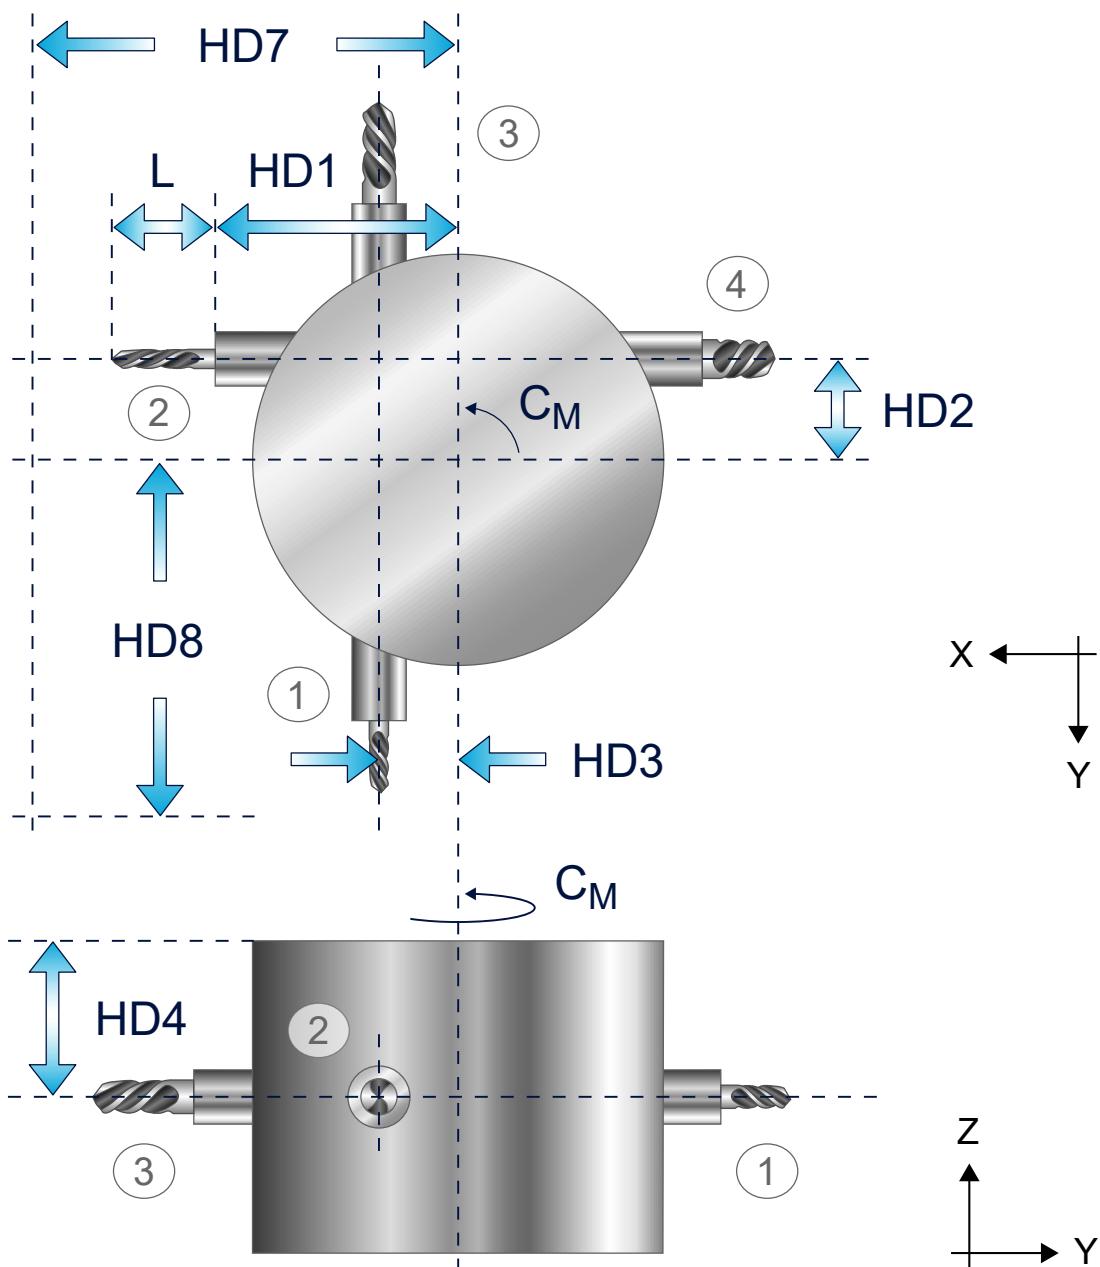


Fig. 13: Tool crosshead

The tool that is currently active is specified by assigning tool offset HD5 to the C axis. HD5 is calculated positively from the zero position of the C axis (Y axis) in the direction of the tool position.

If the 4 tools are arranged at right angles to each other as shown in the figure above, changing spindles results in a rotation of the C axis through 90° or 180° and translatory shifts of the X axis and Y axis. This is due to the geometry constants when RTCP is active.

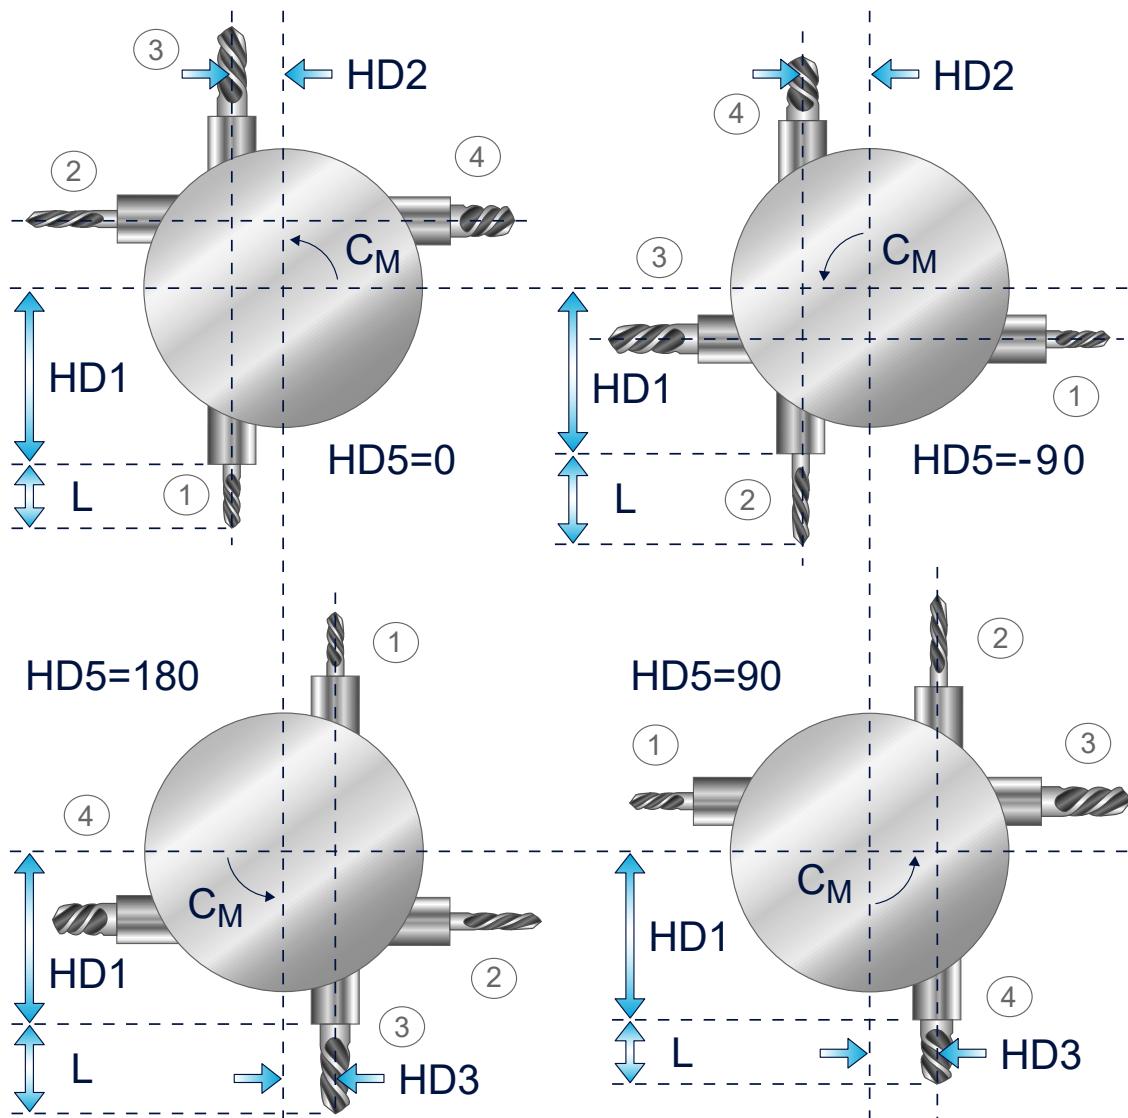


Fig. 14: Tool crosshead with zero positions of the tools 1 to 4



Notice

A data record containing head parameters must be kept for each head tool. The related tool head data record is used to select one of the tools 1 to 4.

To measure the head offsets of the individual tools, the related tool is rotated and brought to zero position of tool 1 (positive Y direction).

Besides the uniform head parameters HD1, HD4, HD5, head parameter HD2 is used for tools 1 and 2 and head parameter HD3 for tools 3 and 4.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Offset tool holding device to reference point	10 E-4 mm
HD2	1	Offset reference point rotation centre point C axis tool 1 and 2	10 E-4 mm
HD3	2	Offset reference point rotation centre point C axis tool 3 and 4	10 E-4 mm
HD4	3	Z axis offset tool holding device	10 E-4 mm
HD5	4	Rotary angular offset C axis zero position	10 E-4°
HD7	6	Static tool offset in X	10 E-4 mm
HD8	7	Static tool offset in Y	10 E-4 mm

2.6 KIN_TYP_6 – 4-axis kinematics with underfloor milling tool

Kinematic structure

The kinematic structure consists of 3 translatory axes and 1 rotary axis in the tool. A special feature of this kinematic structure is that the tool points in the positive Z direction.

Axis configuration in the NC channel	
Axis identifier	X, Y, Z, C
Axis index	0, 1, 2, 3
Kinematic structure	
	Tool axes
NC axes	X, Y, Z, C
	Workpiece axes

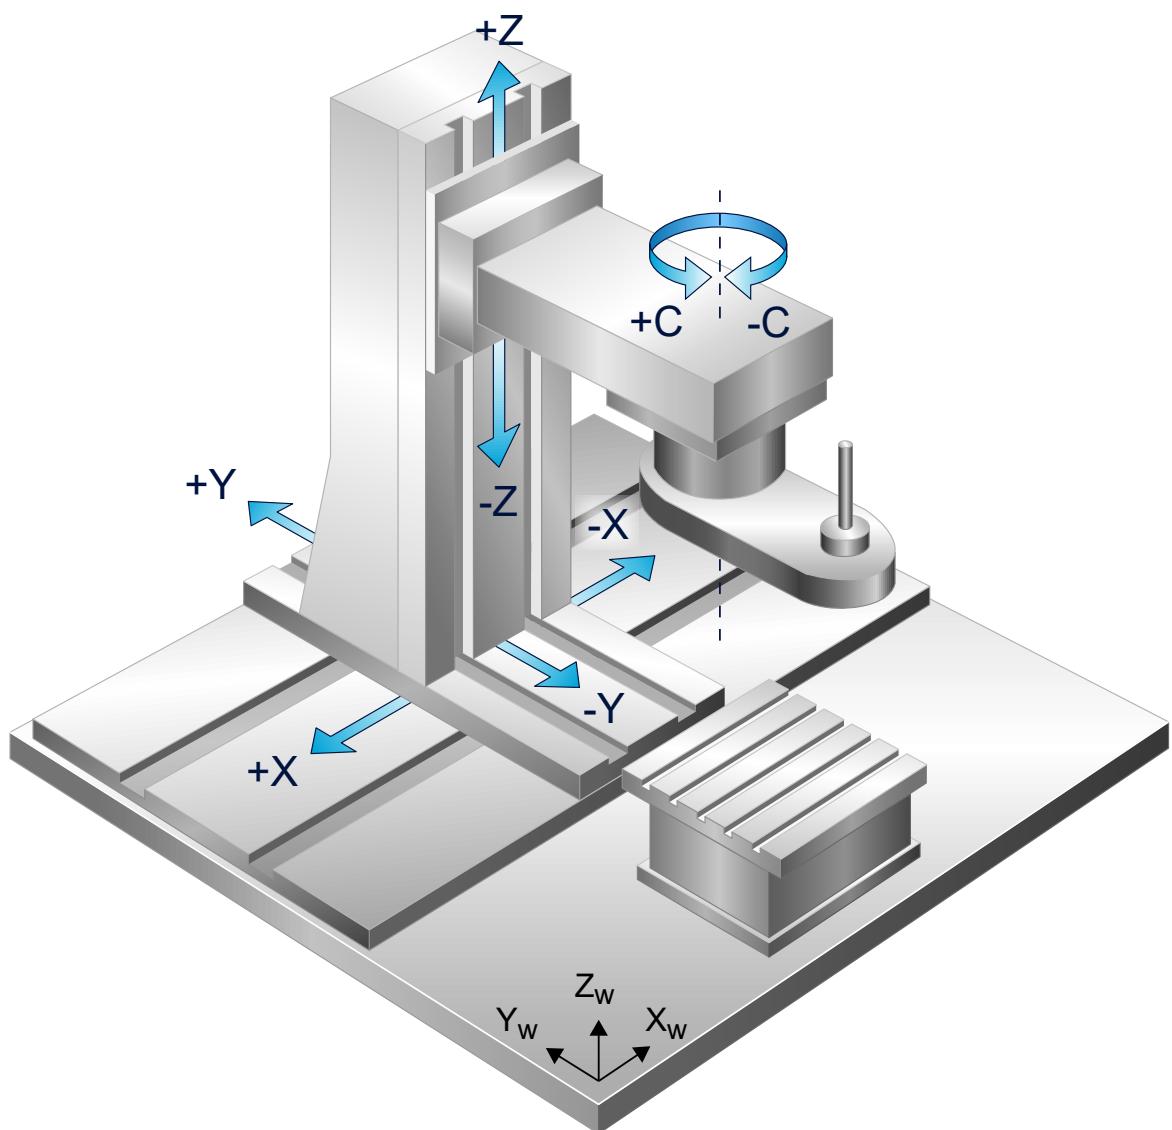


Fig. 15: 4-axis kinematics with underfloor milling tool

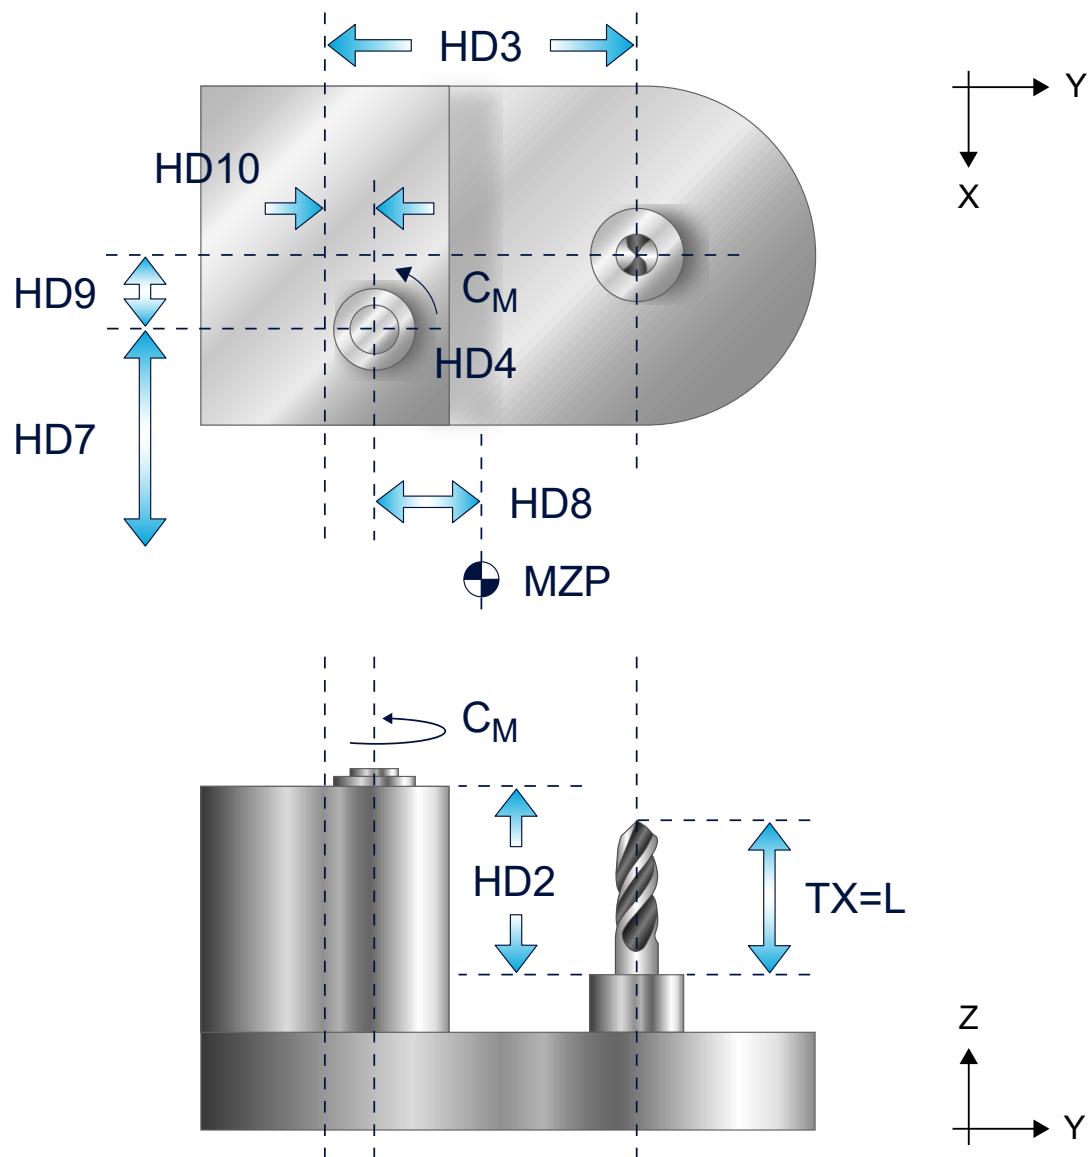


Fig. 16: Tool head for underfloor milling (zero position where HD4 = 0)

The axes are arranged as for a right-handed system. The zero position of the C axis is in the positive direction of the Y axis.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD2	1	Z axis offset tool holding device	10 E-4 mm
HD3	2	Y axis offset rotary axis C axis to tool rotary axis	10 E-4 mm
HD4	3	Rotary angular offset C axis zero position	10 E-4°
HD7	6	Static tool offset in X	10 E-4 mm
HD8	7	Static tool offset in Y	10 E-4 mm
HD9	8	X axis offset rotation point A axis to rotation point C axis	10 E-4 mm
HD10	9	Y axis offset rotation point A axis to rotation point C axis	10 E-4 mm

2.7 KIN_TYP_7 – 5-axis kinematics with man. auxiliary axis (drilling)

Kinematic structure

The kinematic structure consists of 3 translatory NC axes and 1 rotary NC axis in the tool. In addition, a manually adjustable rotary axis is available. This fifth axis cannot be addressed from the NC program.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, C	
Axis index	0, 1, 2, 3	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, A, C	-
Auxiliary axes	A	-

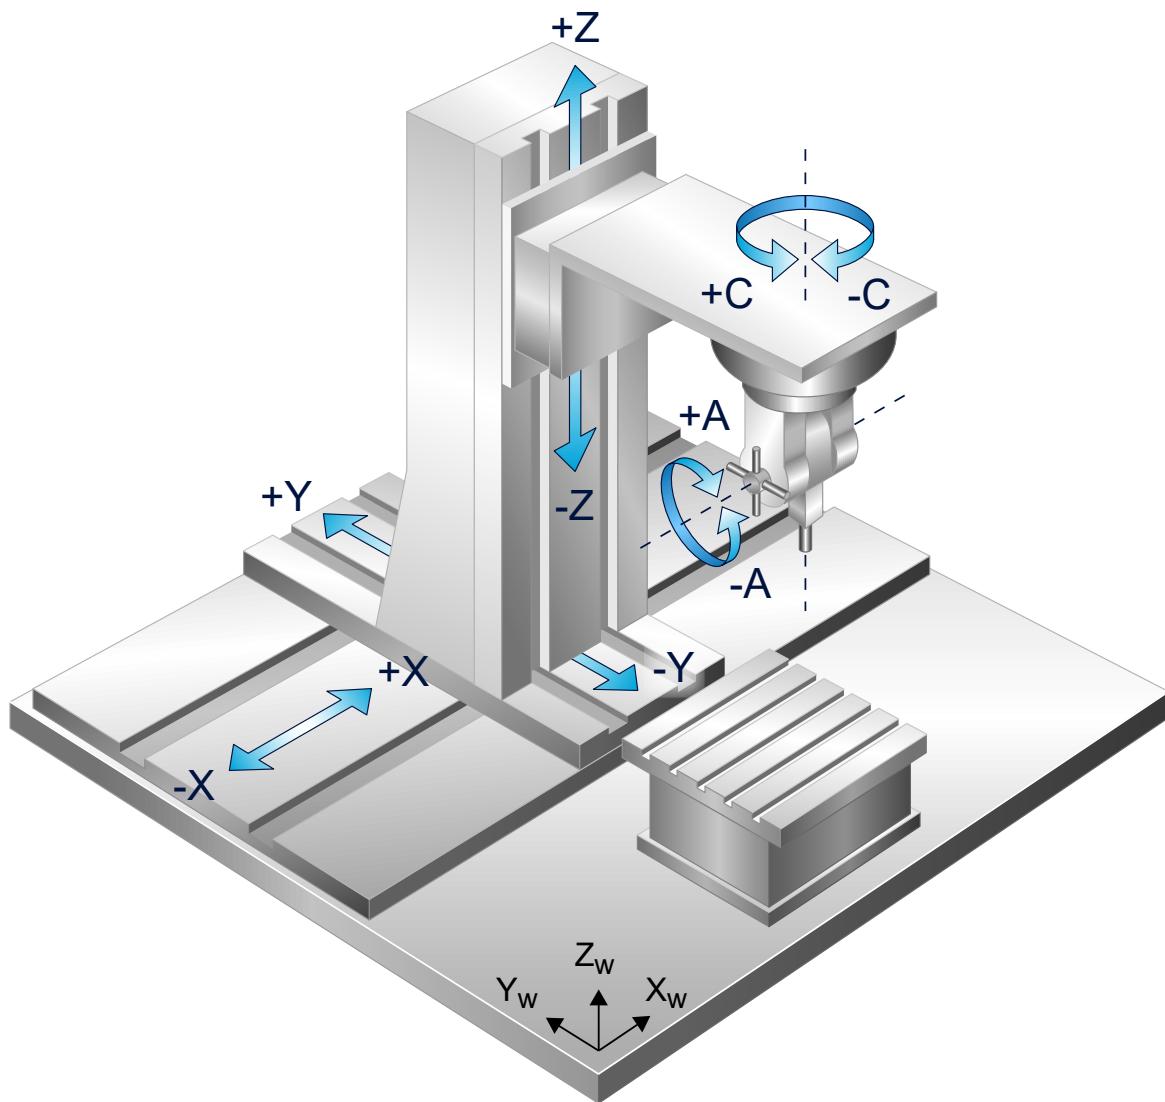


Fig. 17: 5-axis kinematics (boring and milling tool with manual auxiliary axis A)

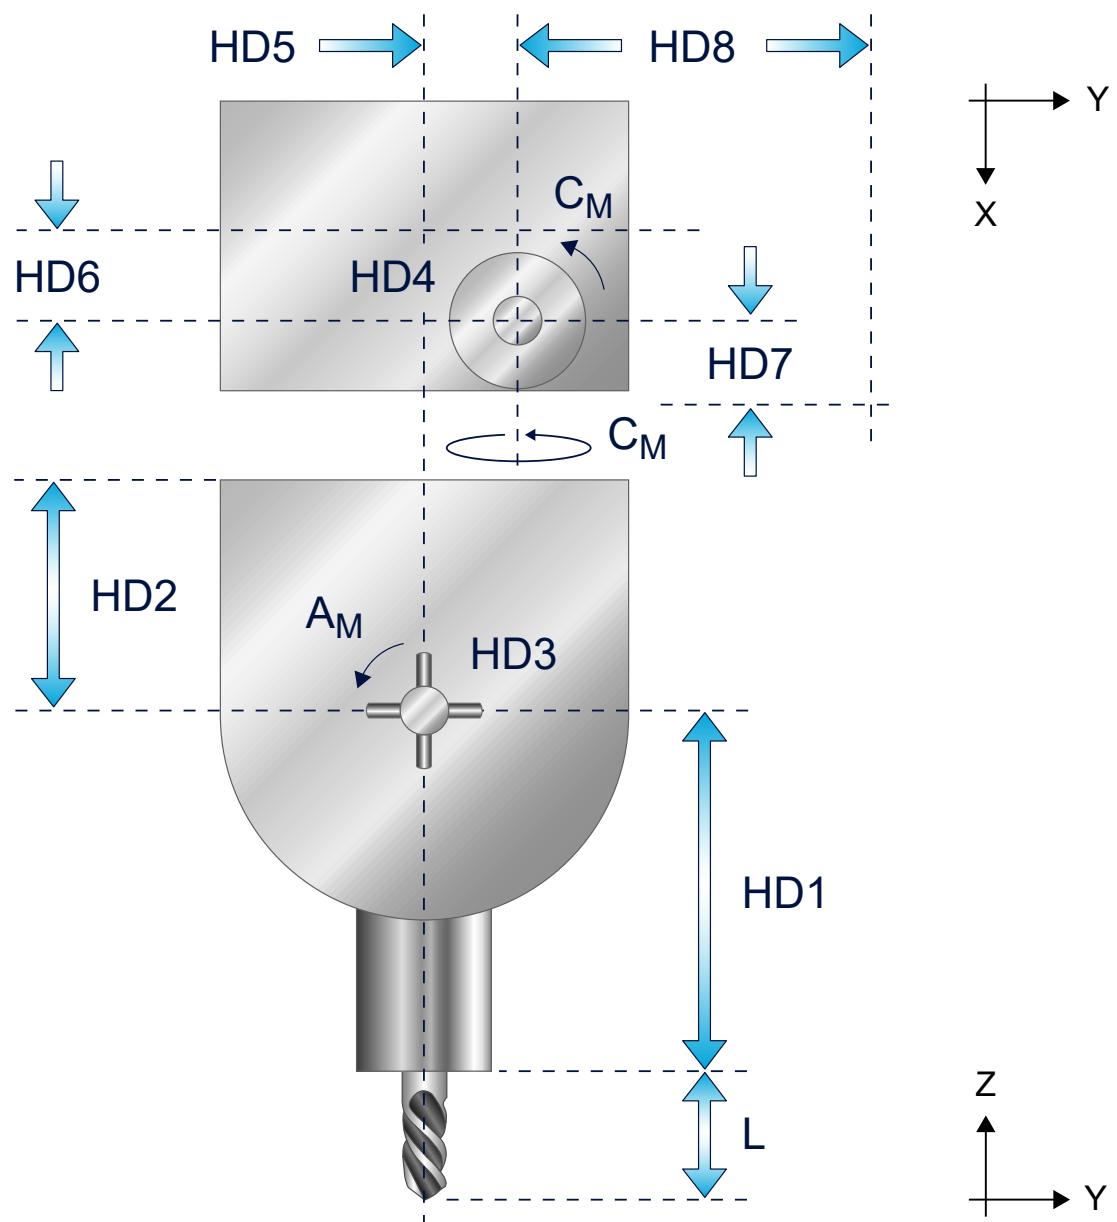


Fig. 18: 5-axis boring and milling tool (zero position where HD3=0, HD4=0, CM=0)

The axes are arranged as for a right-handed system. The zero position of the A axis is in the negative direction of the Z axis.

The automatic orientation setting of the 5-axis tool head with manually adjustable A axis depends on the position of the A axis. If the physical machine axis position and the value in the HD parameter of the A axis do not match, no correct automatic alignment is possible.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z axis offset tool holding device to rotation point of A axis (swivel axis)	10 E-4 mm
HD2	1	Z axis offset rotation point A axis to tool head reference point	10 E-4 mm
HD3	2	Fixed angle setting of rotary A axis (swivel axis)	10 E-4°
HD4	3	Angular offset tool to C axis zero position	10 E-4°
HD5	4	Y axis offset rotation point A axis to rotation point C axis (offset)	10 E-4 mm
HD6	5	X axis offset tool head reference point to rotation point C axis (offset)	10 E-4 mm
HD7	6	Static tool offset in X	10 E-4 mm
HD8	7	Static tool offset in Y	10 E-4 mm

2.8 KIN_TYP_8 – 5-axis kinematics with man. auxiliary axis (sawing)

Kinematic structure

The kinematic structure consists of 3 translatory NC axes and 1 rotary NC axis in the tool. A manually adjustable rotary 5th axis continues to be available. This axis cannot be addressed from the NC program.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, C	
Axis index	0, 1, 2, 3	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, A, C	-
Auxiliary axes	A	-

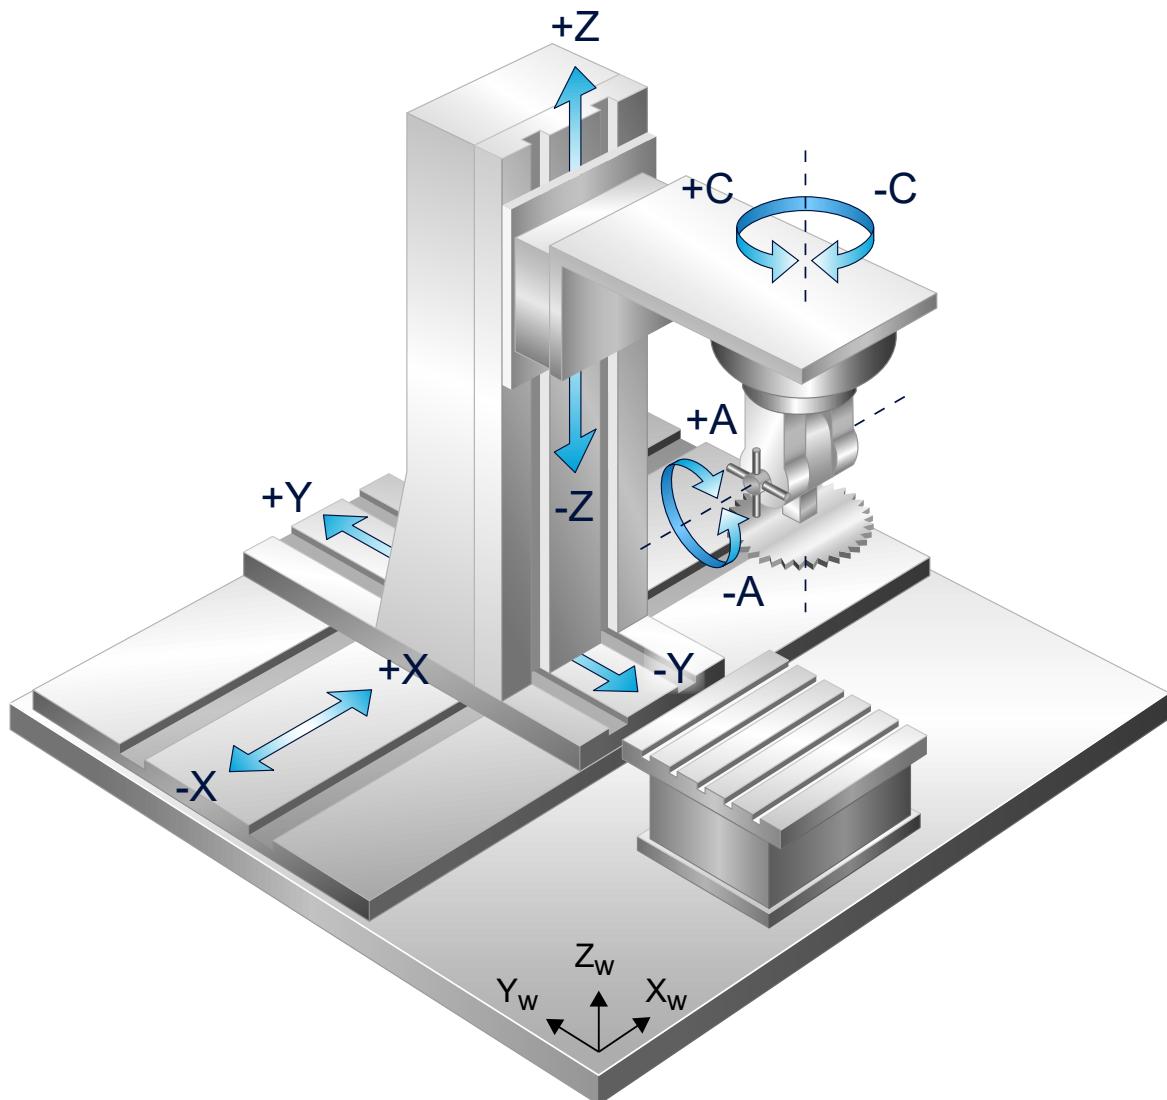


Fig. 19: 5-axis kinematics (sawing tool with manual auxiliary axis A)

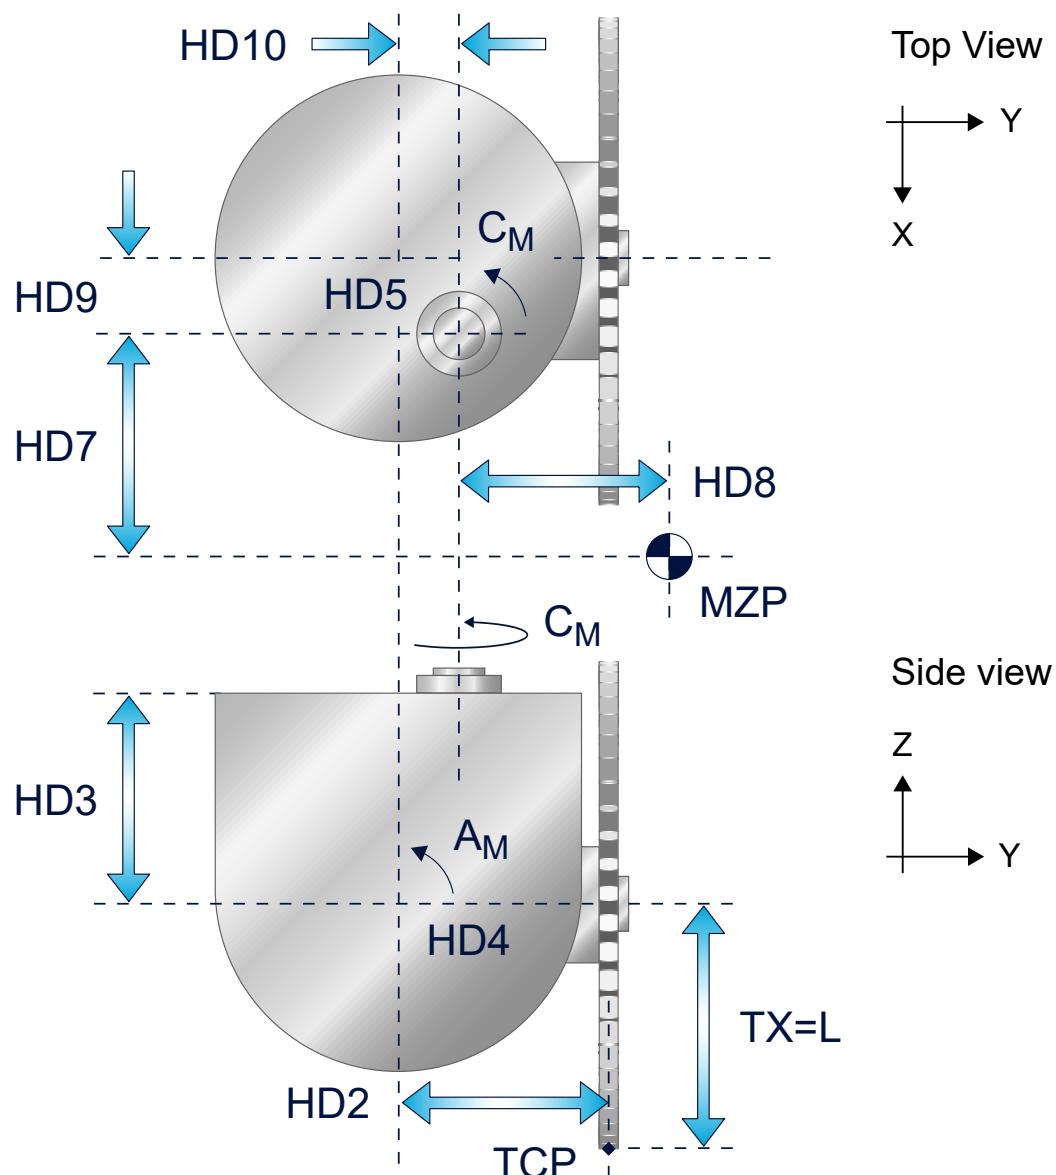


Fig. 20: 5-axis sawing tool (zero position where HD5 = 0, HD4 = +90, CM=0)

The automatic orientation setting of the 5-axis tool head with manually adjustable A axis depends on the position of the A axis.

If the physical machine axis position and the value in the HD parameter of the A axis do not match, no correct automatic alignment is possible.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD2	1	Y axis offset from tool holding device to rotation point A axis (swivel axis)	10 E-4 mm
HD3	2	Z axis offset from rotation point A axis to tool reference point	10 E-4 mm
HD4	3	Fixed angle setting of rotary A axis (swivel axis)	10 E-4°
HD5	4	Rotary angular offset C axis	10 E-4°
HD7	6	Static tool offset in X	10 E-4 mm
HD8	7	Static tool offset in Y	10 E-4 mm
HD9	8	X axis offset rotation point A axis to rotation point C axis	10 E-4 mm
HD10	9	Y axis offset rotation point A axis to rotation point C axis	10 E-4 mm

2.9

KIN_TYP_9 – 5-axis kinematics (boring and milling unit)**Kinematic structure**

The kinematic structure consists of 3 translatory NC axes and 2 rotary NC axes in the tool.

Axis configuration in the NC channel	
Axis identifier	X, Y, Z, C, A
Axis index	0, 1, 2, 3, 4
Kinematic structure	
Tool axes	Workpiece axes
NC axes	X, Y, Z, C, A

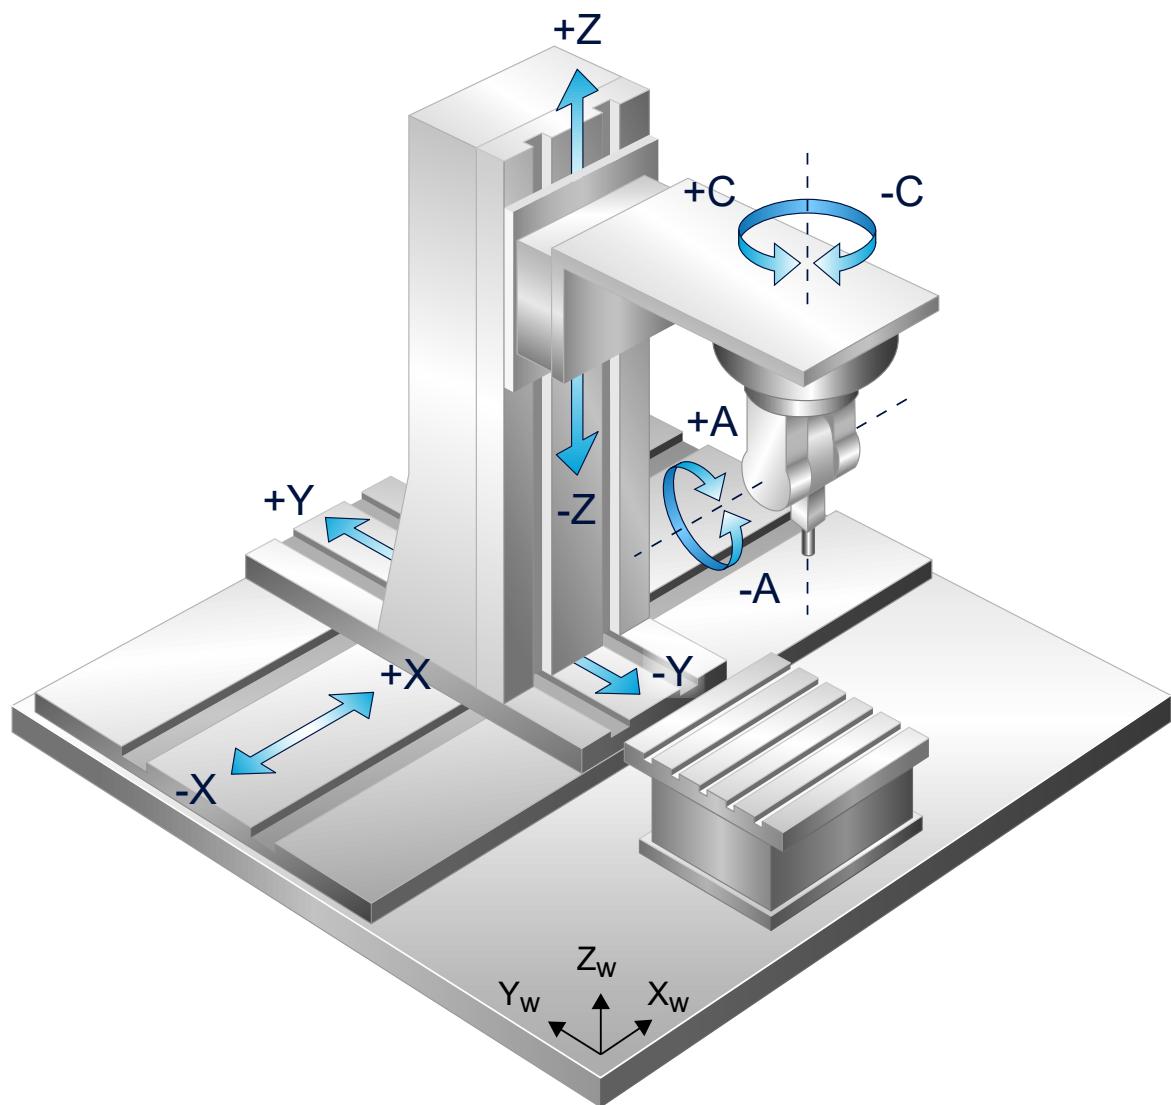


Fig. 21: 5-axis kinematics (boring and milling unit)

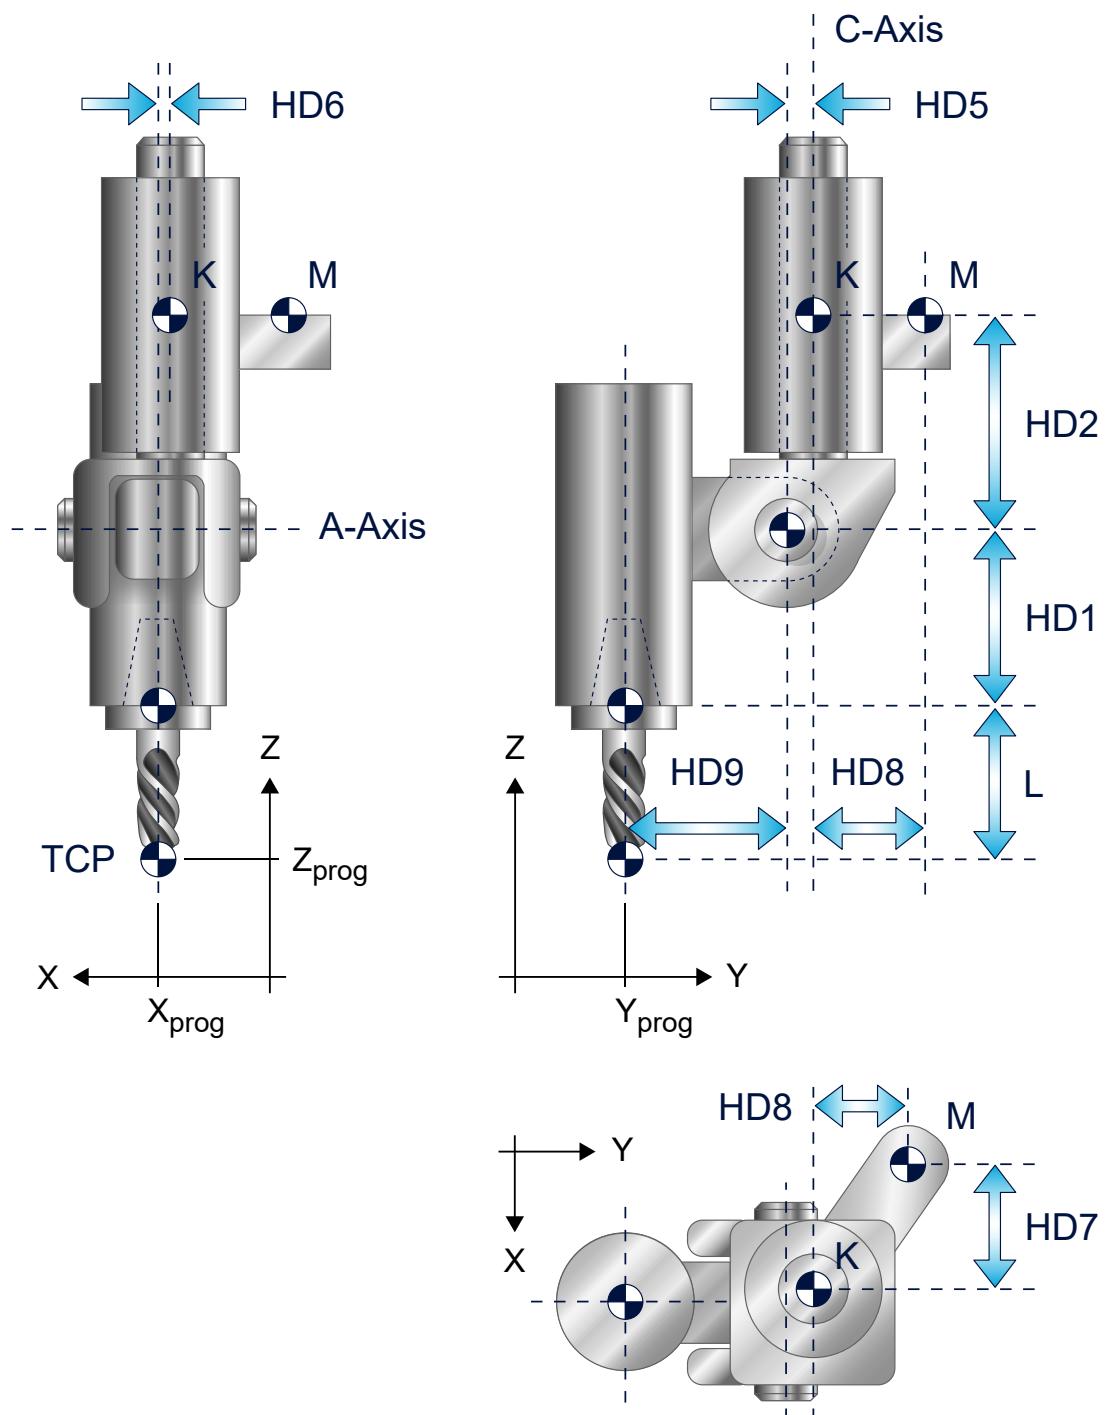


Fig. 22: 5-axis boring and milling tool (zero position where HD3 = 0, AM=0, HD4=0, CM=0)

The M and K points in the figure above are two reference points

(M)achine reference point and (K)inematic reference point

The ACS offset between the points M and K is a static offset, i.e. it is independent of the angular position of the rotary axes C, A.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z axis offset from tool holding device to rotation point A axis (swivel axis)	10 E-4 mm
HD2	1	Z axis offset rotary axis A to tool head reference point	10 E-4 mm
HD3	2	Rotary angular offset A axis (default 0)	10 E-4°
HD4	3	Rotary angular offset C axis (default 0)	10 E-4°
HD5	4	Y axis offset rotation point C axis	10 E-4 mm
HD6	5	X axis offset rotation point C axis	10 E-4 mm
HD7	6	Static head offset in X (default 0)	10 E-4 mm
HD8	7	Static head offset in Y (default 0)	10 E-4 mm
HD9	8	Y axis offset milling tool axis to rotation point A axis	10 E-4 mm

2.10 KIN_TYP_10 – 5-axis kinematics (sawing)

Kinematic structure

The kinematic structure consists of 3 translatory NC axes and 2 rotary NC axes in the tool.

Axis configuration in the NC channel	
Axis identifier	X, Y, Z, C, A
Axis index	0, 1, 2, 3, 4
Kinematic structure	
Tool axes	Workpiece axes
NC axes	X, Y, Z, C, A

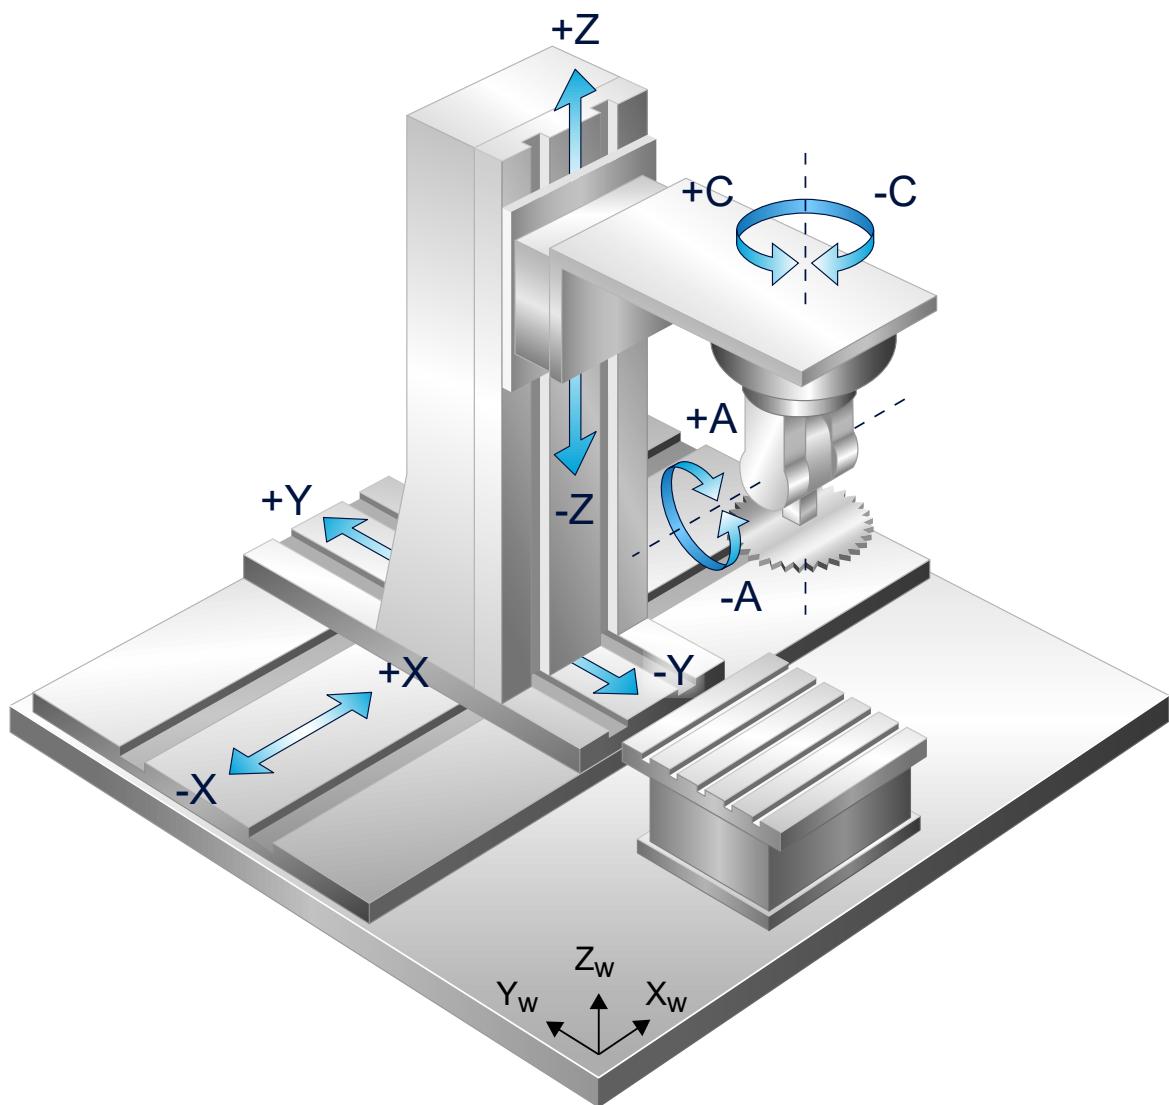


Fig. 23: 5-axis kinematics (sawing tool)

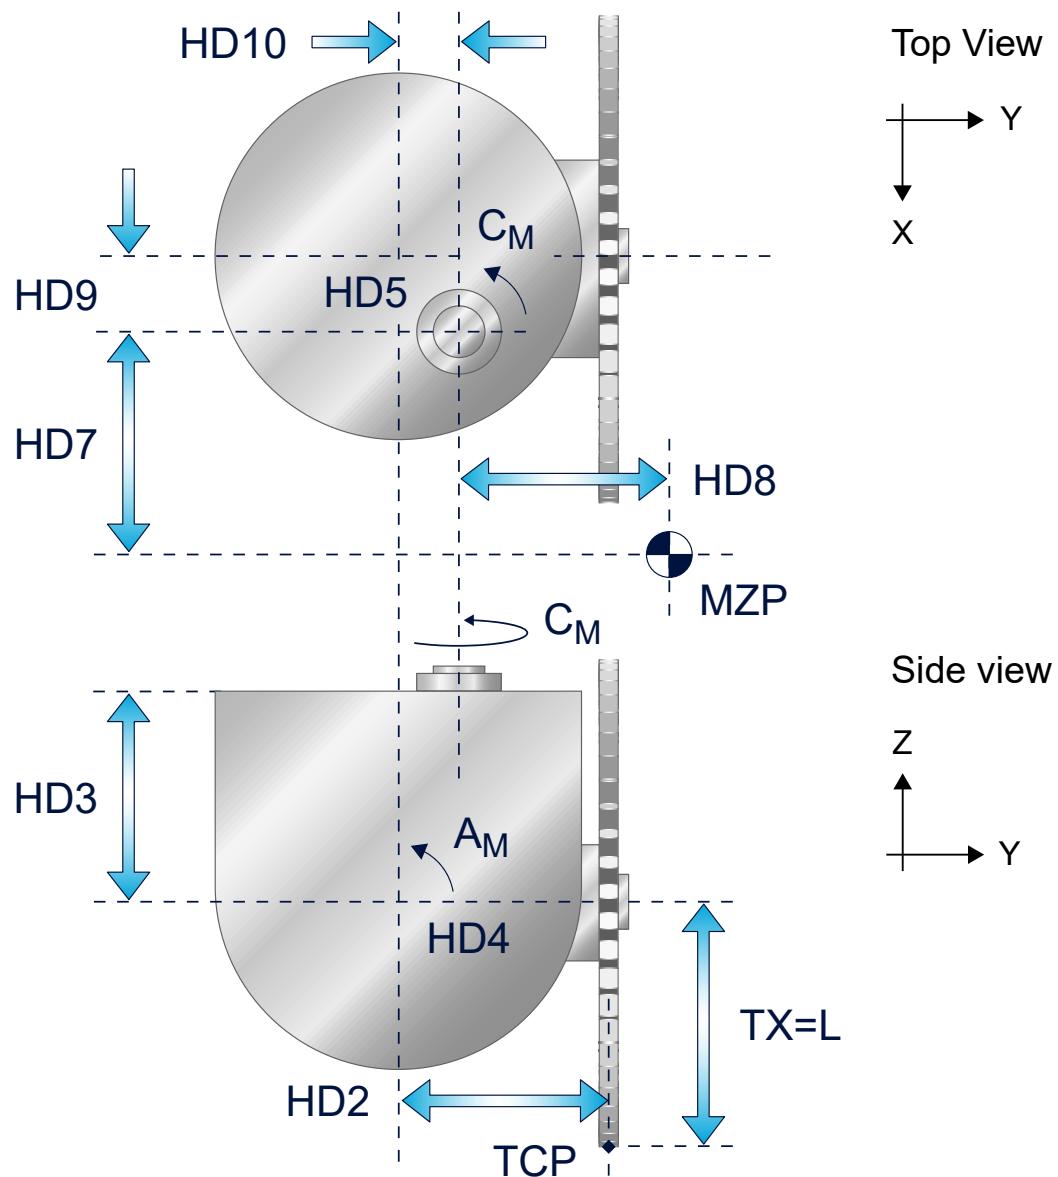


Fig. 24: 5-axis sawing tool (zero position where HD5 =0, CM=0, HD4 =0, AM =90)

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD2	1	Y axis offset from tool holding device to rotation point A axis (swivel axis)	10 E-4 mm
HD3	2	Z axis offset from rotation point A axis (swivel axis) to tool reference point	10 E-4 mm
HD4	3	Rotary angular offset A axis	10 E-4°
HD5	4	Rotary angular offset C axis	10 E-4°
HD7	6	Static tool offset in X	10 E-4 mm
HD8	7	Static tool offset in Y	10 E-4 mm
HD9	8	X axis offset rotation point A axis to rotation point C axis	10 E-4 mm
HD10	9	Y axis offset rotation point A axis to rotation point C axis	10 E-4 mm

2.11 KIN_TYP_11 – 5-axis kinematics with oblique tool head

Kinematic structure

The kinematic structure consists of 3 translatory Cartesian axes and 2 rotary axes. As a special feature the machine has an oblique B axis.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, A, B	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, B	Z, A

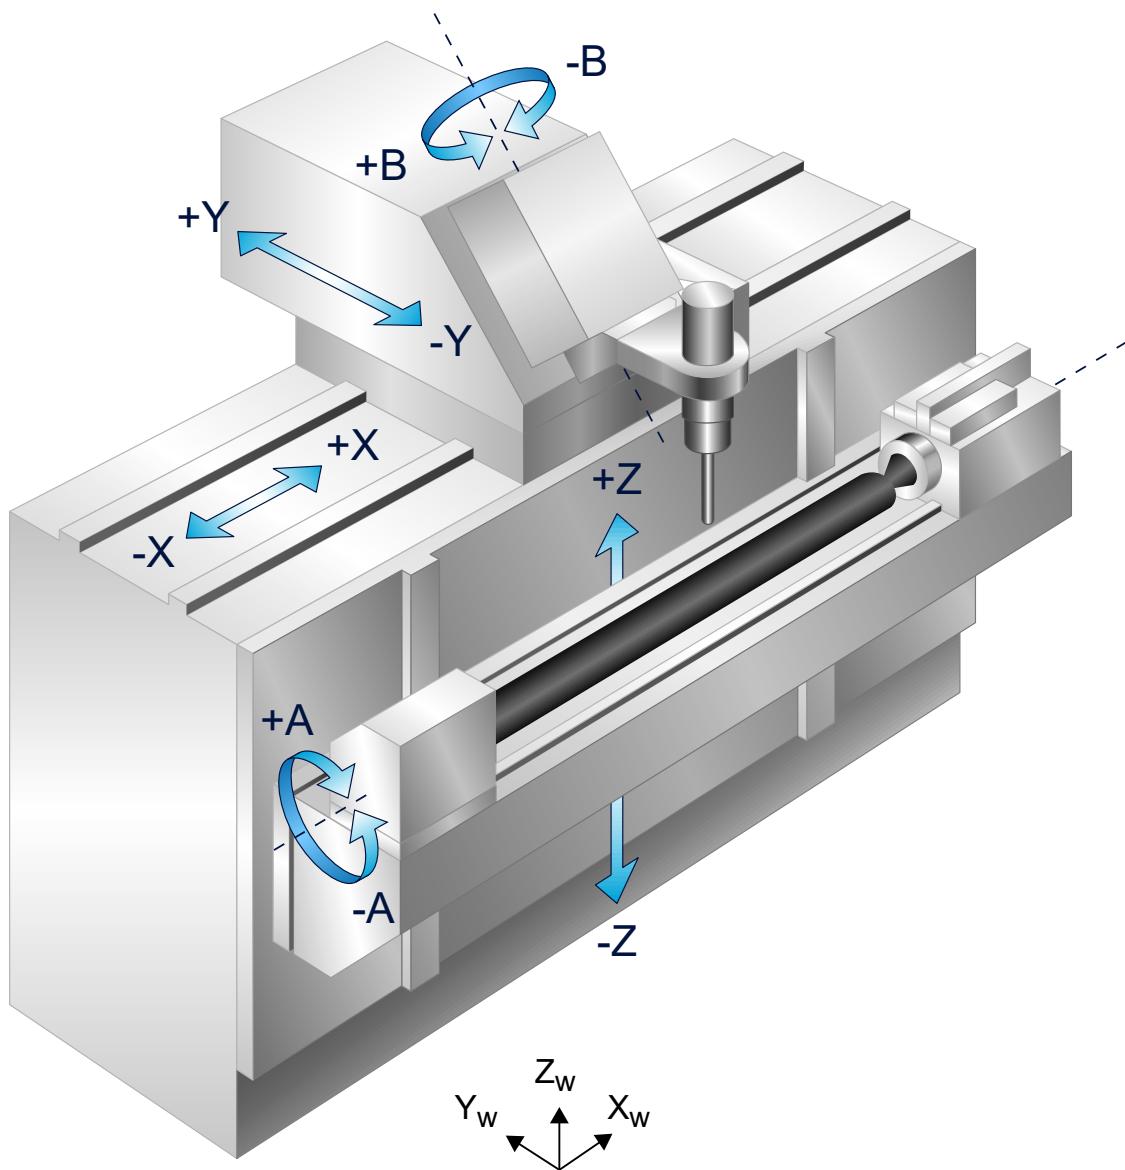


Fig. 25: Axis configuration of the 5-axis machine with oblique angle head

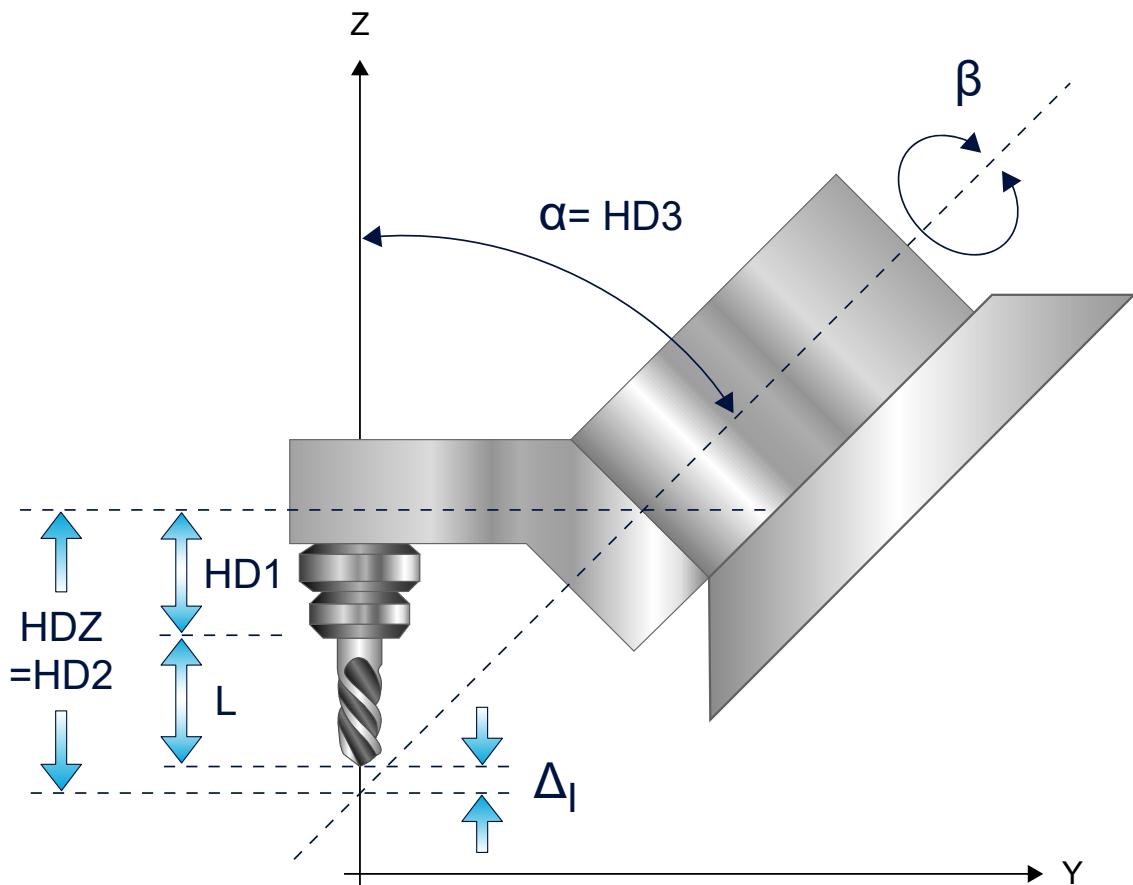


Fig. 26: Angles and lengths at the oblique angle head

The design of the oblique B axis is the most striking feature of the kinematic structure. If the tool length is selected such that the TCP (tool centre point) lies exactly on the extension of the B axis (tool offset HDZ), no compensation motions are required in the translatory axes when the tool orientation via the B axis changes (compensation motions due to changes in A axis orientation are always present). If the selected tool length is not ideal (i.e. if the TCP is not exactly on the extension of the B axis), there are minor additional compensation motions on the linear axes depending on the deviation from the ideal length.

Due to the particular design of the B axis, there can be no singular points in the backward transformation of the orientation axes. On the other hand, not all tool orientations can be selected (see below).

The zero positions of machine axes XM, YM, ZM are selected such that the fictitious extensions of AM and BM intersect. The zero position of BM is selected such that the tool is in a vertical position and, consequently, parallel to Z0 if BM=0 (The figure "Axis configuration of the 5-axis machine with oblique angle head" shows the zero position of BM). Expediently, the zero position of AM should be selected such that the Y0, Z0 workpiece axes run parallel to the directions of the machine axes.

HDZ represents the ideal tool length as geometry parameter of the machine kinematics; $HD1$ represents the first tool head parameter; L is the actual tool length (milling cutter length).

Please note that l is a signed value and may also be negative.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z axis offset tool holding device to tool head reference point	10 E-4 mm
HD2	1	Ideal tool length	10 E-4 mm
HD3	2	Angle between B axis and Z axis (oblique angle)	10 E-4°

2.12 KIN_TYP_12 – Tripod kinematics

Kinematic structure

The strut kinematic structure (referred to as “tripod”) consists of 3 translatory axes in a non-Cartesian arrangement. Strut pairs parallel to each other carry the tool holder platform. Tool orientation is constant.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z (Z1, Z2, Z3)	
Axis index	0, 1, 2	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z	-

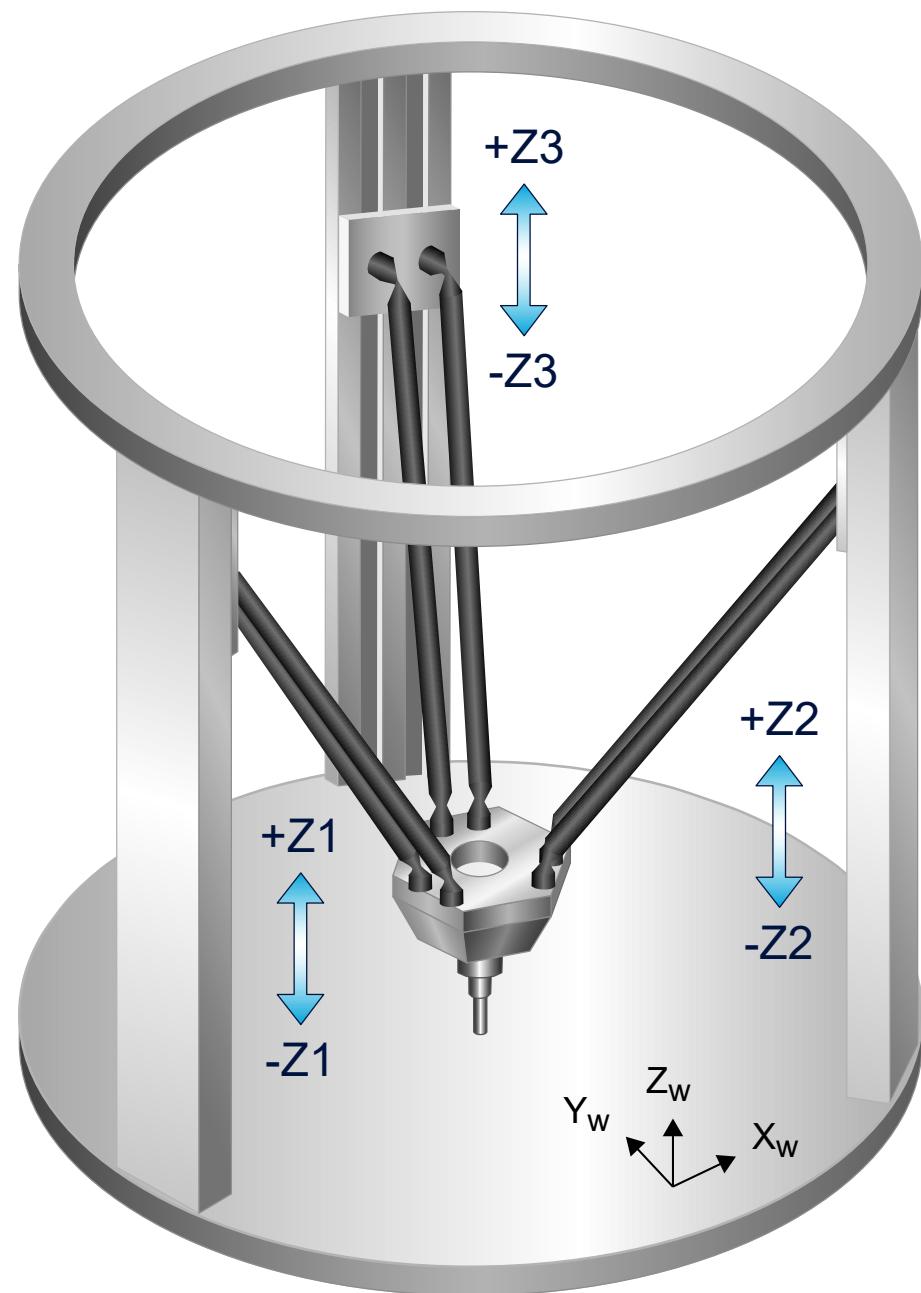


Fig. 27: Tripod kinematics

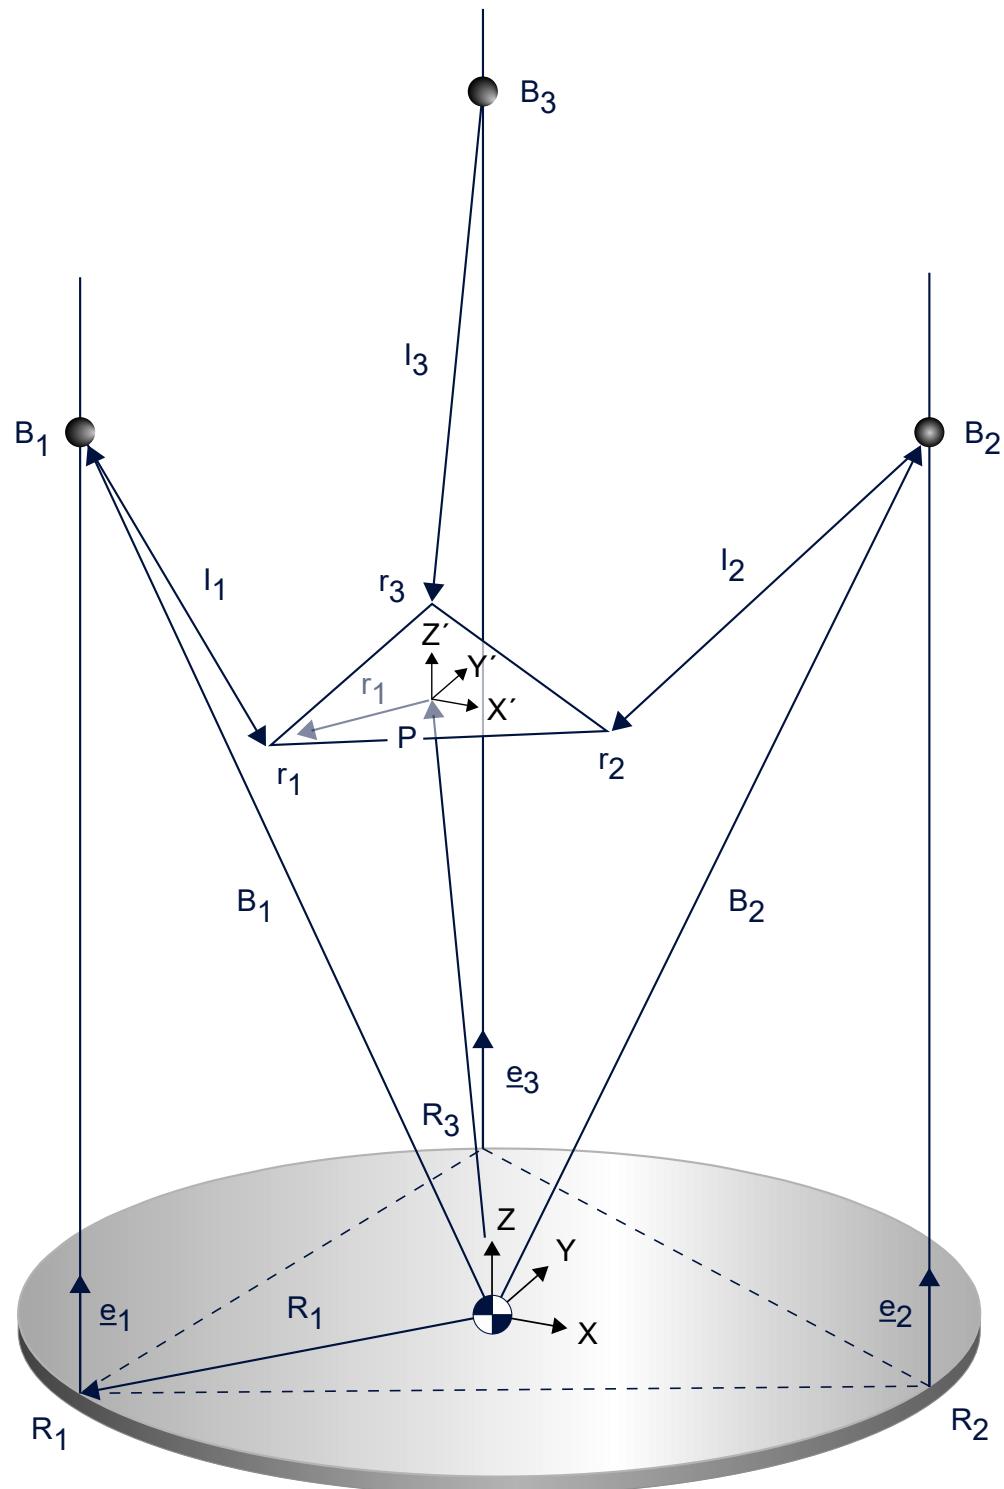


Fig. 28: Vector representation of strut kinematics

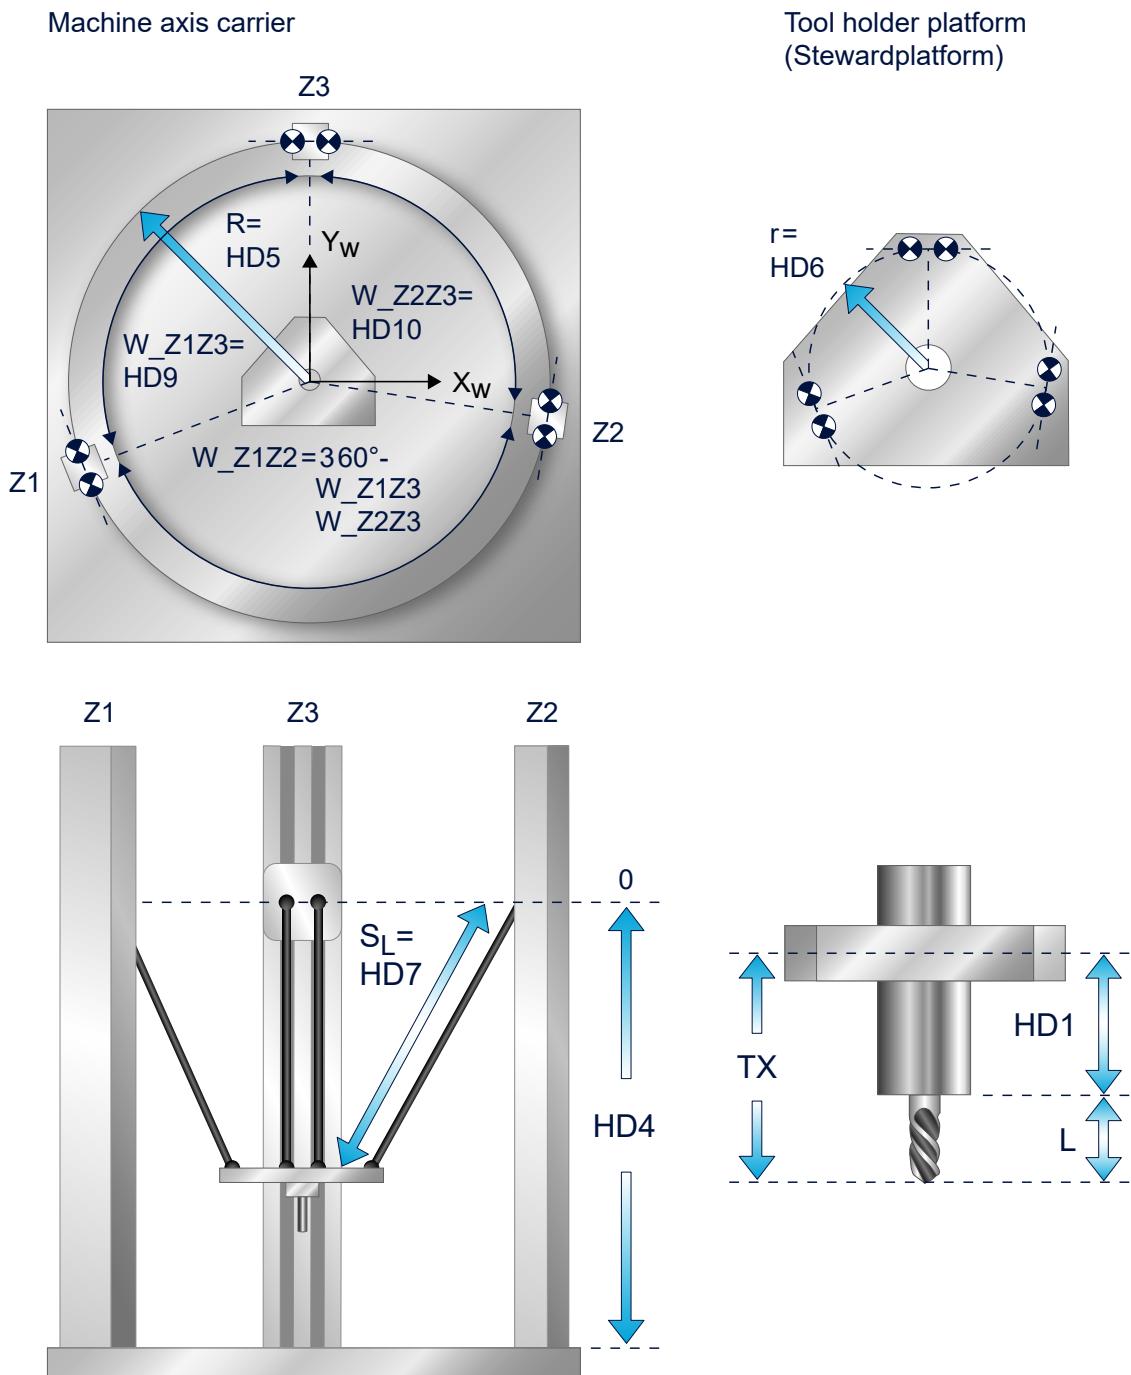


Fig. 29: Offset dimensions of strut kinematics

The parameter $HD8$ is used to toggle between an ideal (1) and non-ideal (0) tripod. An ideal tripod has an angle of 120° between all columns. A non-ideal tripod must be defined by the angles $HD9$ and $HD10$.

The third angle between columns is calculated as follows:

$$W_{Z1Z2} = 360^\circ - HD9 - HD10 = 360^\circ - W_{Z2Z3} - W_{Z1Z3}$$

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Tool offset Z	10 E-4 mm
HD2	1	Tool offset Y	10 E-4 mm
HD3	2	Tool offset X	10 E-4 mm
HD4	3	Z axis offset machine origin	10 E-4 mm
HD5	4	Radius to connecting line joint centre points drive columns (large circle)	10 E-4 mm
HD6	5	Radius to connecting line joint centre points Stewart platform joints (small circle)	10 E-4 mm
HD7	6	Strut length to each joint centre point	10 E-4 mm
HD8	7	Switch to switch over to non-ideal tripod 0 : ideal tripod 1 : non-ideal tripod and enable HD9 / HD 10	[-]
HD9	8	Angle column / joint 3 to column / joint 1	10 E-4°
HD10	9	Angle column / joint 3 to column / joint 2	10 E-4°

2.13 KIN_TYP_16 – 5-axis kinematics

Kinematic structure

The kinematic structure consists of 3 translatory and 3 rotary NC axes in the tool.

Axis configuration in the NC channel	
Axis identifier	X, Y, Z, B, A
Axis index	0, 1, 2, 3, 4
Kinematic structure	
	Tool axes
NC axes	X, Y, Z, B, A
	Workpiece axes
NC axes	-


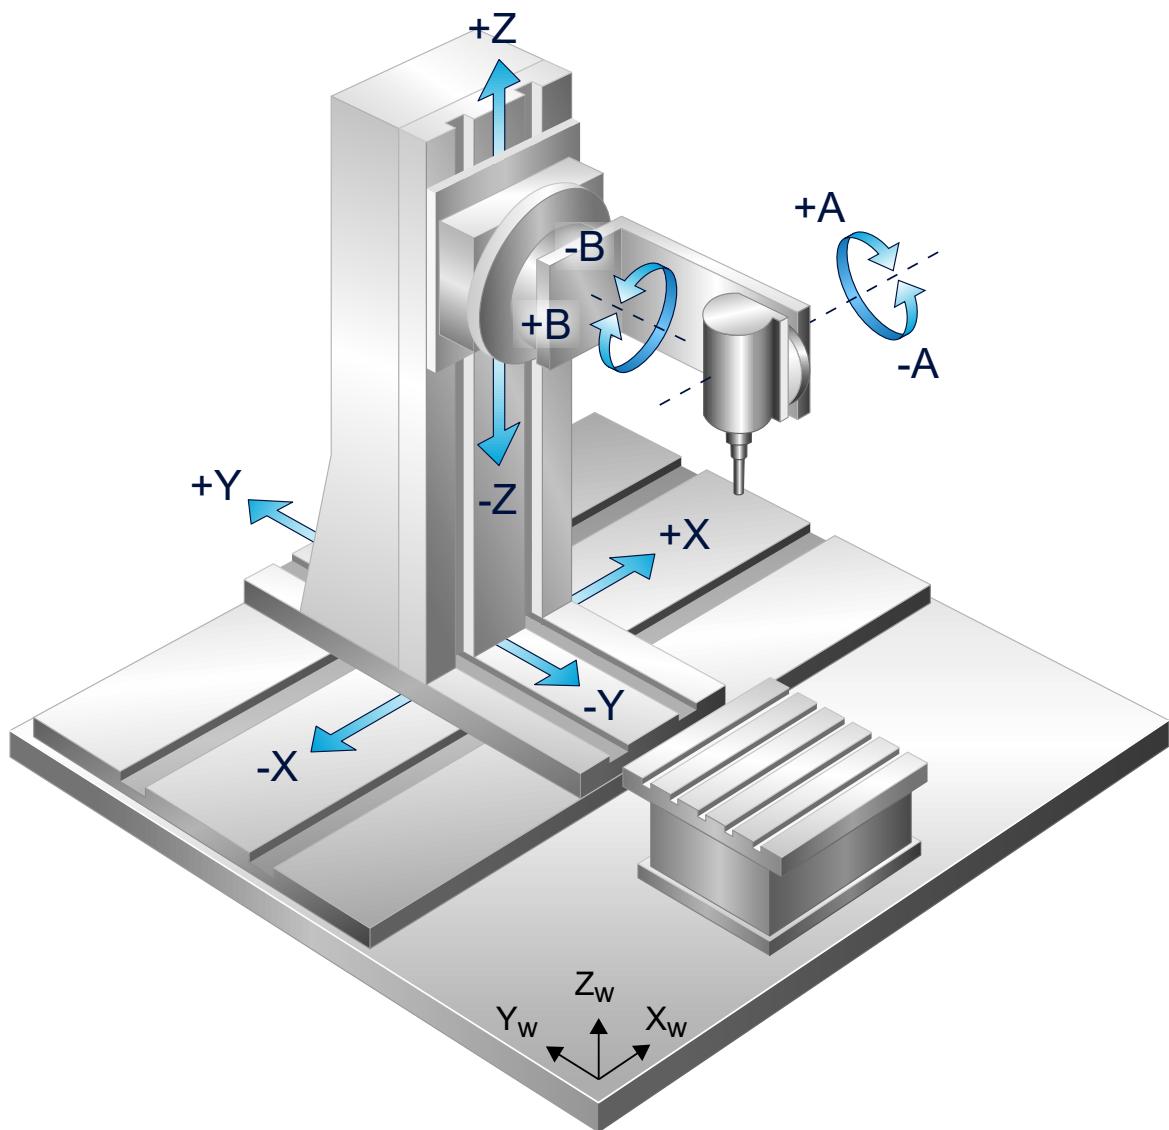


Fig. 30: Axis configuration of 5-axis machine

Side view

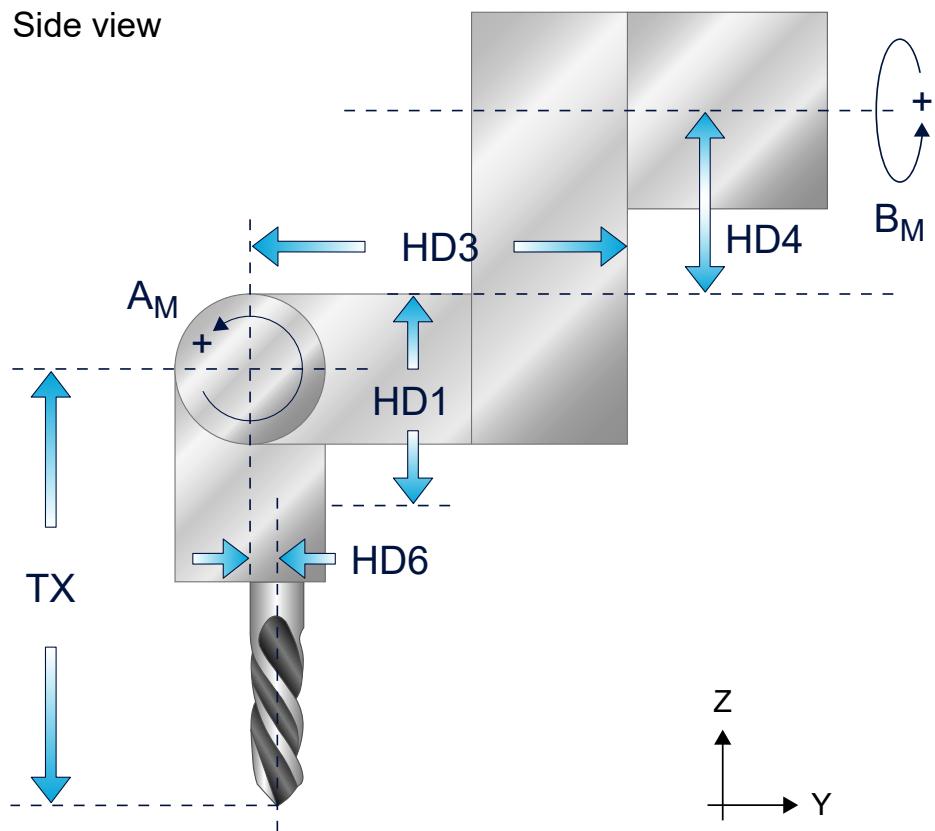

Top view

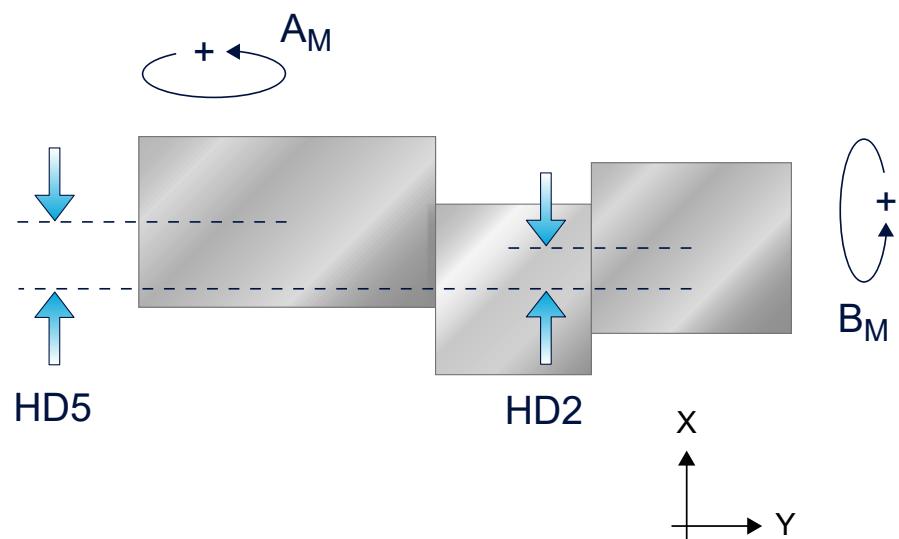


Fig. 31: Parameters of rotary/swivel head

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset to tool holding device	10 E-4°
HD2	1	X offset	10 E-4°
HD3	2	Y offset	10 E-4°
HD4	3	Z offset	10 E-4°
HD5	4	X offset	10 E-4°
HD6	5	Y axis offset to tool	10 E-4°
HD7	6	Rotary offset A axis	10 E-4°
HD8	7	Rotary offset B axis	10 E-4°
HD9	8	Sign for direction of rotation A axis	[-]
HD10	9	Sign for direction of rotation B axis	[-]

2.14 KIN_TYP_17 – five-axis kinematics with 2 manual auxiliary axes

Kinematic structure

The kinematic structure consists of 3 translatory NC axes. In addition, 2 manually adjustable rotary axes are available. These axes cannot be addressed from the NC program.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z	
Axis index	0, 1, 2	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z	-
Auxiliary axes	C, A	-

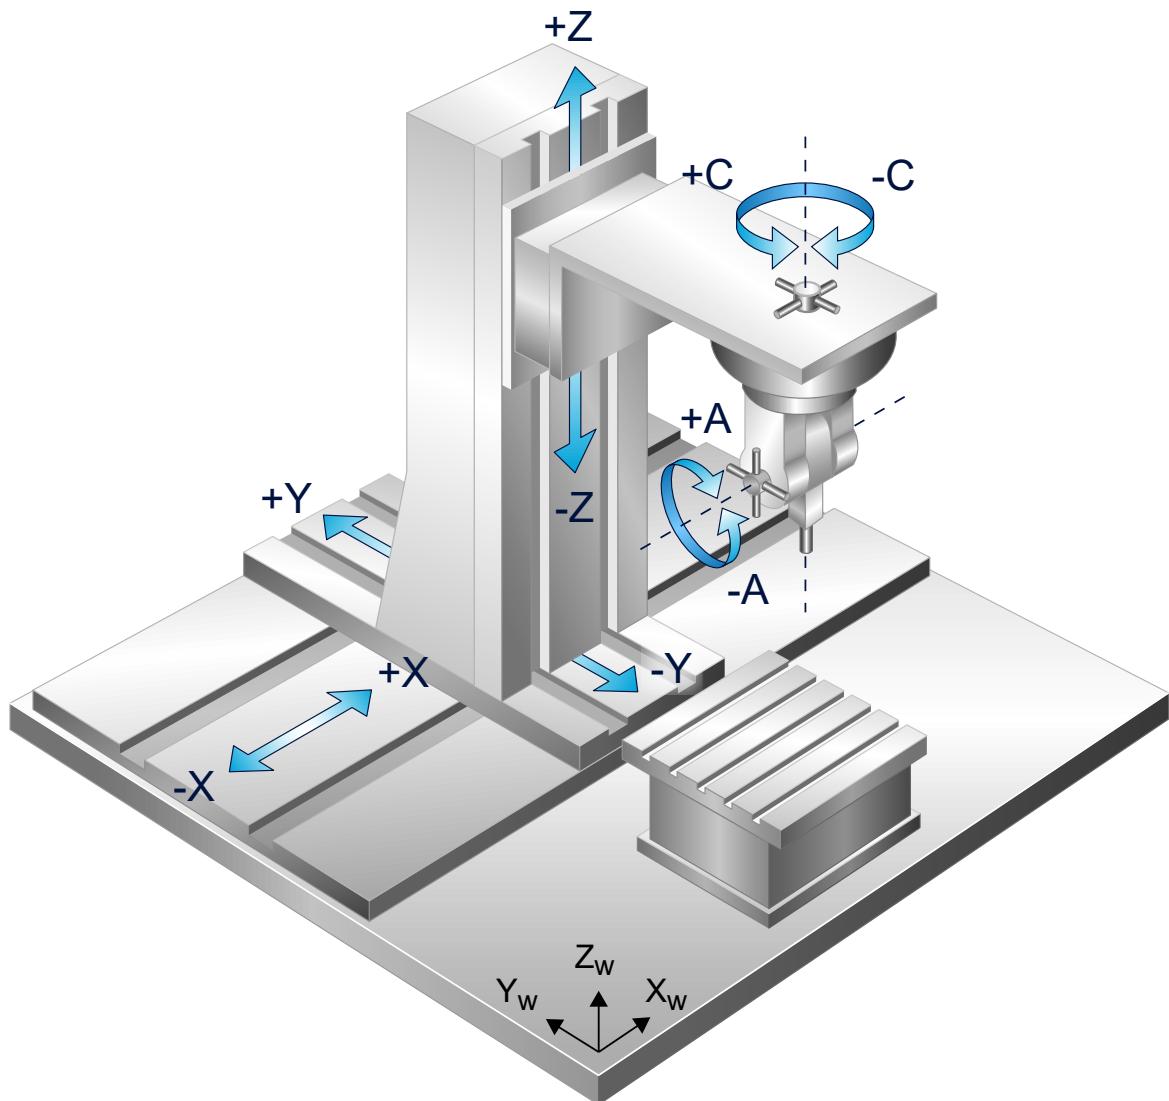


Fig. 32: 5-axis kinematics (drilling and milling tool with manual auxiliary axes C and A)

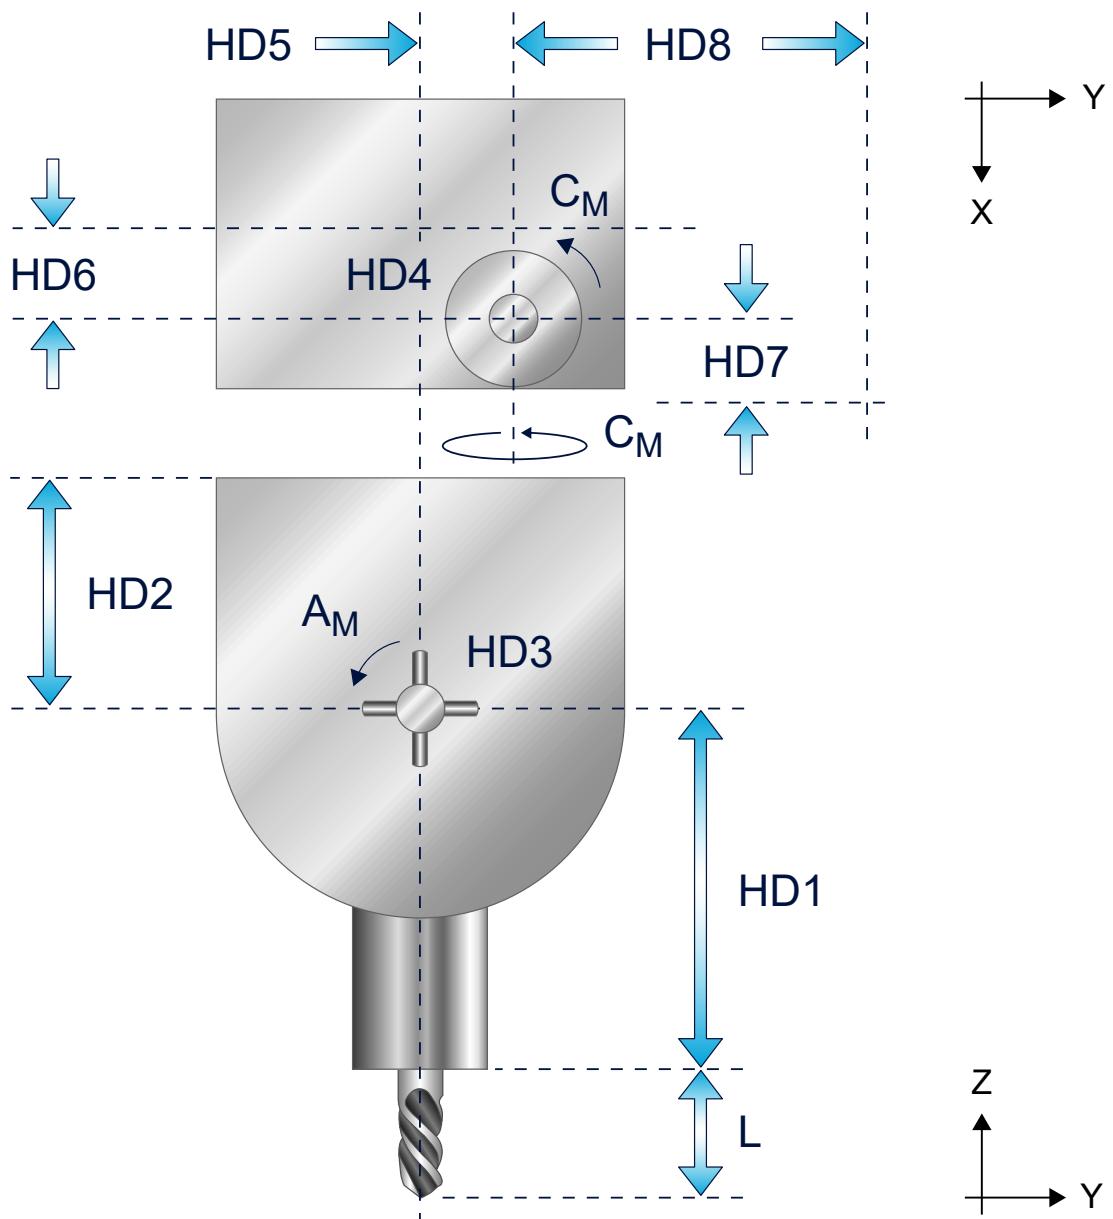


Fig. 33: Drilling and milling tool (zero position where $HD3 = 0$, $HD4 = 0$)

The axes are arranged as for a right-handed system. The zero position of the A axis is in the negative direction of the Z axis. No automatic orientation setting is possible for the 2-axis tool head with manually adjustable C and A axes.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z axis offset tool holding device to rotation point of A axis (swivel axis)	10 E-4 mm
HD2	1	Z axis offset rotation point A axis to tool head reference point	10 E-4 mm
HD3	2	Fixed angle setting of rotary A axis (swivel axis)	10 E-4°
HD4	3	Fixed angle setting of rotary C axis	10 E-4°
HD5	4	Y axis offset rotation point A axis to rotation point C axis (offset)	10 E-4 mm
HD6	5	X axis offset tool head reference point to rotation point C axis (offset)	10 E-4 mm
HD7	6	Static tool offset in X	10 E-4 mm
HD8	7	Static tool offset in Y	10 E-4 mm

2.15 KIN_TYP_18 – five-axis kinematics with 2 manual auxiliary axes (sawing)

Kinematic structure

The kinematic structure consists of 3 translatory NC axes. In addition, 2 manually adjustable rotary axes are available. These axes cannot be addressed from the NC program.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z	
Axis index	0, 1, 2	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z	-
Auxiliary axes	C, A	-

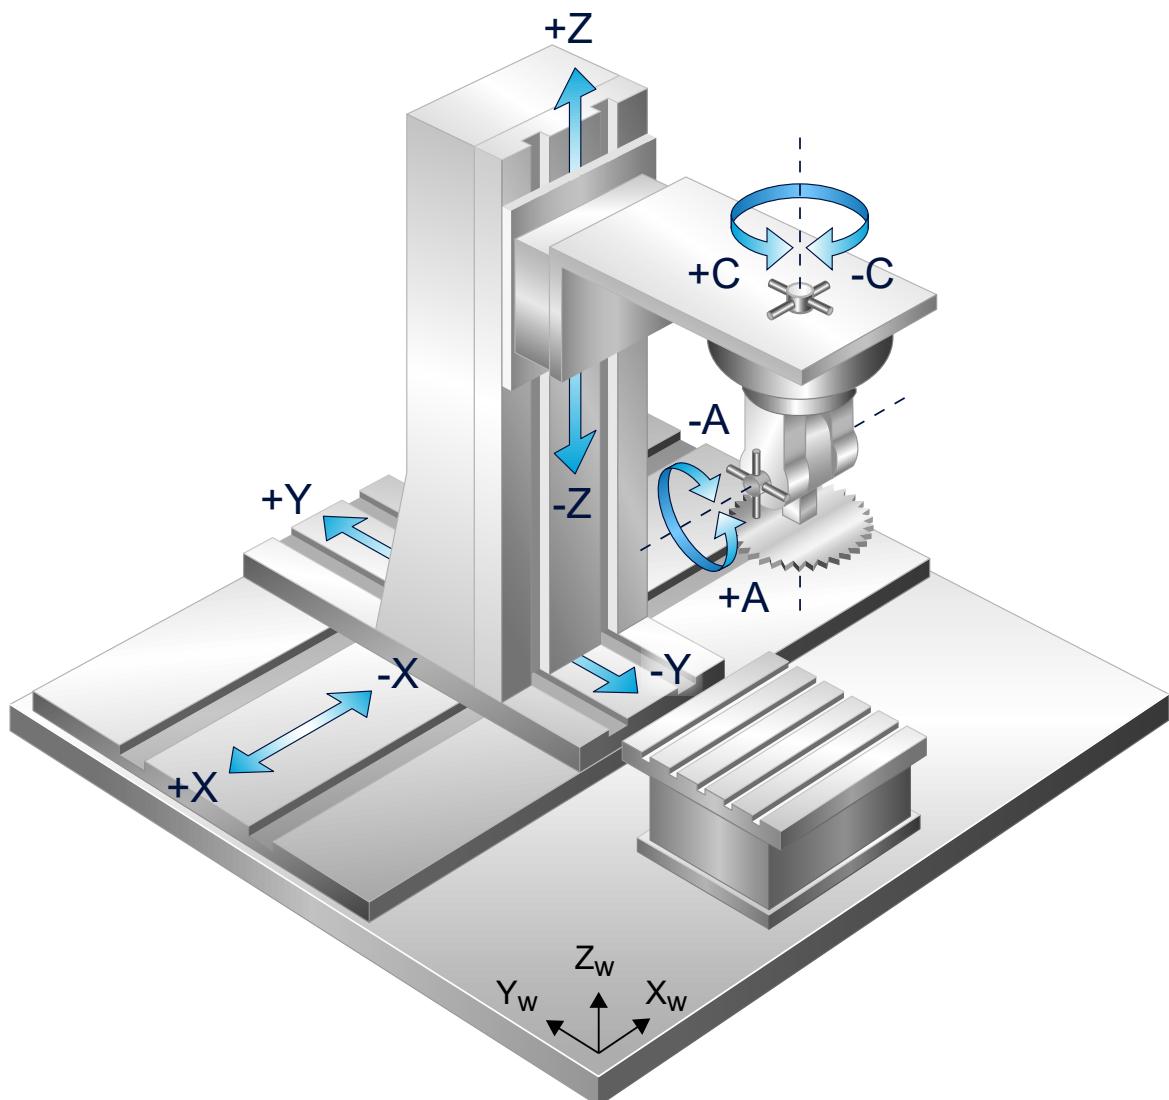


Fig. 34: 5-axis kinematics (sawing tool with manual auxiliary axes C and A)

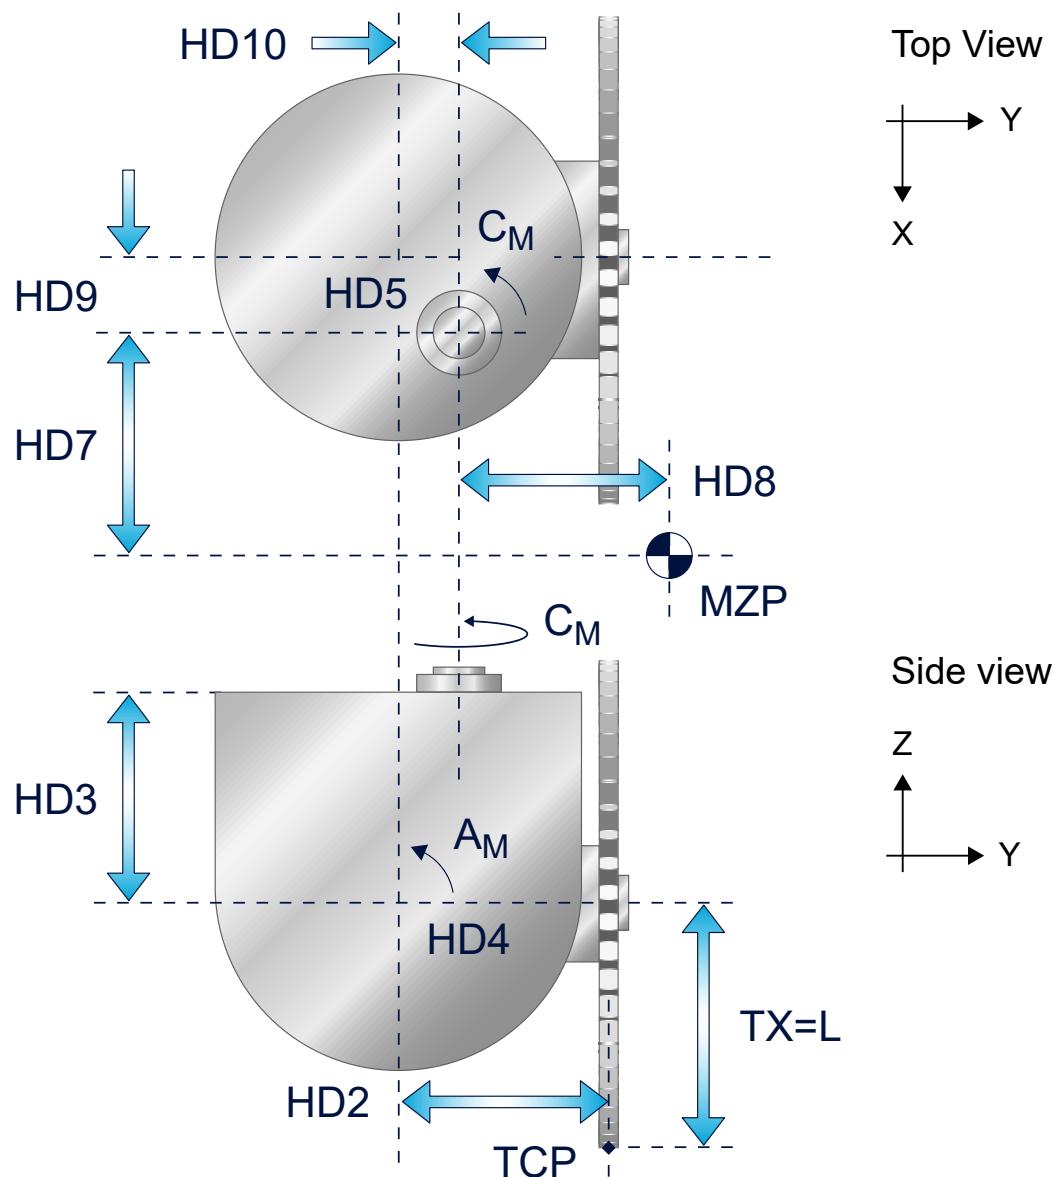


Fig. 35: Sawing tool (zero position where HD5 = 0, HD4 = +90)

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD2	1	Y axis offset from tool holding device to rotation point A axis (swivel axis)	10 E-4 mm
HD3	2	Z axis offset from rotation point A axis to tool reference point	10 E-4 mm
HD4	3	Fixed angle setting of rotary A axis (swivel axis)	10 E-4°
HD5	4	Fixed angle setting of rotary C axis	10 E-4°
HD7	6	Static tool offset in X	10 E-4 mm
HD8	7	Static tool offset in Y	10 E-4 mm
HD9	8	X axis offset rotation point A axis to rotation point C axis	10 E-4 mm
HD10	9	Y axis offset rotation point A axis to rotation point C axis	10 E-4 mm

2.16 KIN_TYP_19 – Tripod kinematics

Kinematic structure

The strut kinematics consists of 3 translatory axes in a non-Cartesian arrangement and 2 Cartesian axes. 3 struts with ball joints support the workpiece platform. This may affect the Z height and orientation of the workpiece.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, U, V, W (X, Y, Z1, Z2, Z3, W)	
Axis index	0, 1, 2, 3, 4, 5	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y	Z1, Z2, Z3


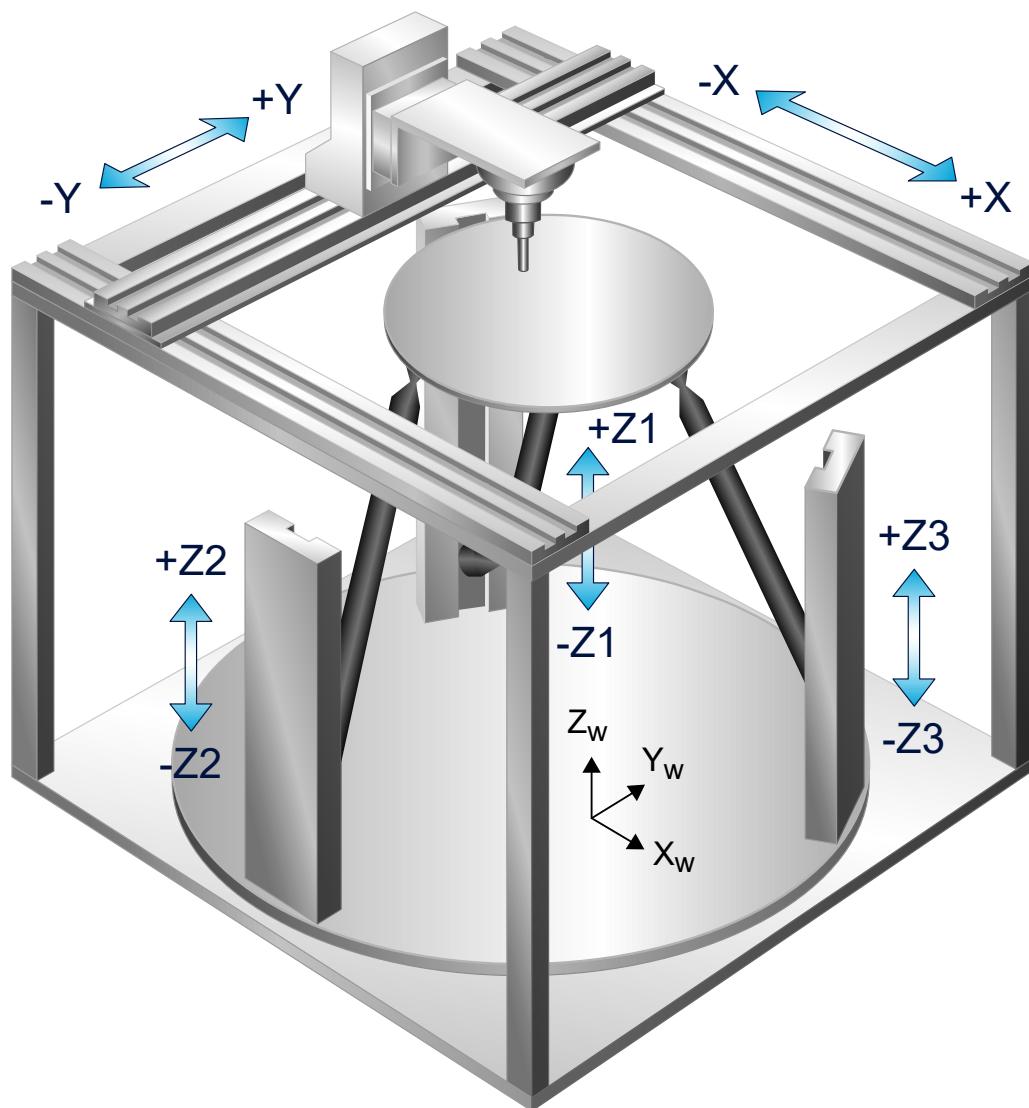


Fig. 36: Tripod kinematics

Machine axis carrier

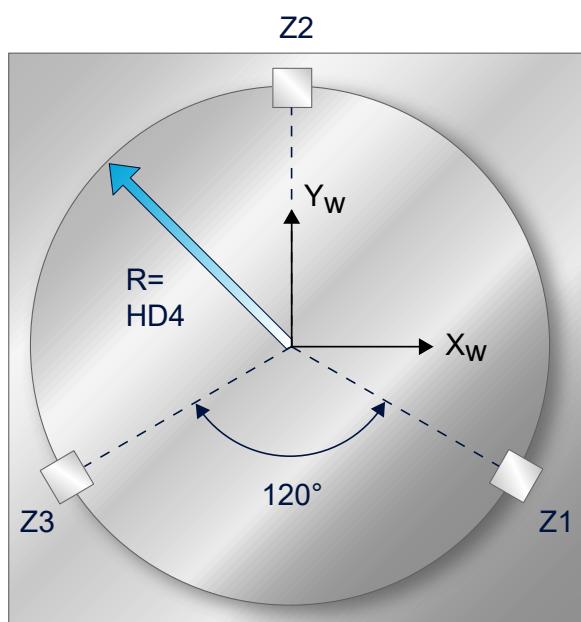

Workpiece holder platform

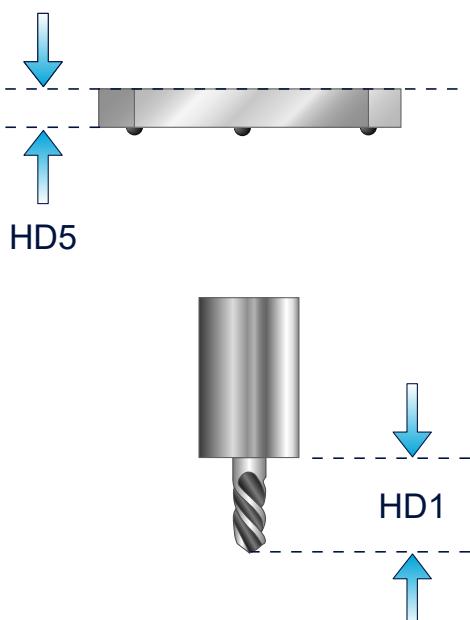
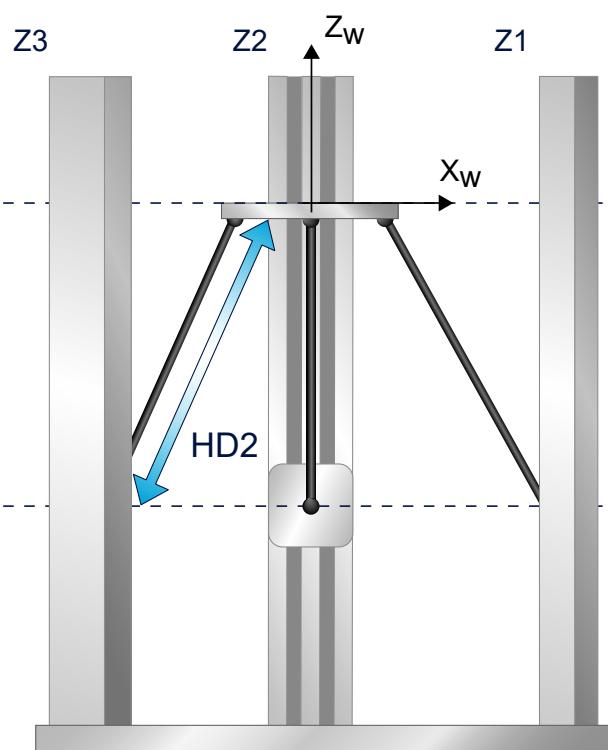
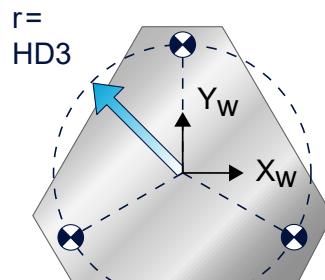


Fig. 37: Kinematic offsets

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Tool offset in Z	10 E-4 mm
HD2	1	Strut length to joint centre point	10 E-4 mm
HD3	2	Radius to connecting line joint centre points Stewart platform joints (small circle)	10 E-4 mm
HD4	3	Radius to connecting line joint centre points drive columns (large circle)	10 E-4 mm
HD5	4	Distance between workpiece holder platform and joint centre points on the Stewart platform	10 E-4 mm

2.17 KIN_TYP_21 – Lambda kinematics

Kinematic structure

The kinematic structure consists of 3 translatory NC axes and 1 rotary NC axis in the tool.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, C (X1, X2, Z, C)	
Axis index	0, 1, 2, 3	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, C	-

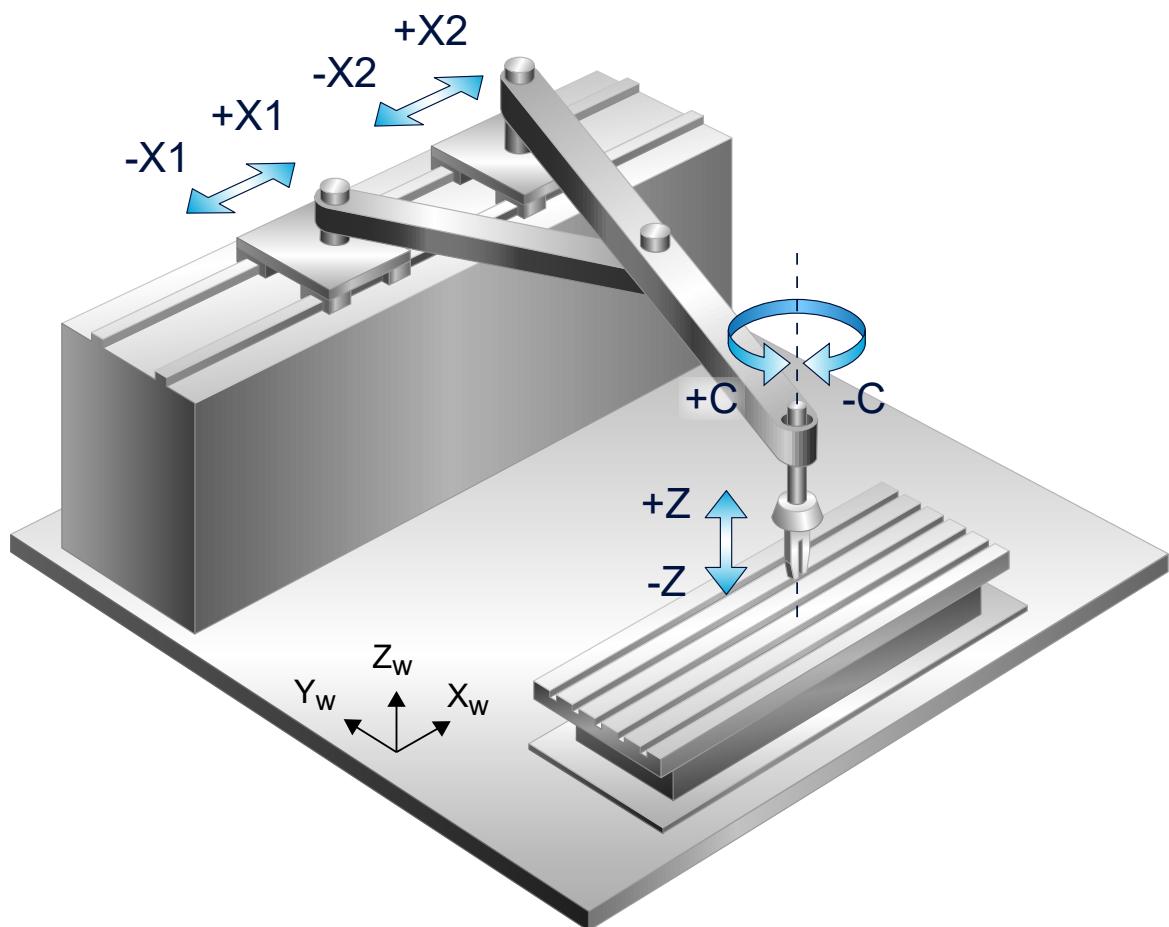


Fig. 38: Lambda kinematics

The XY plane kinematics are known as a variant of shear kinematics. The struts (lengths l2, l1) that are connected to each other at point D and are also rotatable are located on 2 linear slides XM1 and XM2 at rotary joints C and B.

Strut CA (length l3) is attached to strut CD via the fixed angle β . The C axis is located at the top of this strut. The actual tool holding strut (length l4) starts at the rotation point of the C axis and ends in the TCP.

Related to the Cartesian axes the C axis is not mechanically guided, i.e. it must be compensated depending on the joint position.

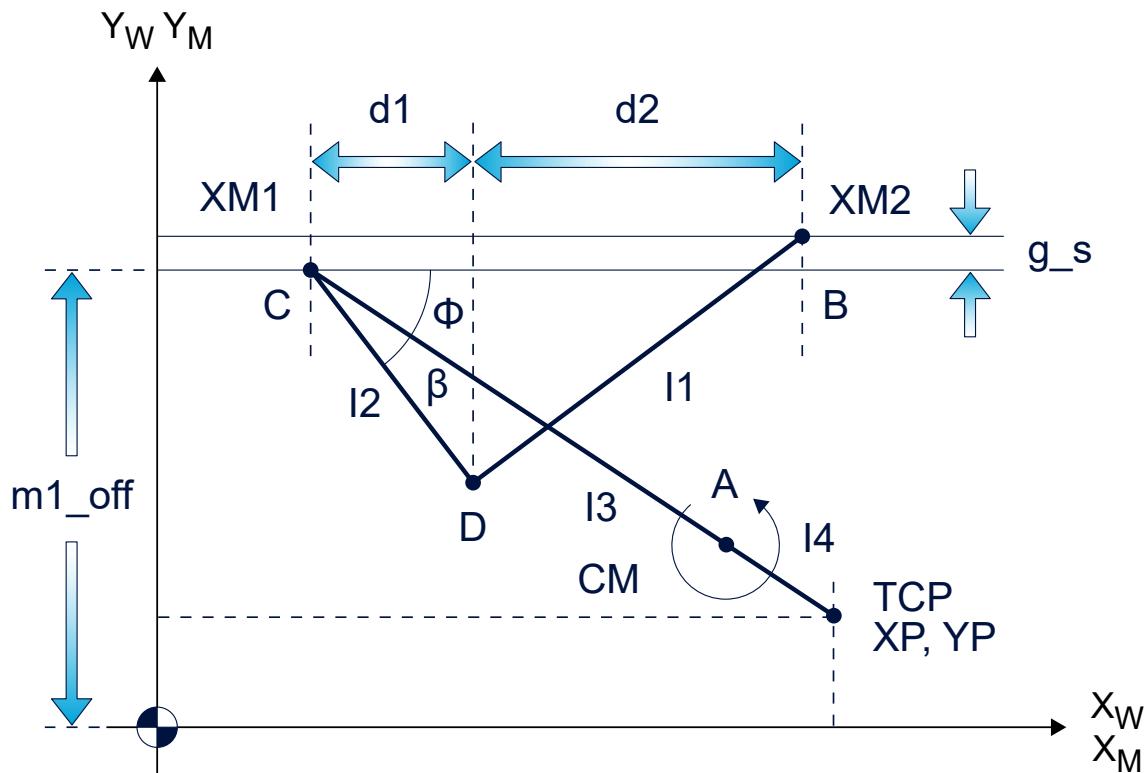


Fig. 39: Lambda kinematics, variant 1

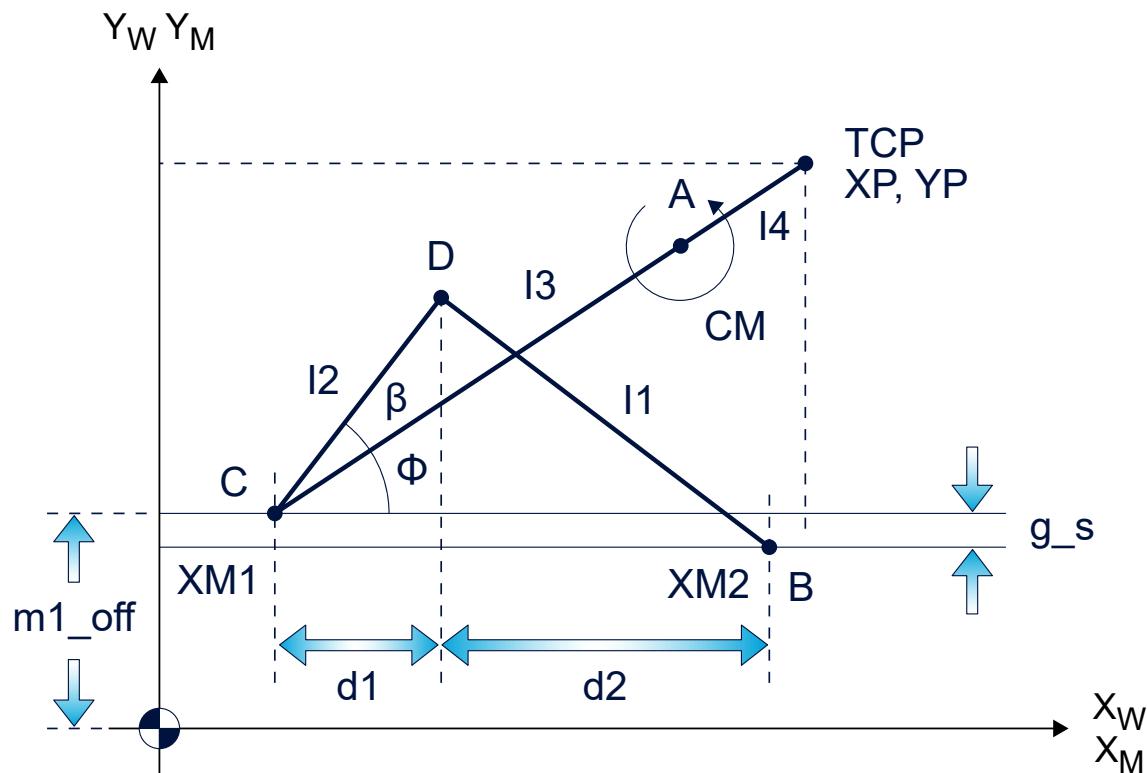


Fig. 40: Lambda kinematics, variant 2

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset to tool holding point	10 E-4 mm
HD2	1	l1: Strut length 1	10 E-4 mm
HD3	2	l2: Strut length 2	10 E-4 mm
HD4	3	l3: Strut length 3	10 E-4 mm
HD5	4	g_s : Offset joint points C to B	10 E-4 mm
HD6	5	β = fixed angle between strut CD and strut CA	10 E-4°
HD7	6	m1_off: Y position of drive 1 referred to Y origin WCS	10 E-4 mm
HD8	7	phi_min: Minimum value for angle j (0°)	10 E-4°
HD9	8	phi_max: Maximum value for angle j (90°)	10 E-4°
HD10	9	X-Offset	10 E-4 mm
HD11	10	L4= gripper offset	10 E-4 mm
HD12	11	Kinematic variant	[-]

2.18

KIN_TYP_22 – 5-axis kinematics with X/Y workpiece table

Kinematic structure

The kinematic structure consists of 2 translatory NC axes in the workpiece, 2 rotary NC axes and 1 translatory axis in the tool.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, A, B	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	Z, A, B	X, Y

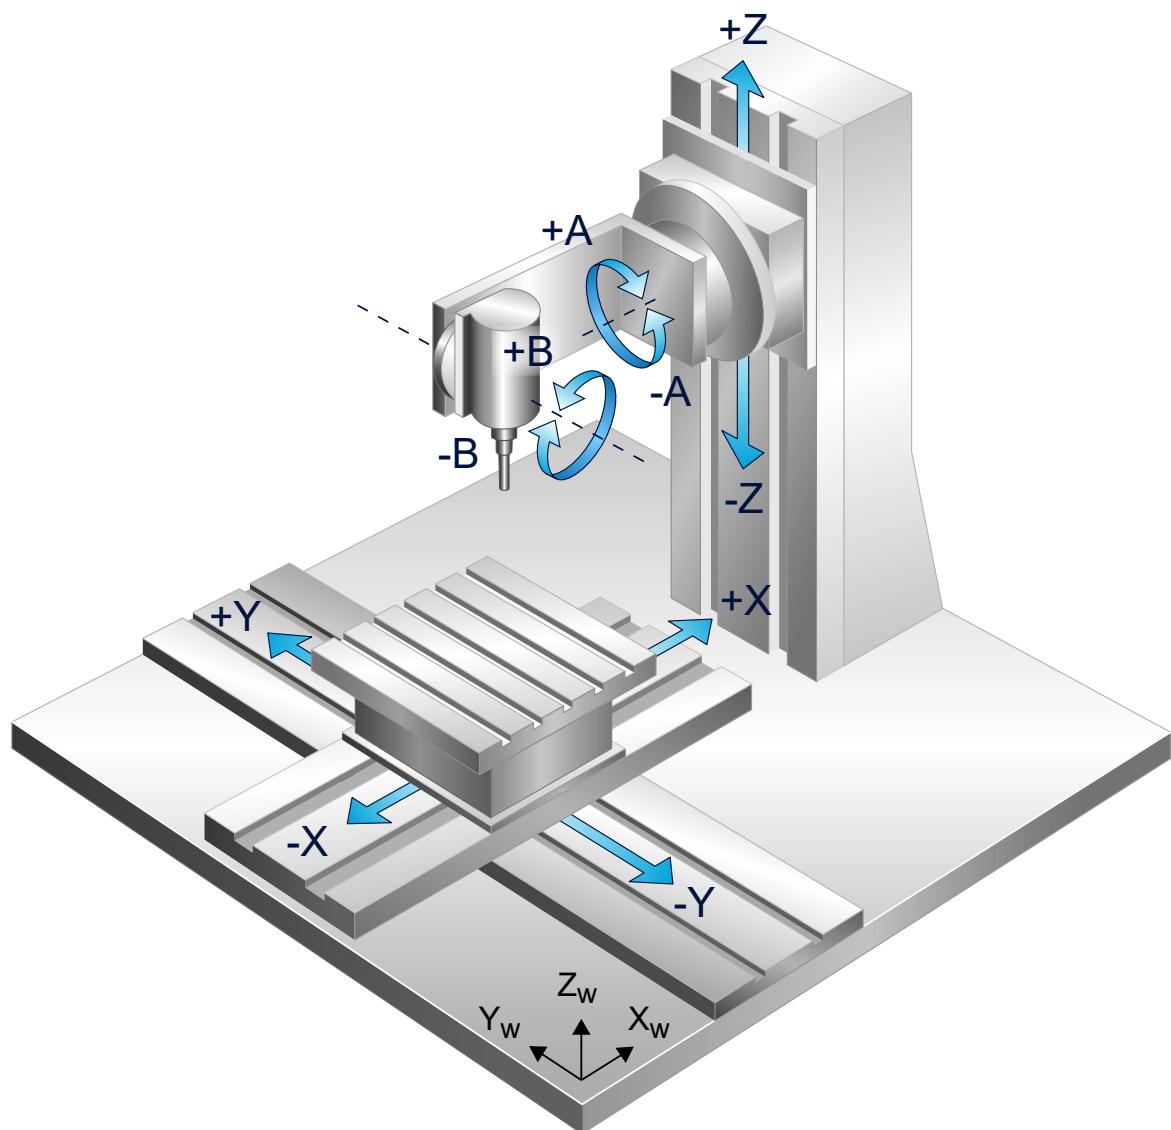


Fig. 41: Axis configuration of 5-axis machine

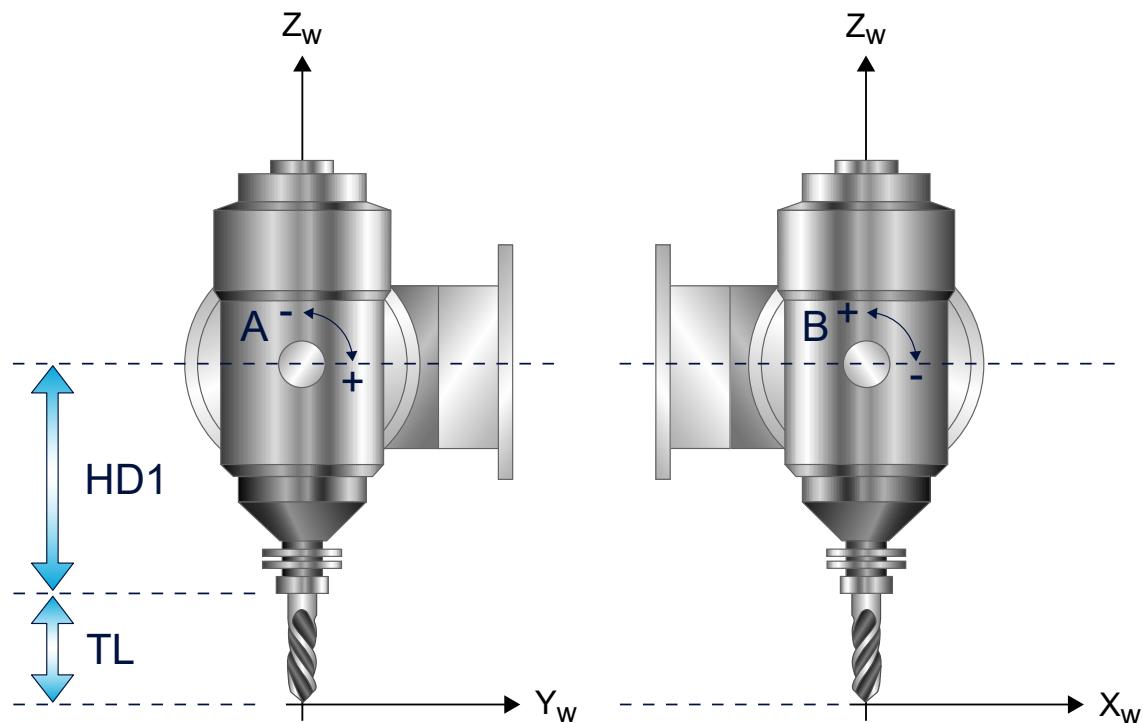


Fig. 42: Kinematic offsets

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z axis offset tool holding device to rotation point A / B axis	10 E-4 mm
HD4	3	Motion direction rotary axis A	[-]
HD5	4	Motion direction rotary axis B	[-]

2.19 KIN_TYP_23 – 5-axis kinematics with X/Y/B workpiece table

Kinematic structure

The kinematic structure consists of 2 translatory NC axes in the workpiece, 1 translatory axis in the tool and 1 rotary NC axis in both the workpiece and the tool.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, A, B	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	Z, A	X, Y, B

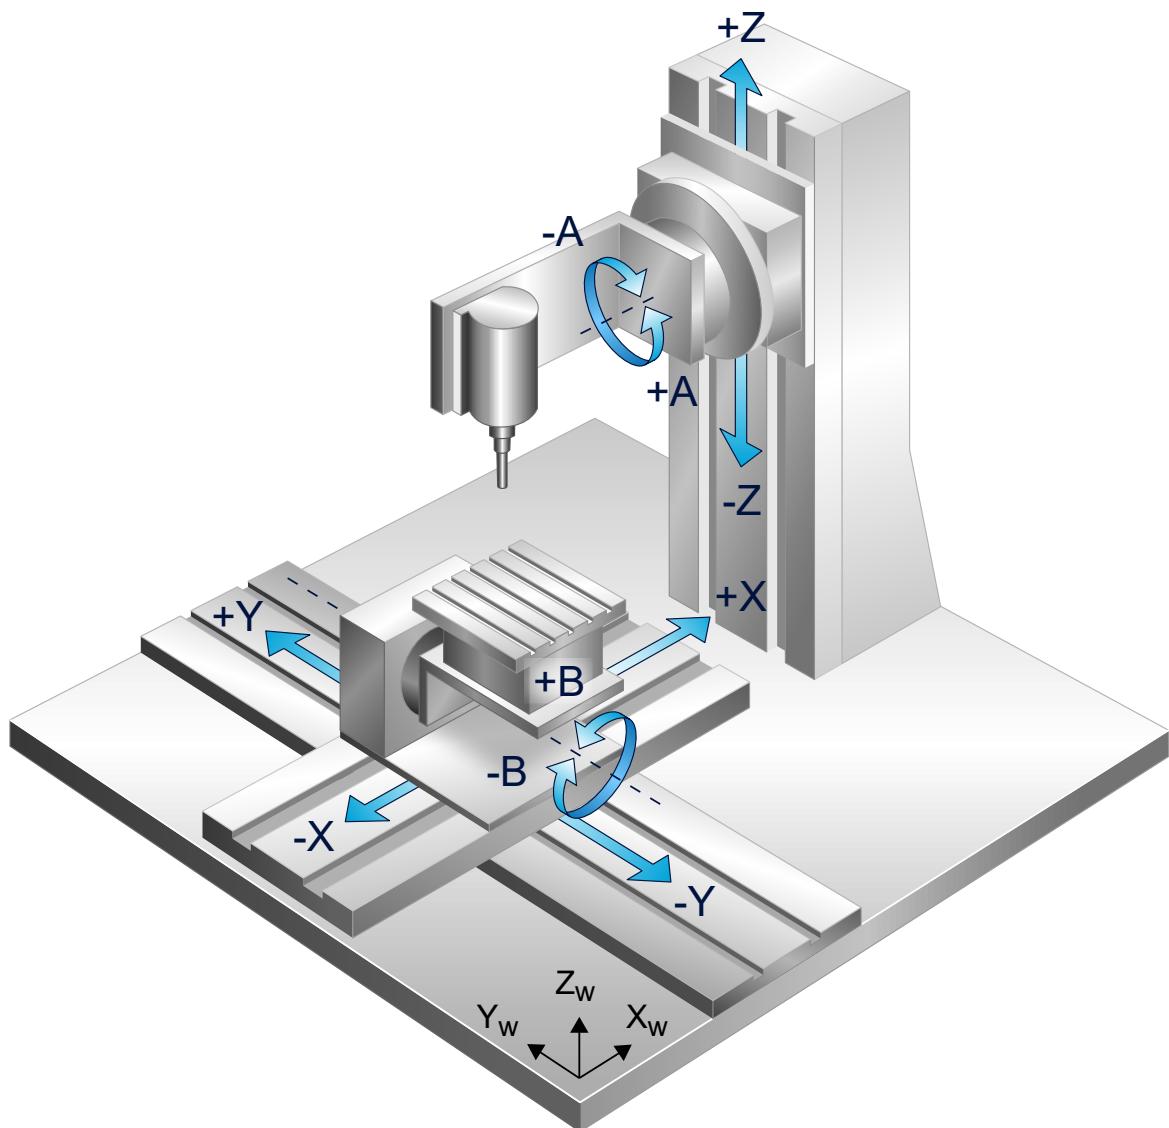


Fig. 43: Axis configuration of 5-axis machine

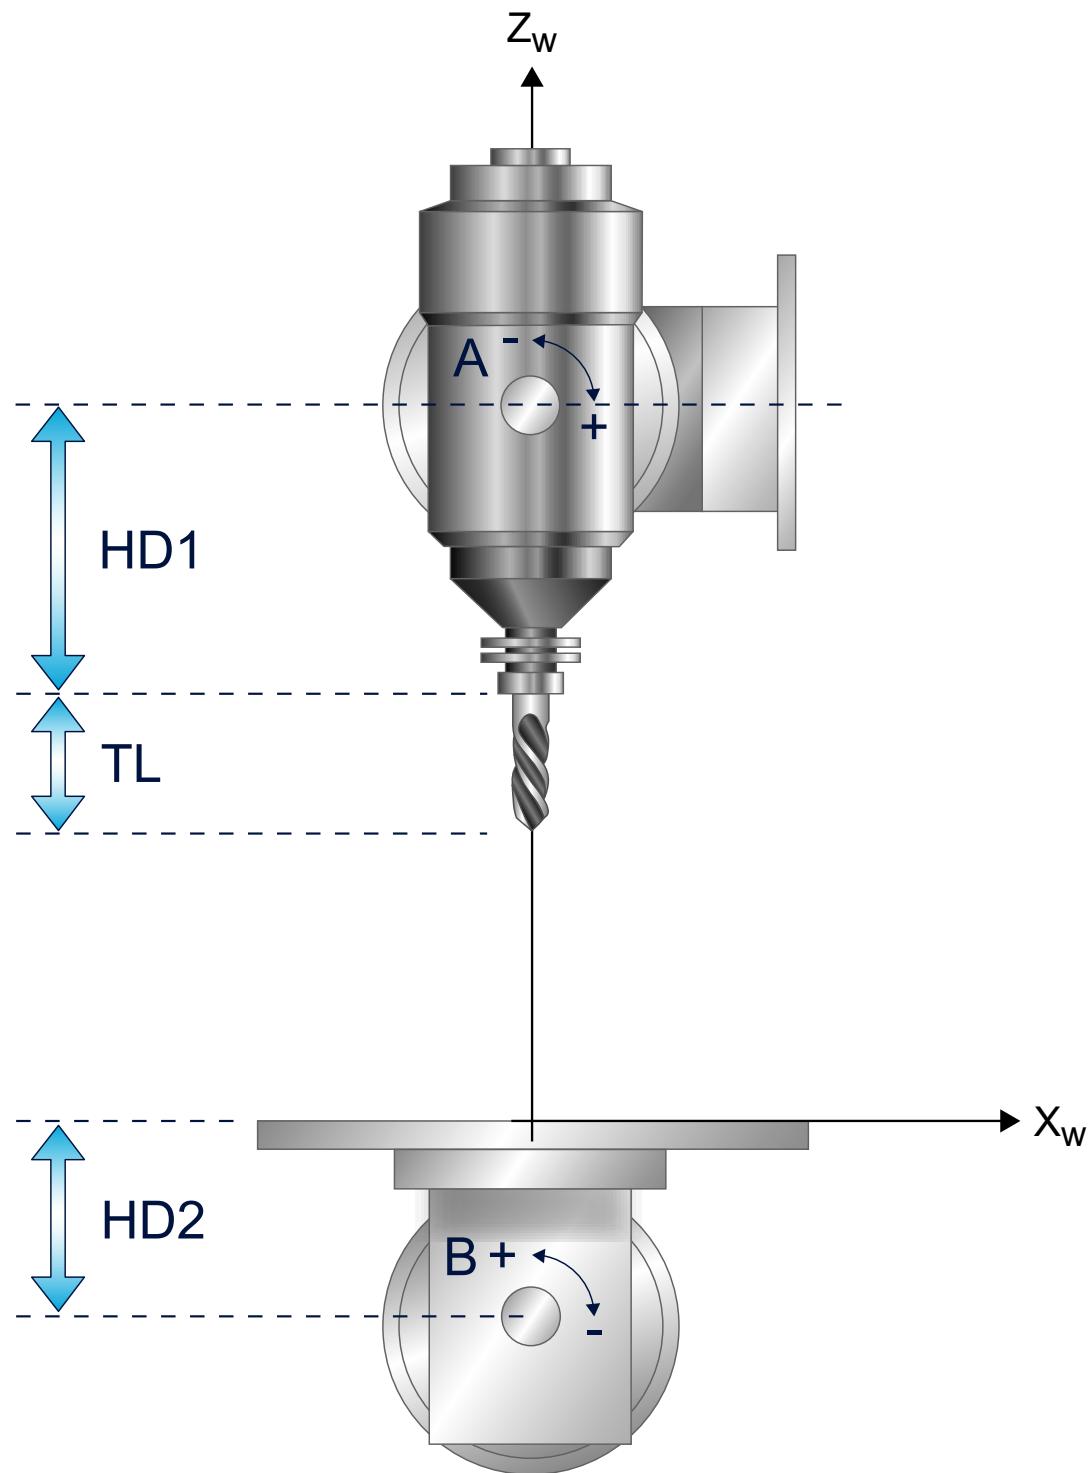


Fig. 44: Kinematic offsets

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z axis offset tool holding device to rotation point A axis	10 E-4 mm
HD2	1	Distance rotation point B axis to workpiece platform	10 E-4 mm
HD4	3	Motion direction rotary axis A	[-]
HD5	4	Motion direction rotary axis B	[-]

2.20

KIN_TYP_25 – 5-axis kinematics with plasma/laser head

Kinematic structure

The kinematic structure consists of 3 translatory NC axes and 2 rotary NC axes in the tool. As a special feature, the effective tool length with these kinematics changes depending on the A angle.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, C, A	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, C, A	-

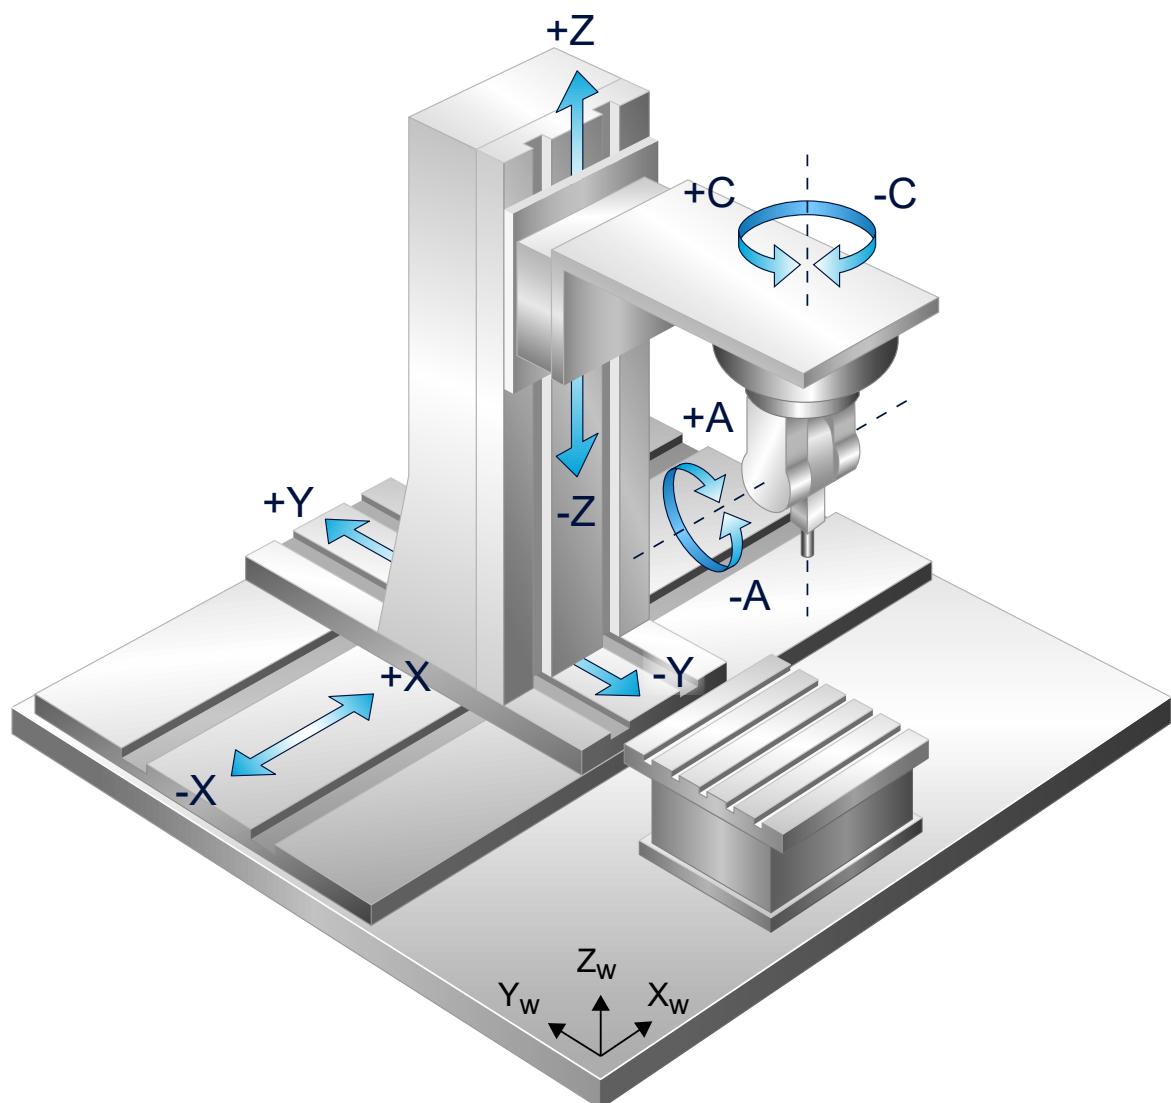


Fig. 45: 5-axis kinematics (plasma/laser head)

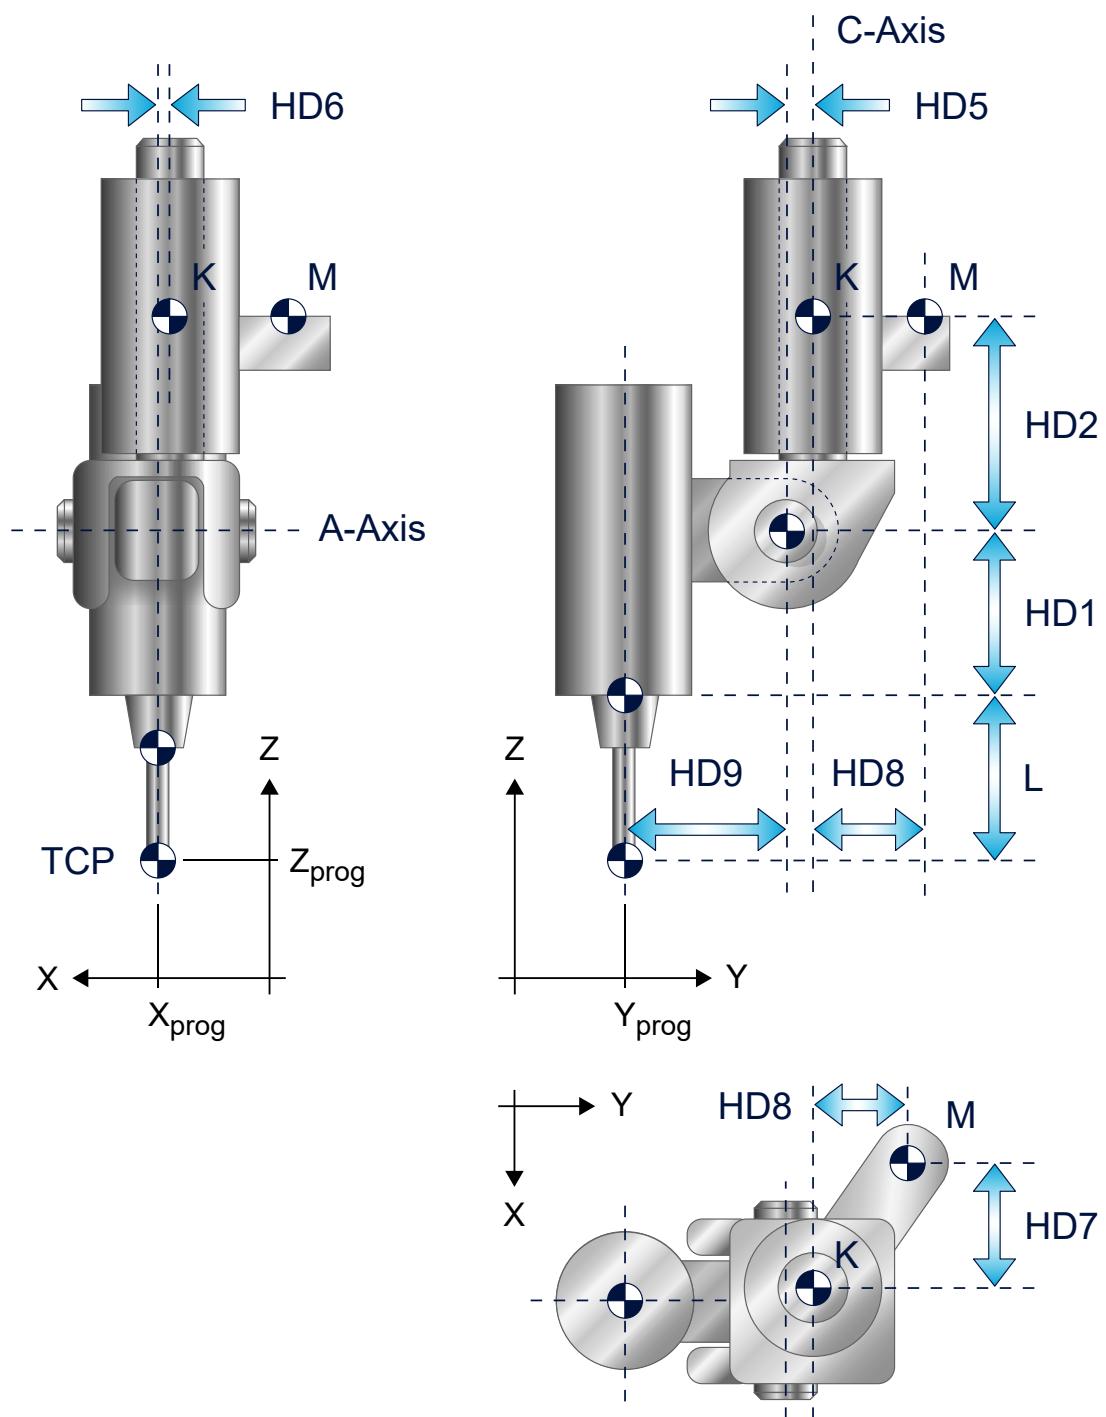


Fig. 46: 5-axis plasma/laser head (zero position where HD3 = 0, AM=0, HD4=0, CM=0)

The M and K points in the figure above are two reference points

(M)achine reference point and (K)inematic reference point

The ACS offset between the points M and K is a static offset, i.e. it is independent of the angular position of the rotary axes C, A.

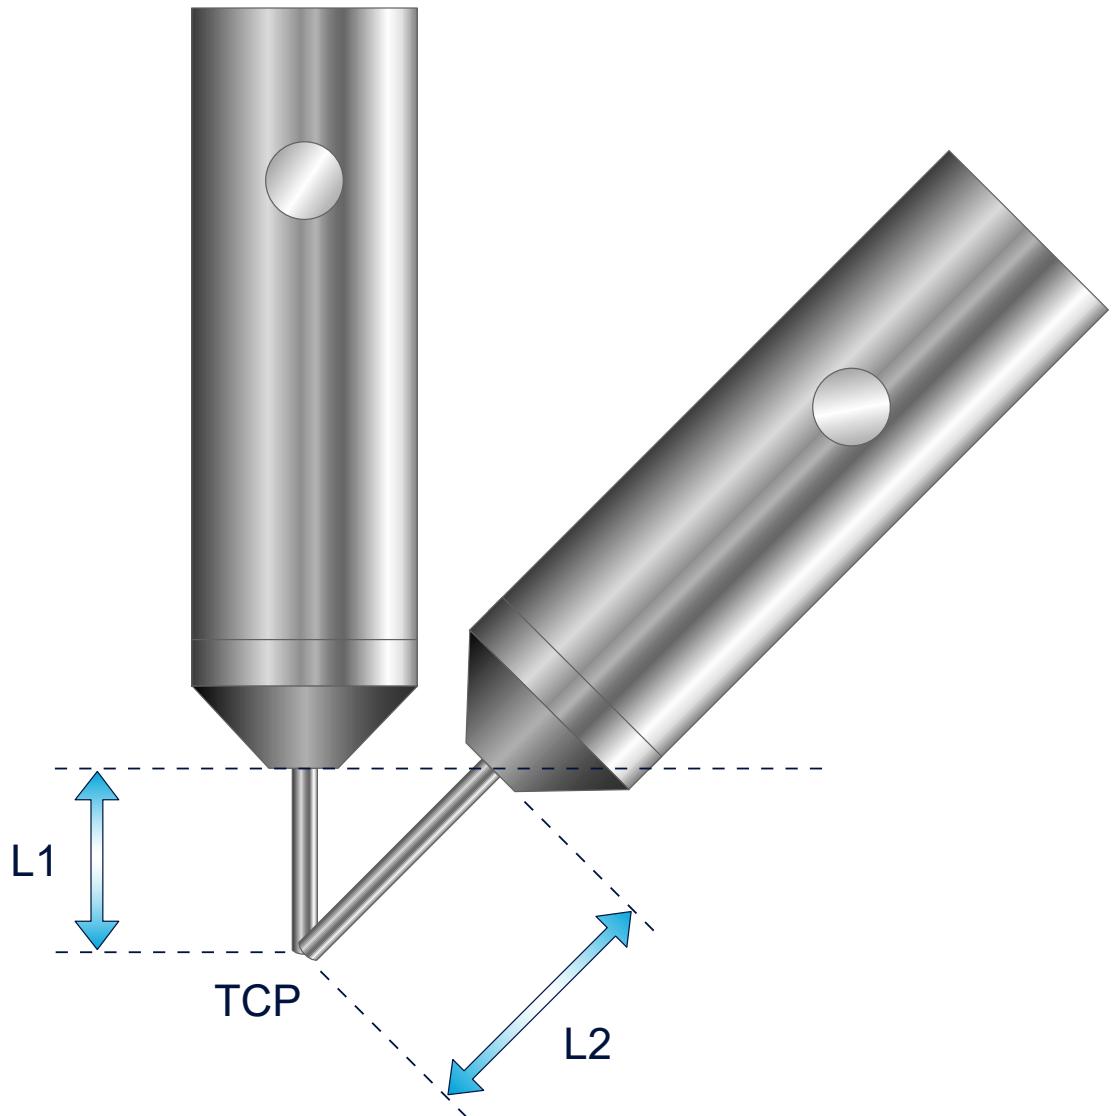


Fig. 47: When the head is in oblique position, the torch tip is at a constant height above the workpiece, i.e. where $A \neq 0$ is the effective length $L_2 > L_1$.

To limit the active length L_2 and therefore keep the required machine compensation movements as small as possible, select a small head inclination. (Maximum recommended: ± 45 degrees)

The inclined position is limited by configuring the software limit switches (P-AXIS-00177/ P-AXIS-00178) of the A axis.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z axis offset from torch tip to rotation point A axis (swivel axis)	10 E-4 mm
HD2	1	Z axis offset rotary axis A to tool head reference point	10 E-4 mm
HD3	2	Rotary angular offset A axis (default 0)	10 E-4°
HD4	3	Rotary angular offset C axis (default 0)	10 E-4°
HD5	4	Y axis offset rotation point C axis	10 E-4 mm
HD6	5	X axis offset rotation point C axis	
HD7	6	Static head offset in X (default 0)	10 E-4 mm
HD8	7	Static head offset in Y (default 0)	10 E-4 mm
HD9	8	Y axis offset torch axis to rotation point A axis	10 E-4 mm

2.21 KIN_TYP_28 – 5-axis kinematics

Kinematic structure

The kinematic structure consists of 3 translatory NC axes and 2 rotary NC axes in the tool. The physical angle position of the head C, A is adjusted by 2 gear-linked axes.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, C, A (X, Y, Z, C1, C2)	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, C(C1), A(C2)	-

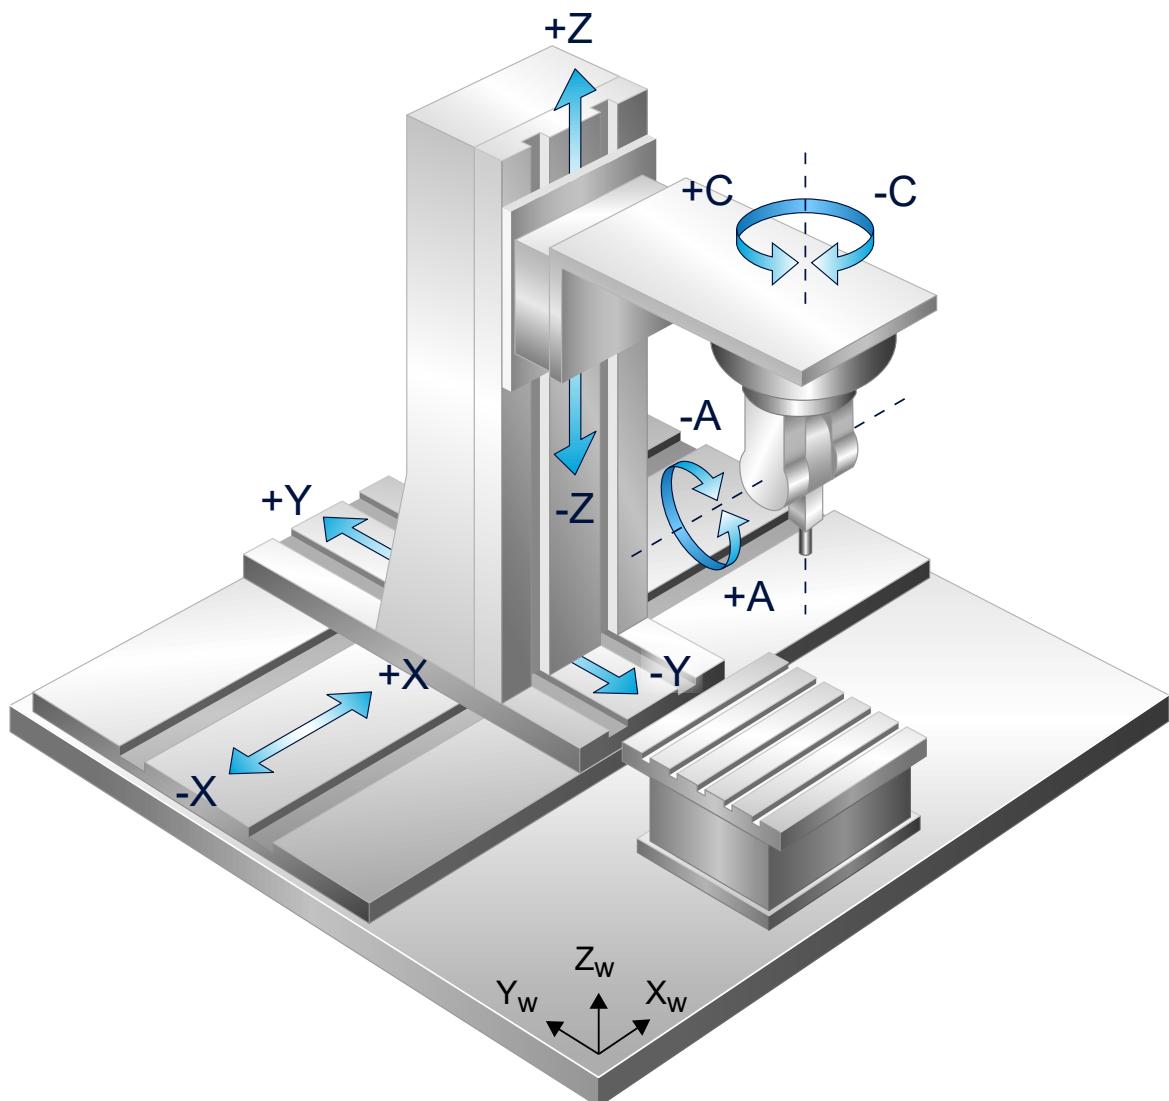


Fig. 48: 5-axis kinematics

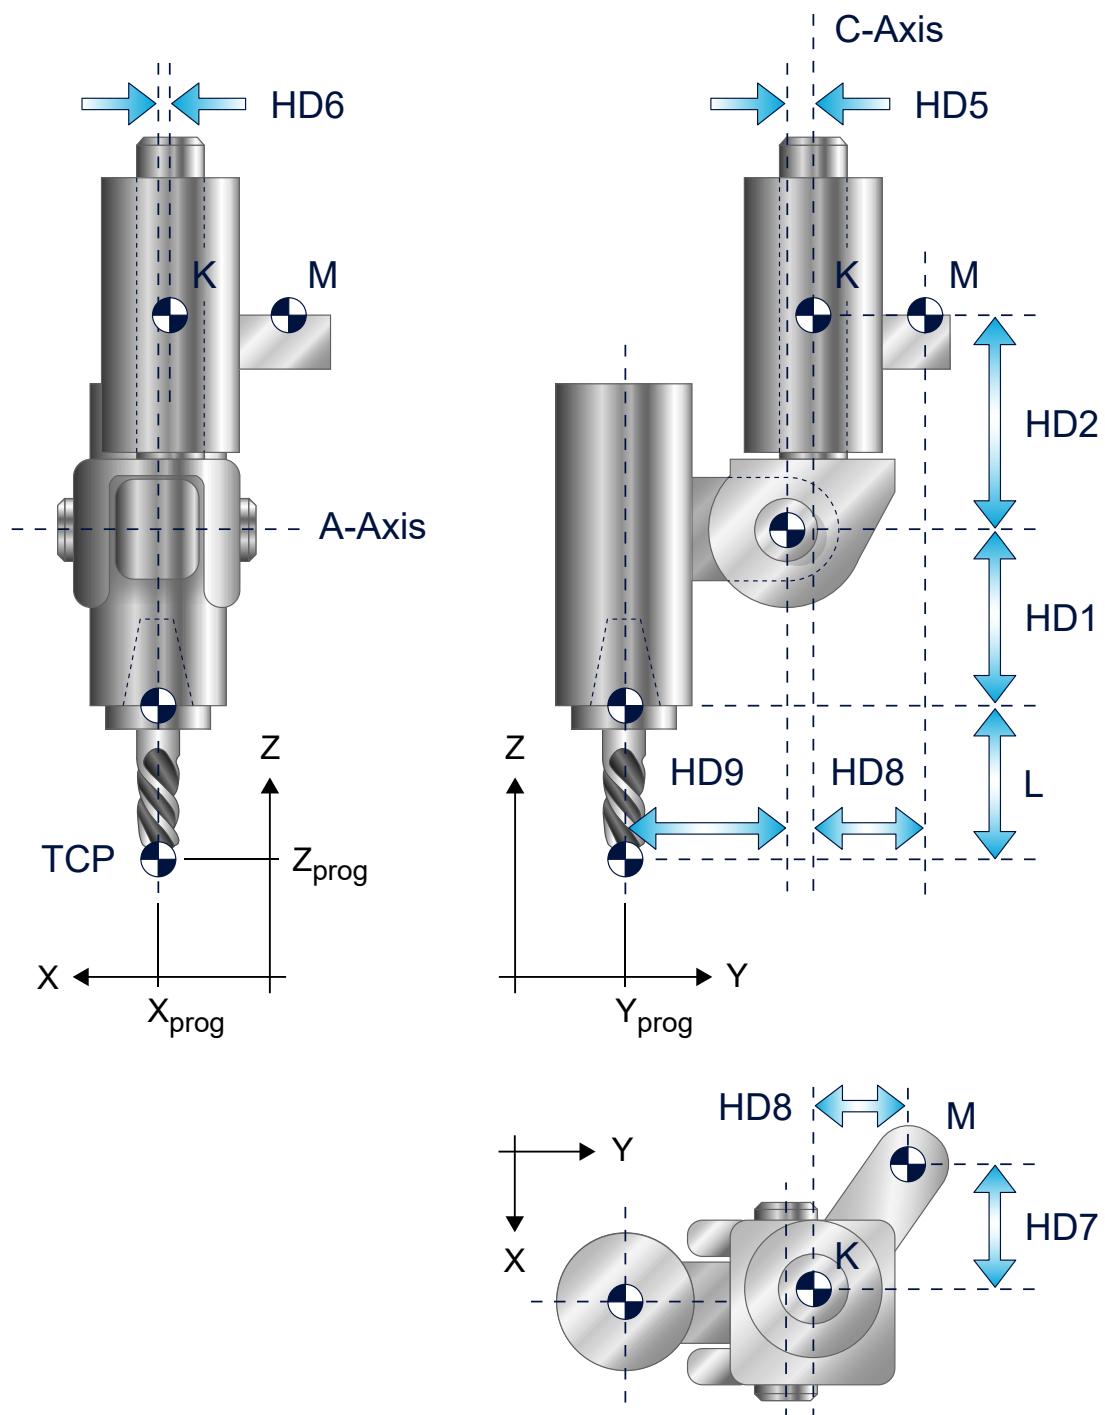


Fig. 49: Tool head (zero position where $\text{HD3} = 0, A=0, \text{HD4}=0, C=0$)

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z axis offset from tool holding device to rotation point A axis (swivel axis)	10 E-4 mm
HD2	1	Z axis offset rotary axis A to tool head reference point	10 E-4 mm
HD3	2	Rotary angular offset A axis (default 0)	
HD4	3	Rotary angular offset C axis (default 0)	
HD5	4	Y axis offset rotation point C axis	10 E-4 mm
HD6	5	X axis offset rotation point C axis	10 E-4 mm
HD7	6	Static head offset in X (default 0)	10 E-4 mm
HD8	7	Static head offset in Y (default 0)	10 E-4 mm
HD9	8	Y axis offset milling tool axis to rotation point A axis	10 E-4 mm
HD10	9	n.a.	[-]
HD11	10	Origin offset CA gear link	10 E-4°
HD12	11	Gear link factor numerator	[-]
HD13	12	Gear link factor denominator	[-]
HD14	13	Sign rotary axis C	[-]
HD15	14	Sign rotary axis A	[-]
HD16	15	A factor numerator	[-]
HD17	16	A factor denominator	[-]

The gear link between C and A is absolute and is executed as shown in the following equations:

$$CM = CW$$

$$AM = AW * k_a + NP0 + k_{ca} * CW$$

where

$$k_{ca} = \frac{HD12}{HD13} : C \rightarrow A \text{ gear link factor}$$

$$ka = \frac{HD16}{HD17} : \text{A resolution factor}$$

$$NP0 = HD11 : \text{Origin offset gear link}$$

The head rotary axes must be adjusted either as linear axes or as rotary axes with a sufficiently large modulo range. The SLS monitor in the channel acts on the drive positions depending on the limits in set in the MDS.

2.22**KIN_TYP_30 – 4-axis kinematics****Kinematic structure**

The kinematic structure consists of 3 translatory NC axes and 1 rotary NC axis in the tool.

Axis configuration in the NC channel	
Axis identifier	X, Y, Z, A
Axis index	0, 1, 2, 3
Kinematic structure	
Tool axes	Workpiece axes
NC axes	X, Y, Z, A

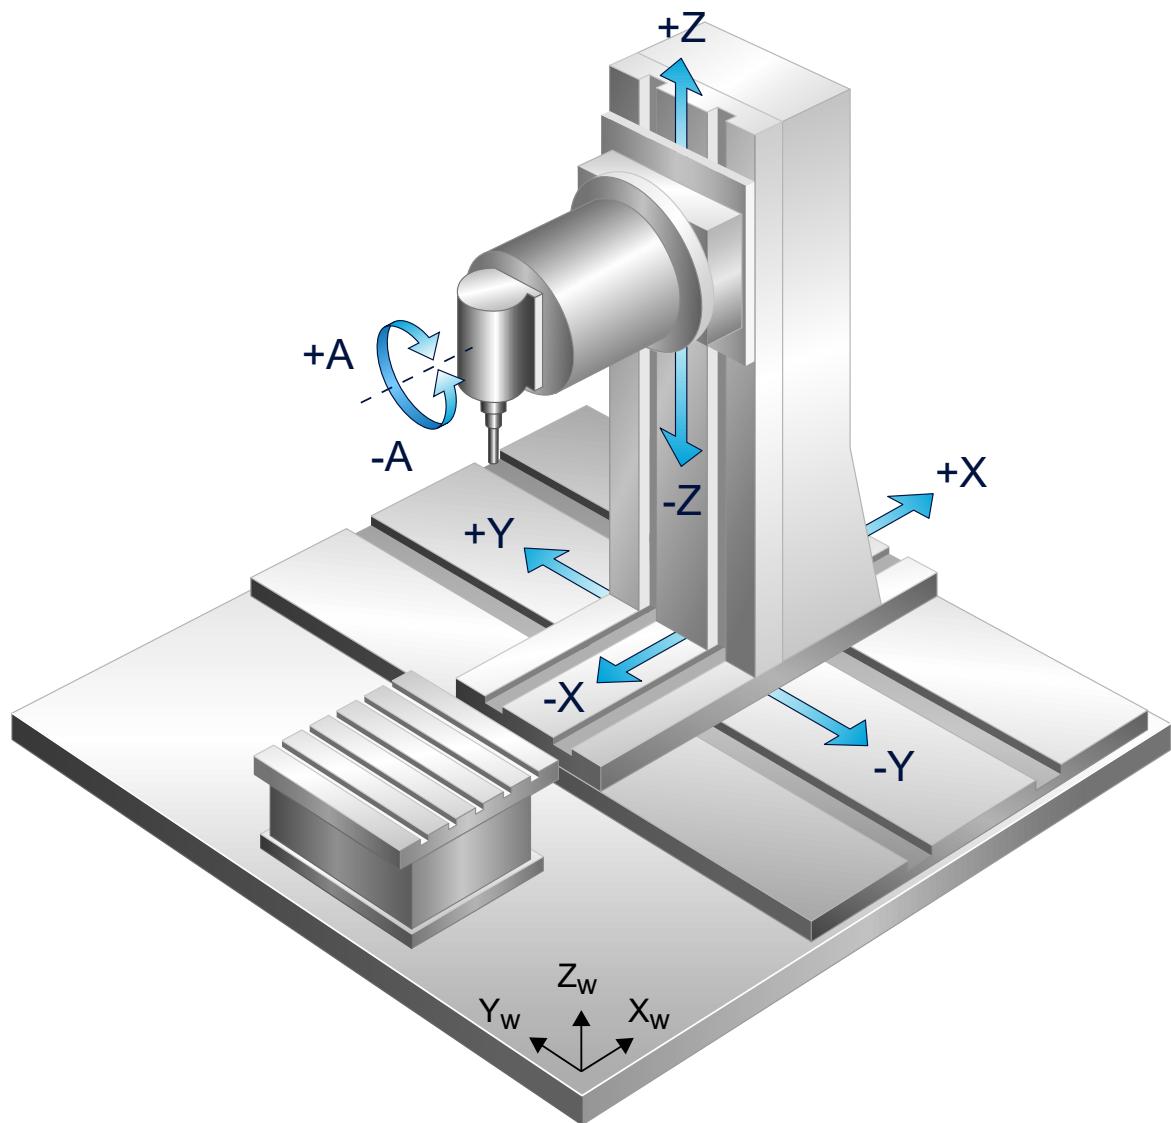


Fig. 50: 4-axis kinematics (drilling and milling unit)

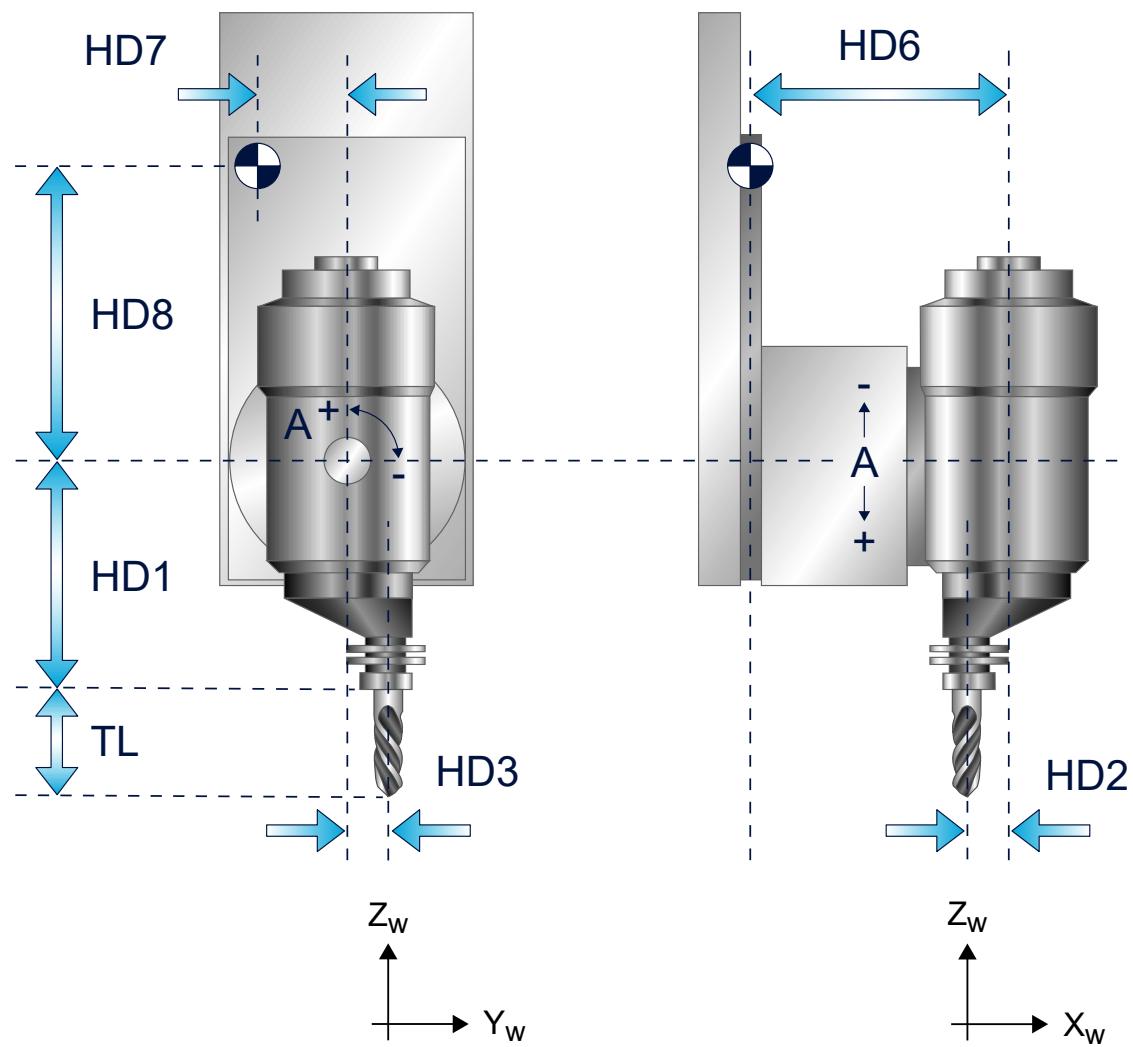


Fig. 51: Offsets of 4-axis kinematics

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z axis offset tool holding device to rotation point A axis	10 E-4 mm
HD2	1	X axis offset tool holding device to rotation point A axis	10 E-4 mm
HD3	2	Y axis offset tool holding device to rotation point A axis	10 E-4 mm
HD4	3	Rotation direction sign A axis: 1 (default), -1	[-]
HD5	4	Rotary offset A axis	10 E-4°
HD6	5	X offset rotation point A axis to reference point tool slide	10 E-4 mm
HD7	6	Y offset rotation point A axis to reference point tool slide	10 E-4 mm
HD8	7	Z offset rotation point A axis to reference point tool slide	10 E-4 mm

2.23

KIN_TYP_33 – 5-axis kinematics with oblique tool head**Kinematic structure**

The kinematic structure consists of 3 translatory NC axes and 2 rotary NC axes in the tool. As a special feature this kinematic structure requires no compensation motions of translatory axes due to the mechanical construction when the rotary axes rotate.

Axis configuration in the NC channel	
Axis identifier	X, Y, Z, C, A
Axis index	0, 1, 2, 3, 4
Kinematic structure	
Tool axes	
NC axes	X, Y, Z, C, A
Workpiece axes	
	-

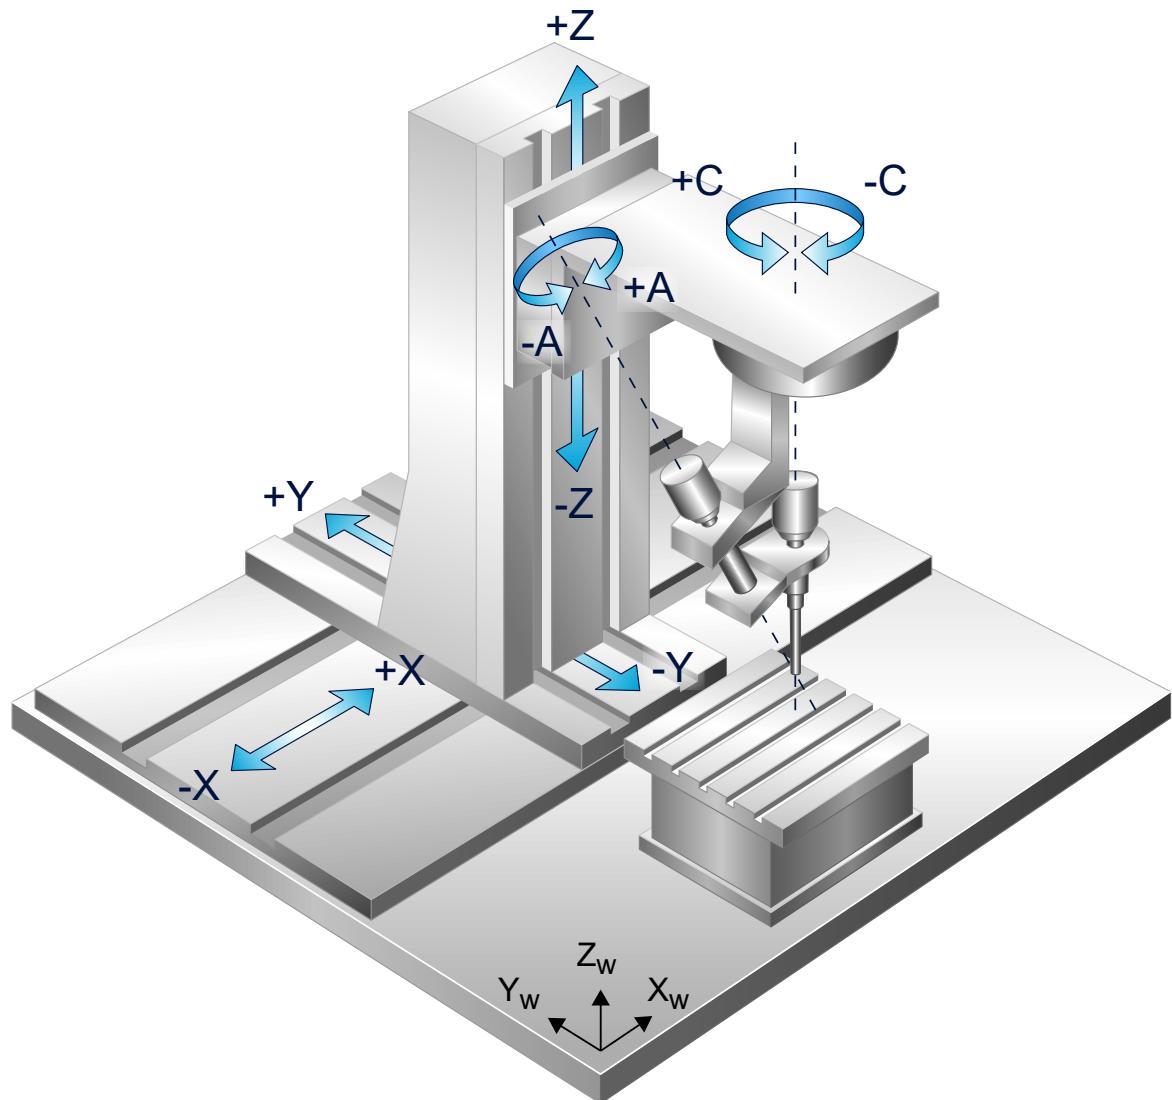


Fig. 52: 5-axis oblique tool head

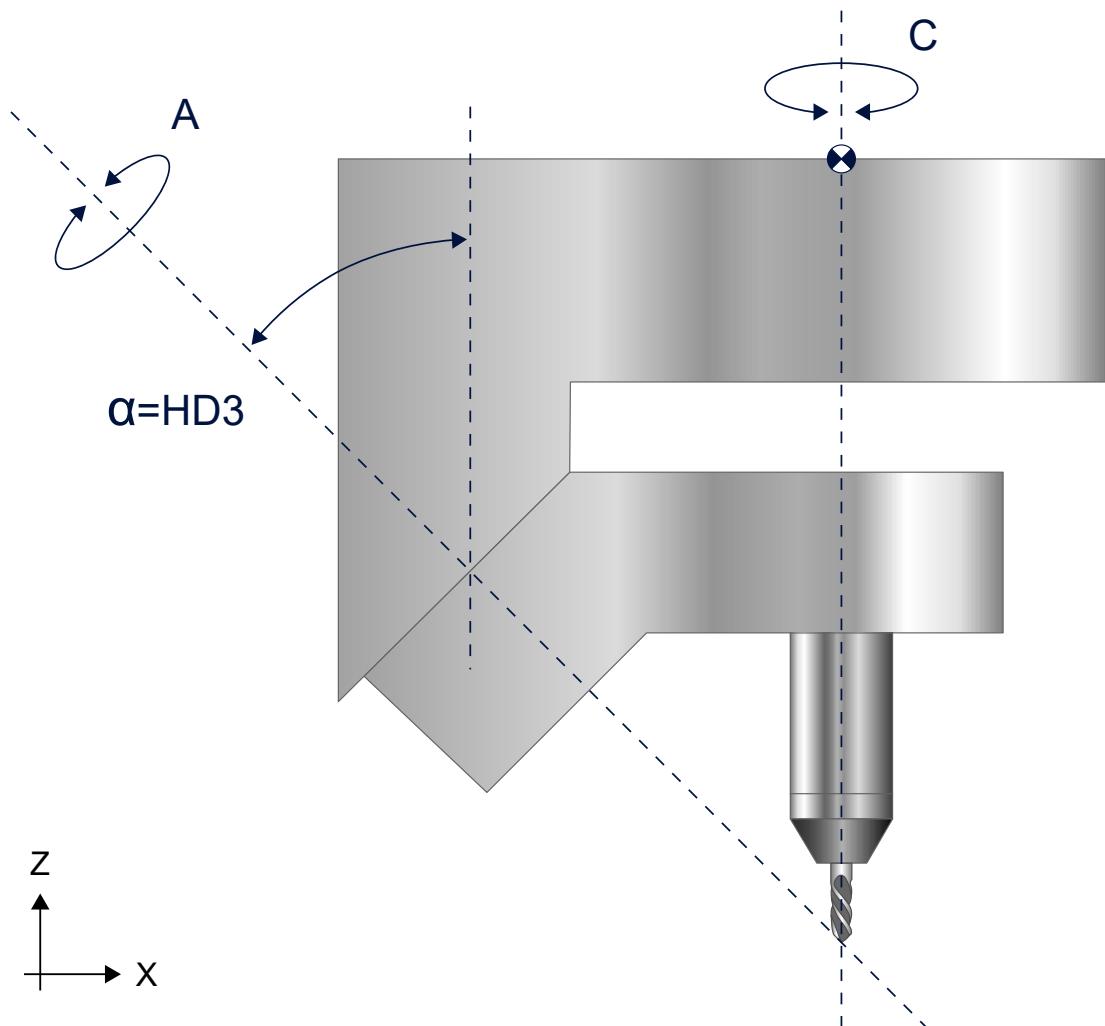


Fig. 53: Oblique tool head axis in zero position, $HD7=0$

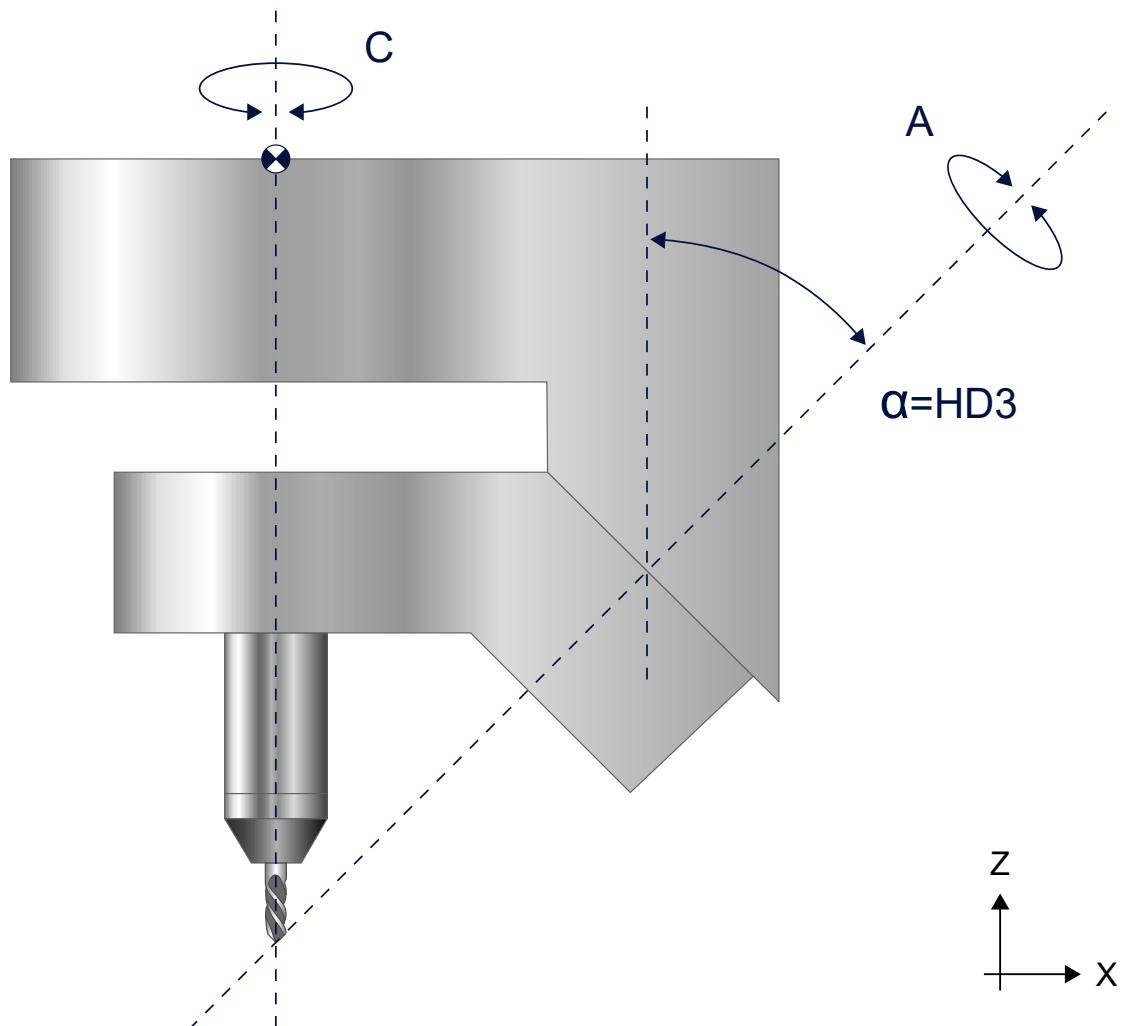


Fig. 54: Oblique tool head with 180 degree head offset in zero position, HD7=1

Offset data of kinematic structure

HD offset	param[i]	Description	Unit
HD3	2	Head angle	10 E-4°
HD4	3	Static X offset	10 E-4 mm
HD5	4	Static Y offset	10 E-4 mm
HD6	5	Static Z offset	10 E-4 mm
HD7	6	Orientation C axis head; required if head has a 180° offset in zero position	[-]

2.24**KIN_TYP_34 – 4-axis kinematics with X/C workpiece table****Kinematic structure**

The kinematic structure consists of 2 translatory NC axes in the tool, 1 translatory and 1 rotary NC axis in the workpiece.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, C	
Axis index	0, 1, 2, 3	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	Y, Z	X, C

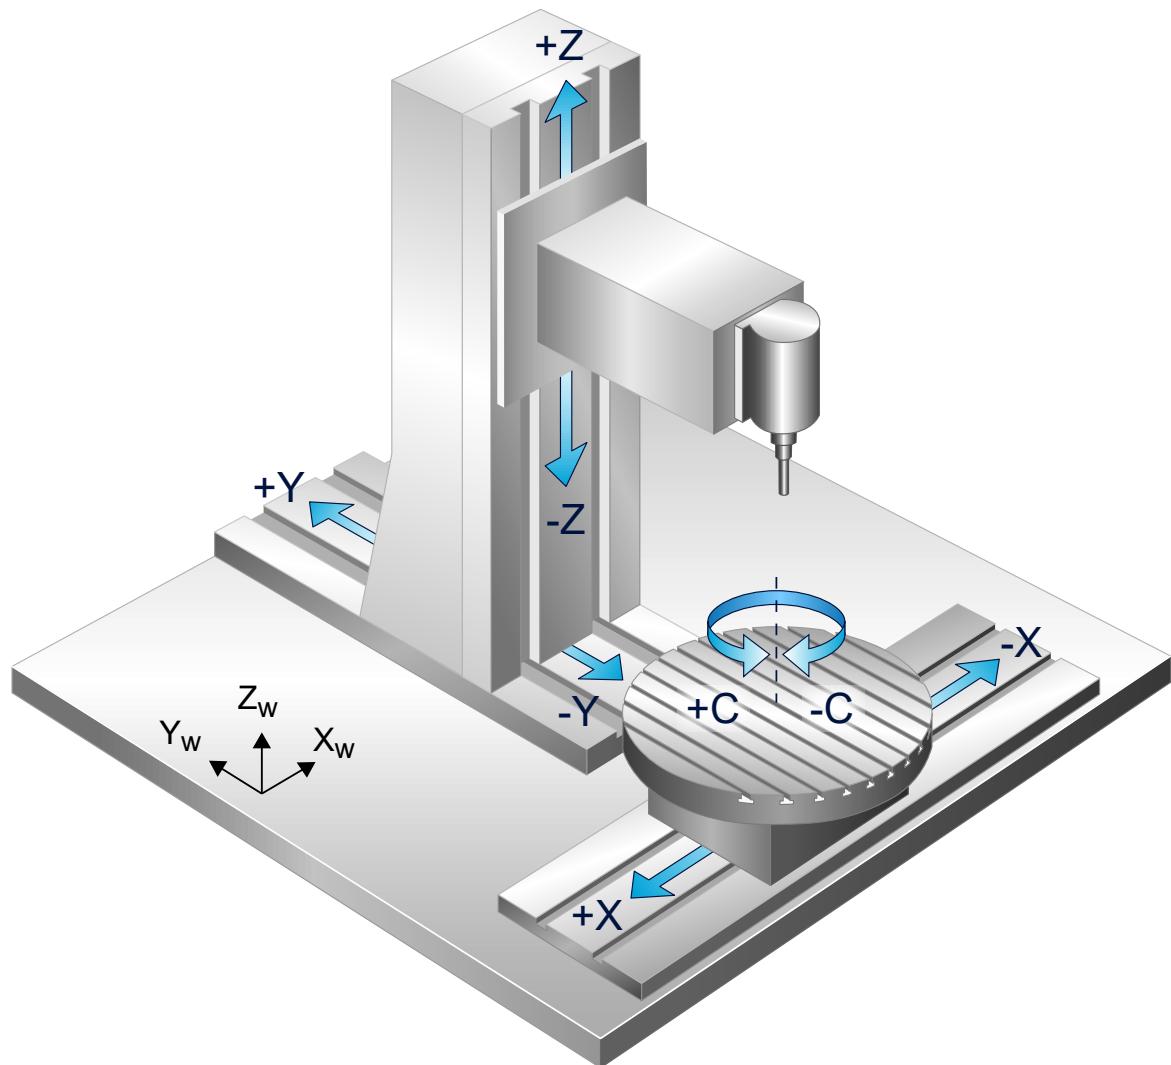


Fig. 55: 4-axis C axis kinematics

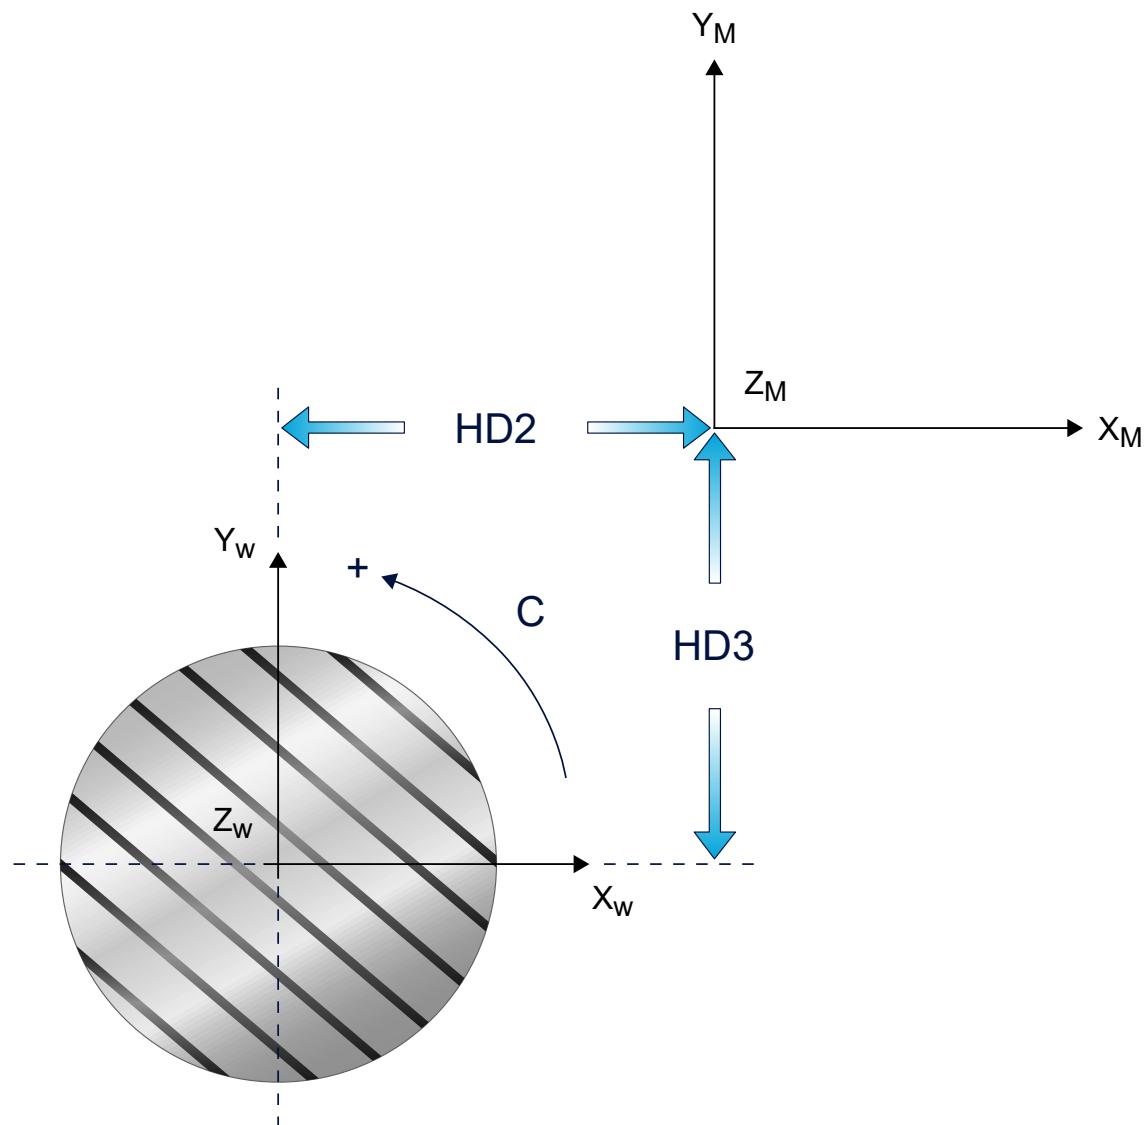


Fig. 56: Origin offsets in rotary C axis workpiece holder

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD2	1	MCS offset X	10 E-4 mm
HD3	2	MCS offset Y	10 E-4 mm

2.25**KIN_TYP_37 – Flexpicker kinematics**

The strut kinematics referred to as Flexpicker consists of 3 rotary axes arranged at an offset of 120 degrees guiding 2 parallel struts via connecting levers. In turn, these struts guide the tool platform. Tool orientation is constant.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z (J1, J2, J3)	
Axis index	0, 1, 2	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z	-

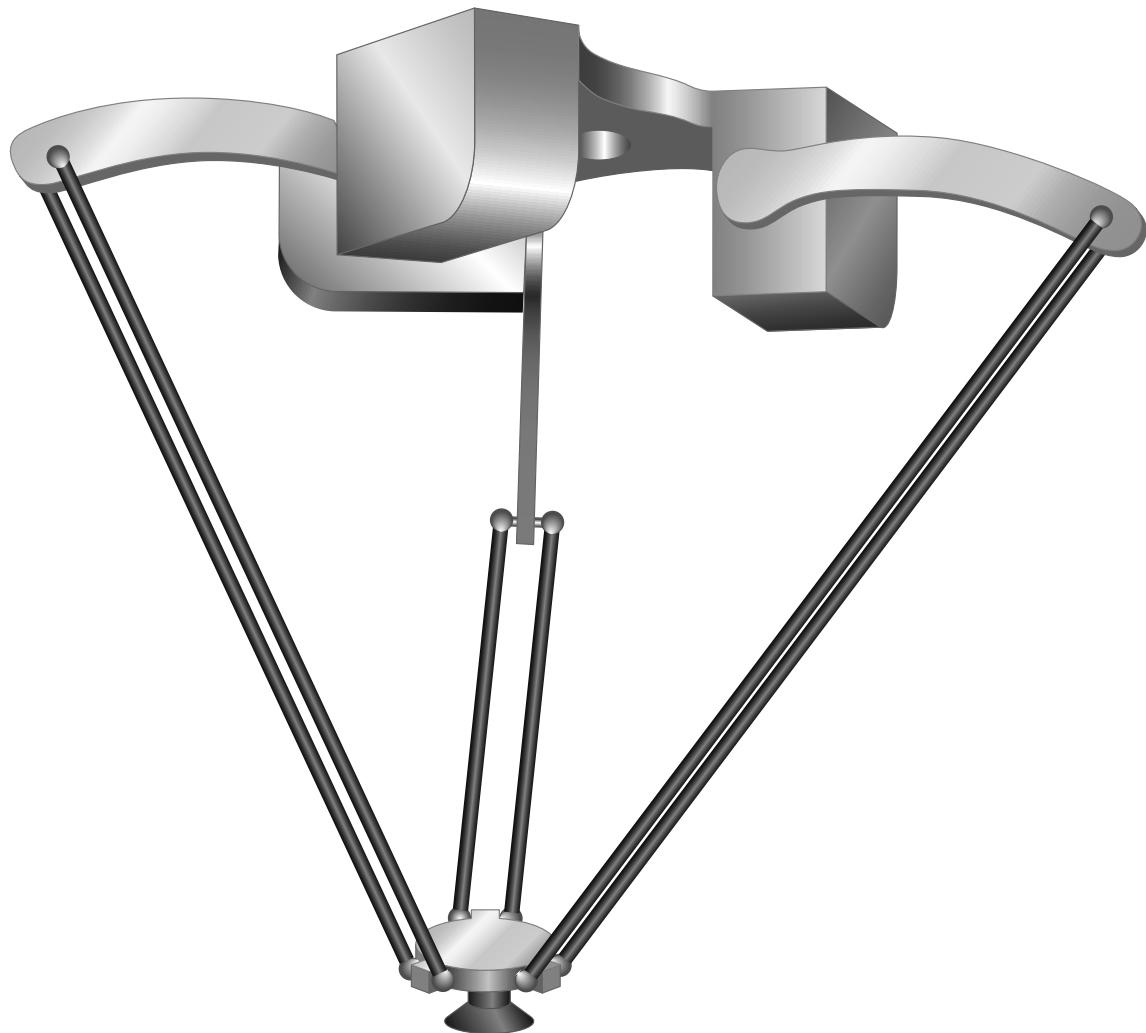


Fig. 57: Overhead Flexpicker kinematics

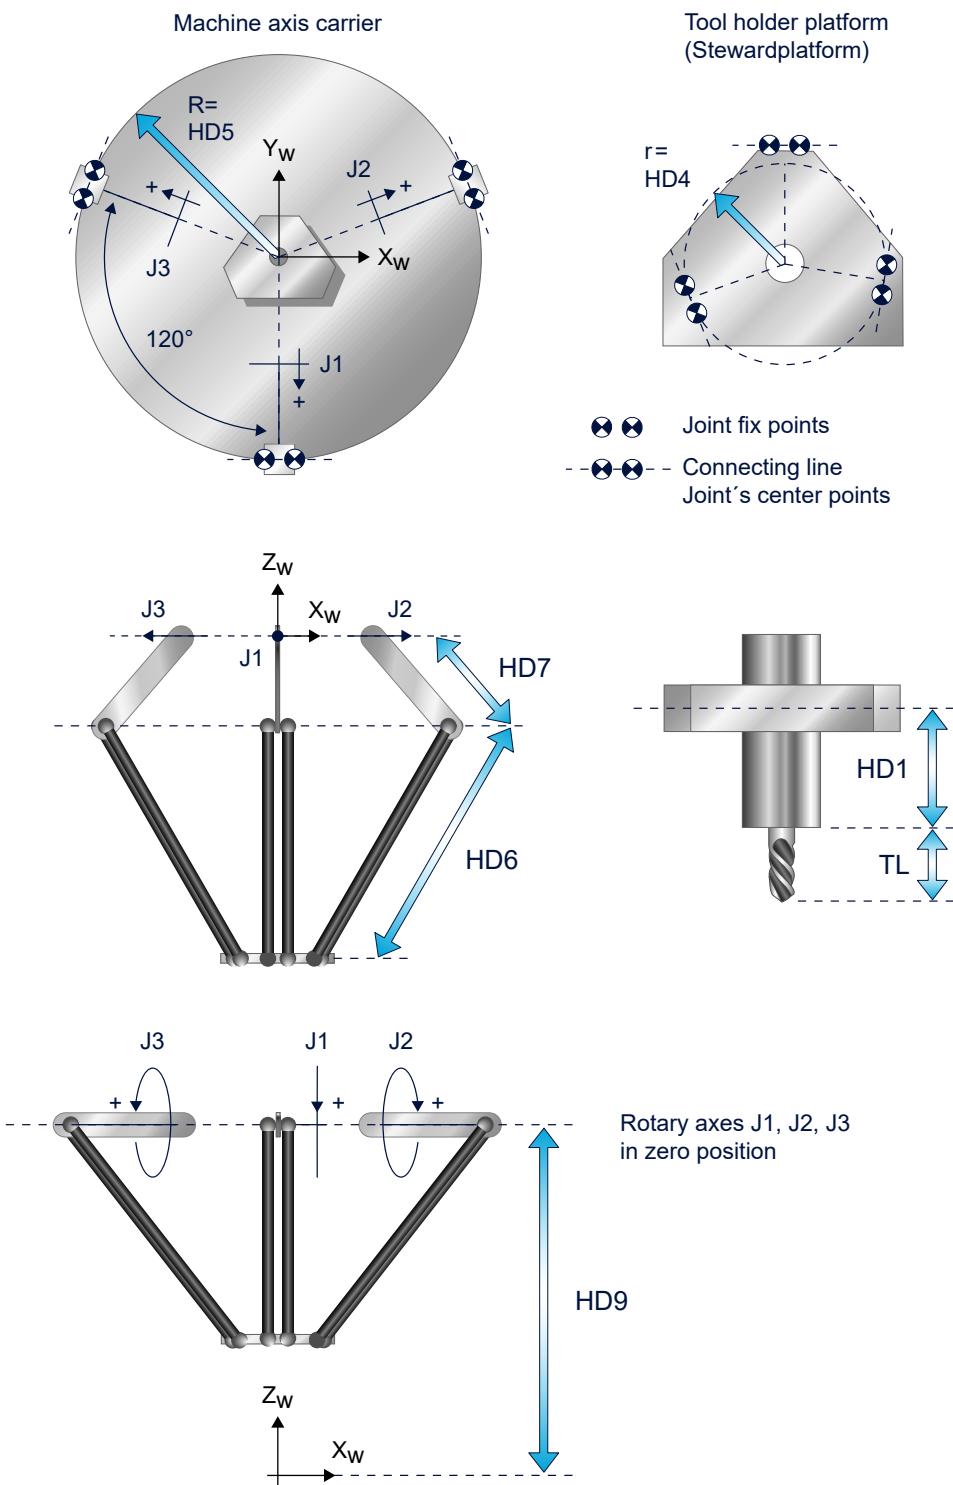


Fig. 58: Offset dimensions of Flexpicker kinematics

Offset data of kinematics:

HD offset	param[i]	Description	Unit
HD1	0	Tool offset Z	10 E-4 mm
HD2	1	n.a.	[-]
HD3	2	n.a.	[-]
HD4	3	Radius of connecting line of bottom joint fixed points	10 E-4 mm
HD5	4	Radius of connecting line of top joint fixed points	10 E-4 mm
HD6	5	Bottom strut/arm length	10 E-4 mm
HD7	6	Top strut/arm length (connecting lever)	10 E-4 mm
HD8	7	Angular offset zero position J1 (ideal zero position of top arm horizontal)	10 E-4°
HD9	8	Angular offset zero position J2 (ideal zero position of top arm horizontal)	10 E-4°
HD10	9	Angular offset zero position J3 (ideal zero position of top arm horizontal)	10 E-4°
HD11	10	Limit of minimum joint angle J1 to J3	10 E-4°
HD12	11	Limit of maximum joint angle J1 to J3	10 E-4°
HD13	12	Z zero offset Cart. workpiece coordinate system	10 E-4 mm

The Cartesian coordinate system lies in the origin of the motor mount. The parameter HD11 can shift the system origin so that it is located below the motor mount and the tool holder platform.

By default, the strut connecting levers must be horizontal in the drive zero position. If this is not the case, the angle zero position can be corrected for the internal kinematic model by the parameters HD8, HD9 and HD10. When all rotary axes move in positive rotation, the TCP moves in negative Z direction.

Example: Connecting lever in horizontal position, drive position: 900000 [10 E-4°]

HD8, HD9, HD10: 900000 [10 E-4°]



Notice

This kinematic transformation was developed in collaboration with Esslingen University (www.hs-esslingen.de).

2.26**KIN_TYP_52 – 5-axis kinematics with A/B workpiece table****Kinematic structure**

The kinematic structure consists of 3 translatory axes and 2 rotary axis in the workpiece.

Axis configuration in the NC channel	
Axis identifier	X, Y, Z, A, B
Axis index	0, 1, 2, 3, 4
Kinematic structure	
NC axes	Tool axes Workpiece axes
NC axes	X, Y Z, A, B

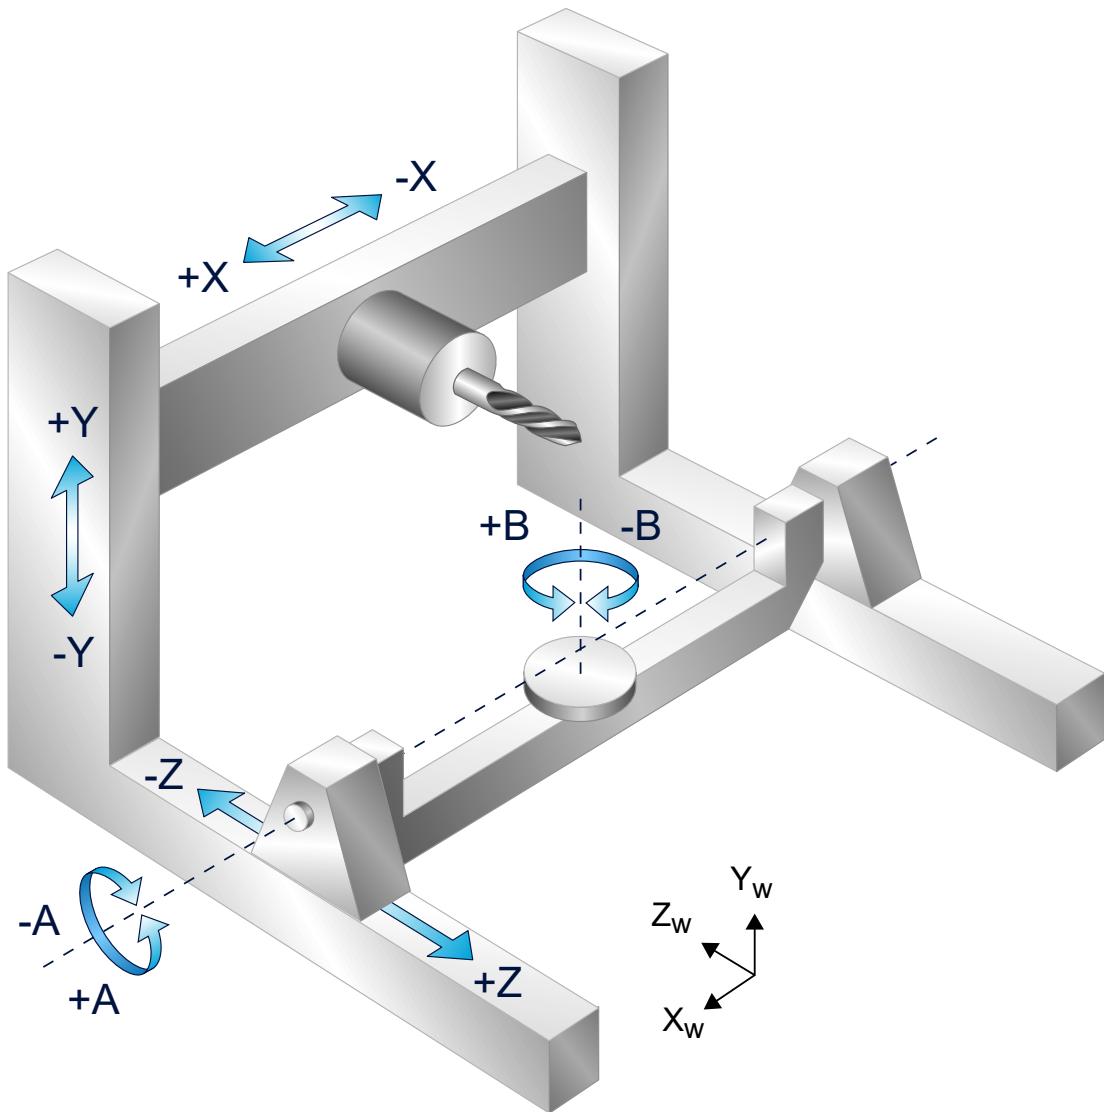


Fig. 59: Kinematics of 5-axis milling machine

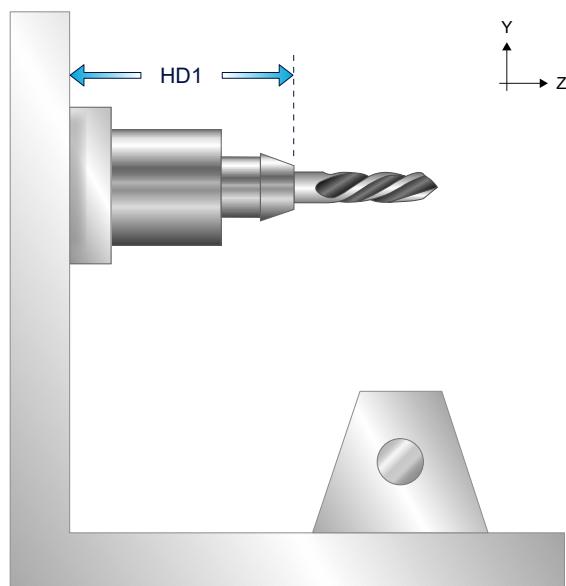


Fig. 60: Definition of offset parameters

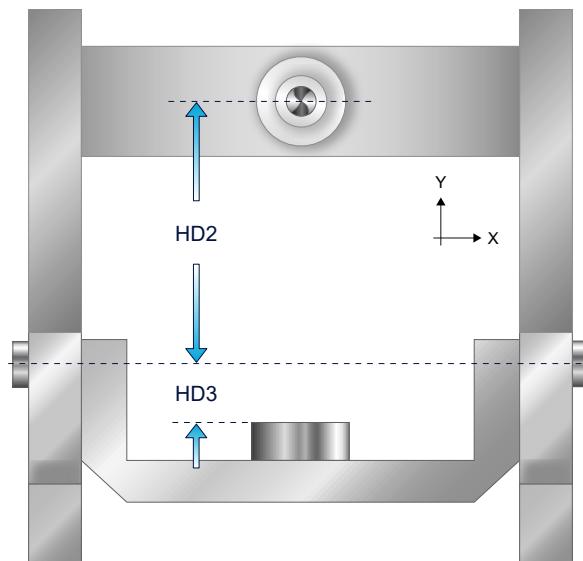


Fig. 61: Definition of offset parameters in front view

The figure above shows the kinematics for the machine axis positions Z = 0, Y = 0 and A = 0.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset up to tool clamping point.	10 E-4 mm
HD2	1	Y offset tool	10 E-4 mm
HD3	2	Y offset of workpiece coordinate system origin to rotary axis A axis	10 E-4 mm
HD4	3	Sign for direction of rotation A axis	[-]
HD5	4	Sign for direction of rotation B axis	[-]

2.27**KIN_TYP_57 – 5-axis kinematics with B/C workpiece table****Kinematic structure**

The kinematic structure consists of 3 translatory axes in the tool and 2 rotary axes in the work-piece.

Axis configuration in the NC channel	
Axis identifier	X, Y, Z, B, C
Axis index	0, 1, 2, 3, 4
Kinematic structure	
NC axes	Tool axes Workpiece axes
	X, Y, Z B, C

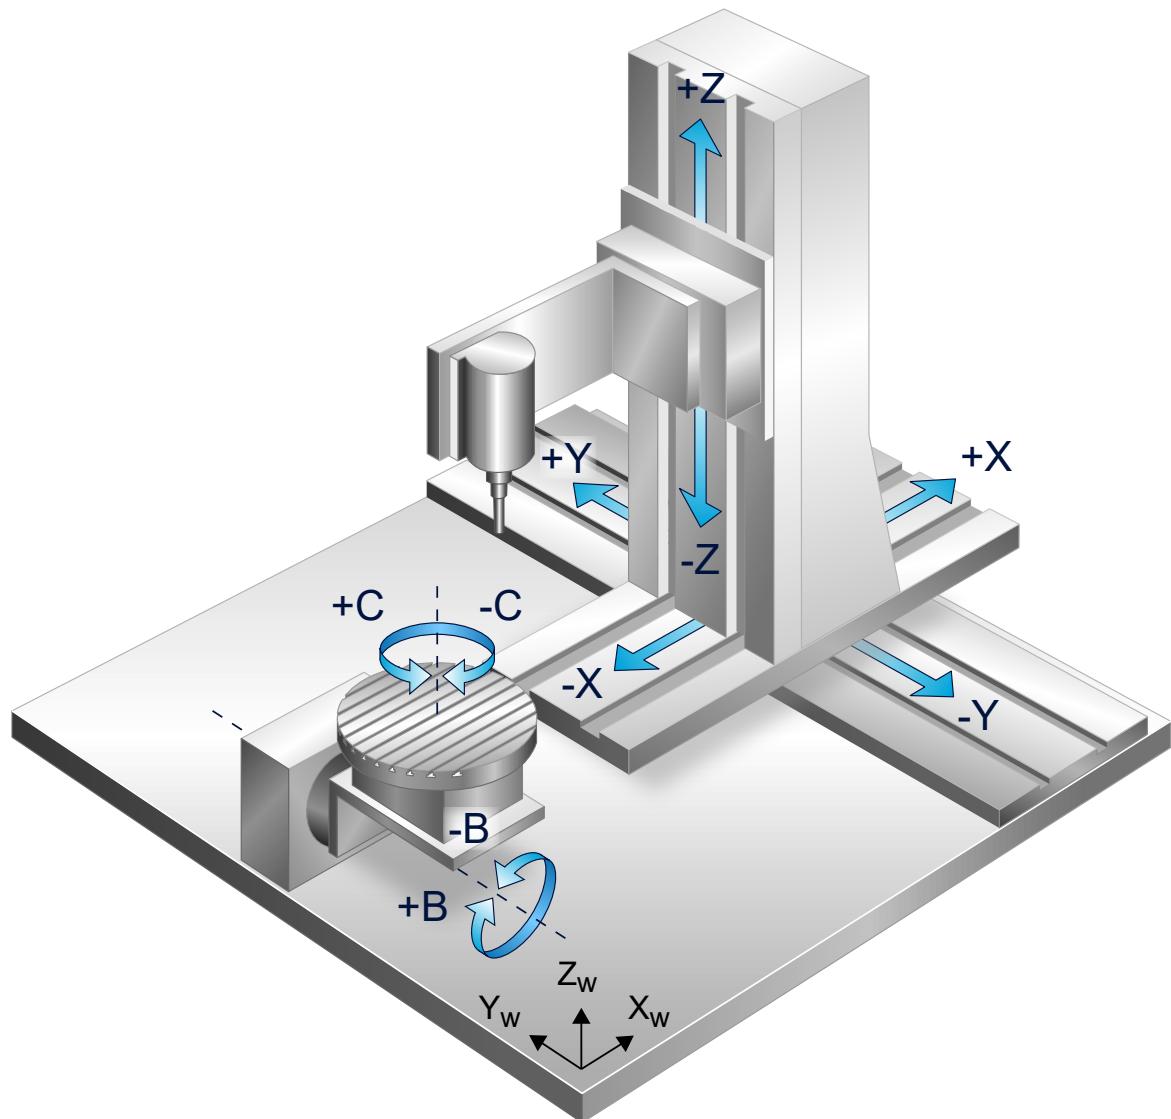


Fig. 62: Kinematics of 5-axis machine with BC workpiece table

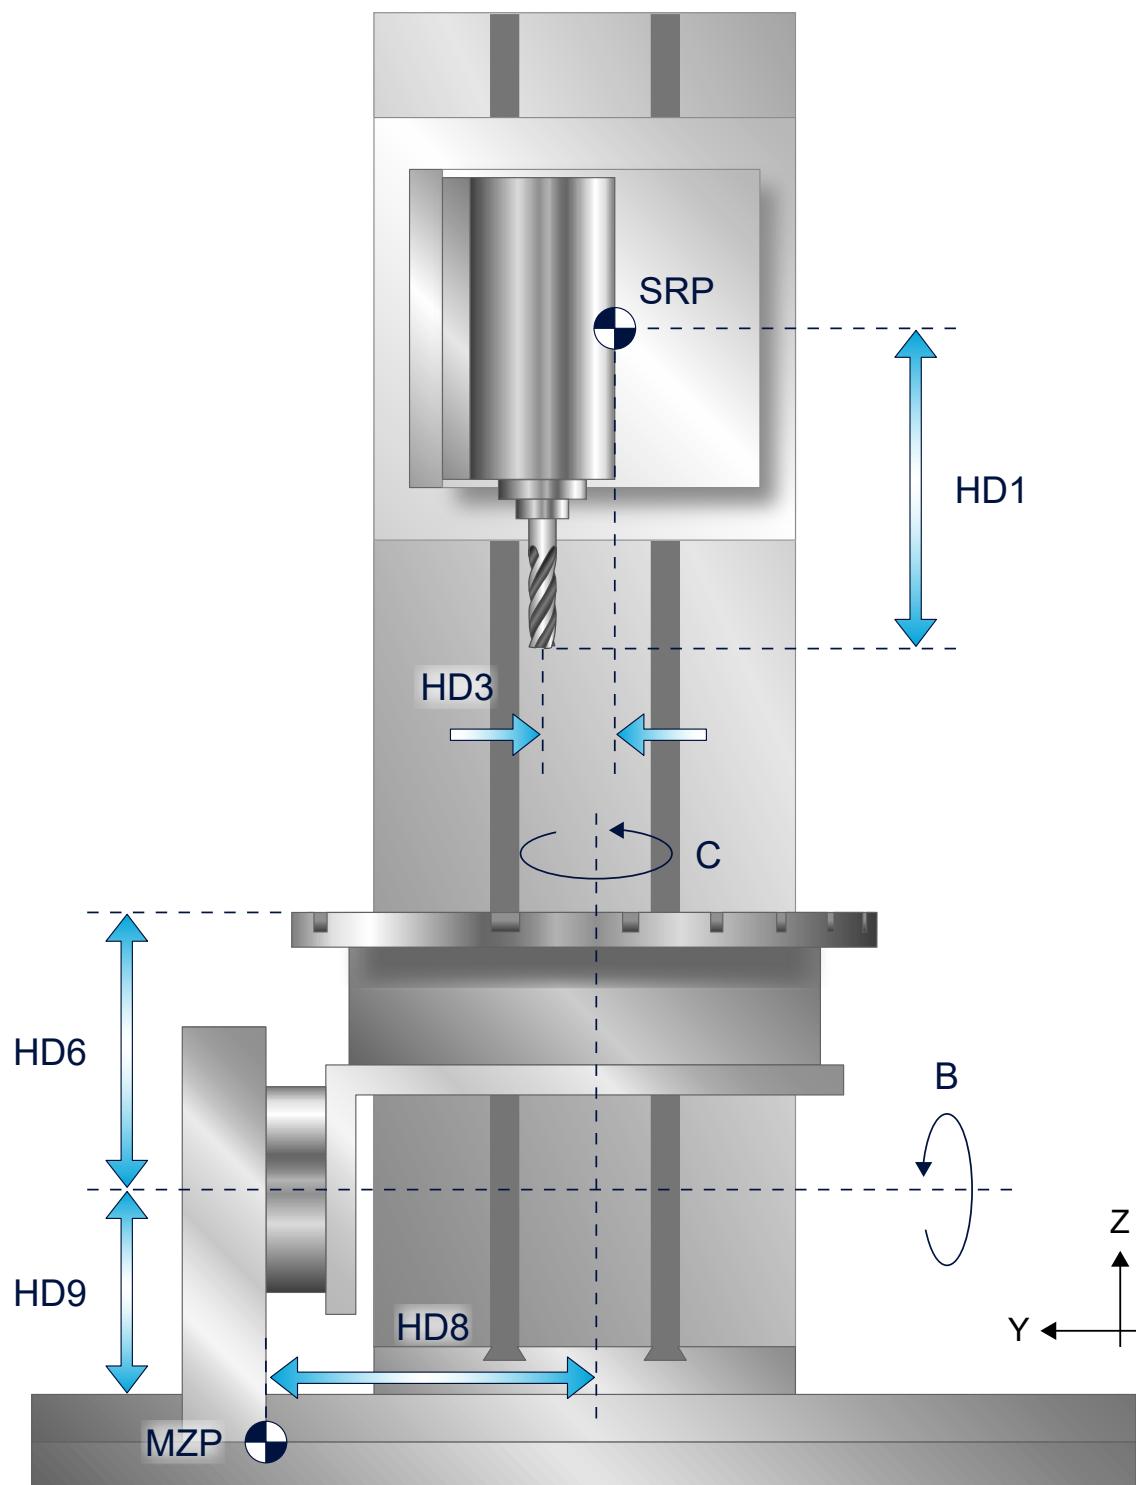


Fig. 63: Offsets in Y/Z view

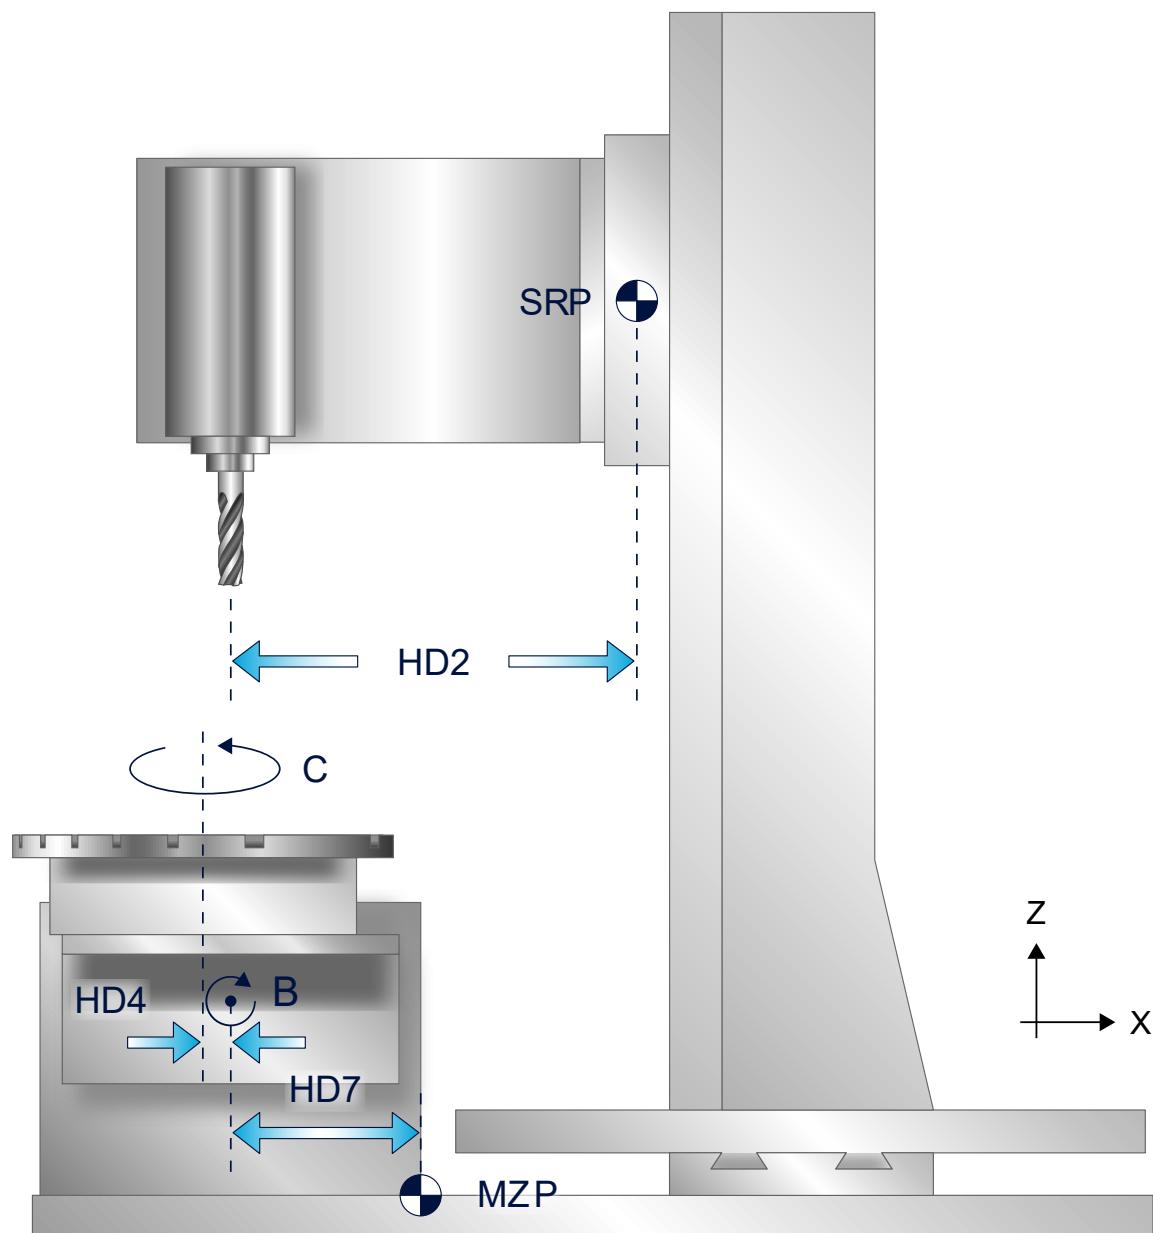


Fig. 64: Offsets in X/Z view

The machine origin can be shifted by the parameters HD7 to HD9. Differing zero positions of the rotary axes B and C can be set by the parameters HD10, HD11 so that the internal kinematic model matches the real machine kinematics. In the same way, differing rotation directions of the B and C axes can be set by the parameters HD12, HD13. In general, the signs of command and actual parameters must also be modified accordingly in the axis parameters.

The origin of the WCS on the turning table can be defined by the parameters HD14 to HD16.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z tool offset holding device to reference point tool slide SBP	10 E-4 mm
HD2	1	X axis offset holding device to reference point tool slide SBP	10 E-4 mm
HD3	2	Y axis offset holding device to reference point tool slide SBP	10 E-4 mm
HD4	3	X axis offset rotary axis B to rotary axis C, origin WCS	10 E-4 mm
HD5	4	Y axis offset rotary axis B to rotary axis C, origin WCS	10 E-4 mm
HD6	5	Z axis offset rotary axis B to rotary axis C, origin WCS	10 E-4 mm
HD7	6	X offset machine origin MNP to rotary axis B	10 E-4 mm
HD8	7	Y offset machine origin MNP to rotary axis C	10 E-4 mm
HD9	8	Z offset machine origin MNP to rotary axis B	10 E-4 mm
HD10	9	Rotary offset B axis	10 E-4°
HD11	10	Rotary offset C axis	10 E-4°
HD12	11	Rotation direction flag B axis	[-]
HD13	12	Rotation direction flag C axis	[-]
HD14	13	X offset origin WCS	10 E-4 mm
HD15	14	Y offset origin WCS	10 E-4 mm
HD16	15	Z offset origin WCS	10 E-4 mm

2.28**KIN_TYP_58 – Five-axis kinematics with A/C workpiece table****Kinematic structure**

The kinematic structure consists of 3 translatory axes in the tool and 2 rotary axes in the work-piece.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, A, C	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z	A, C

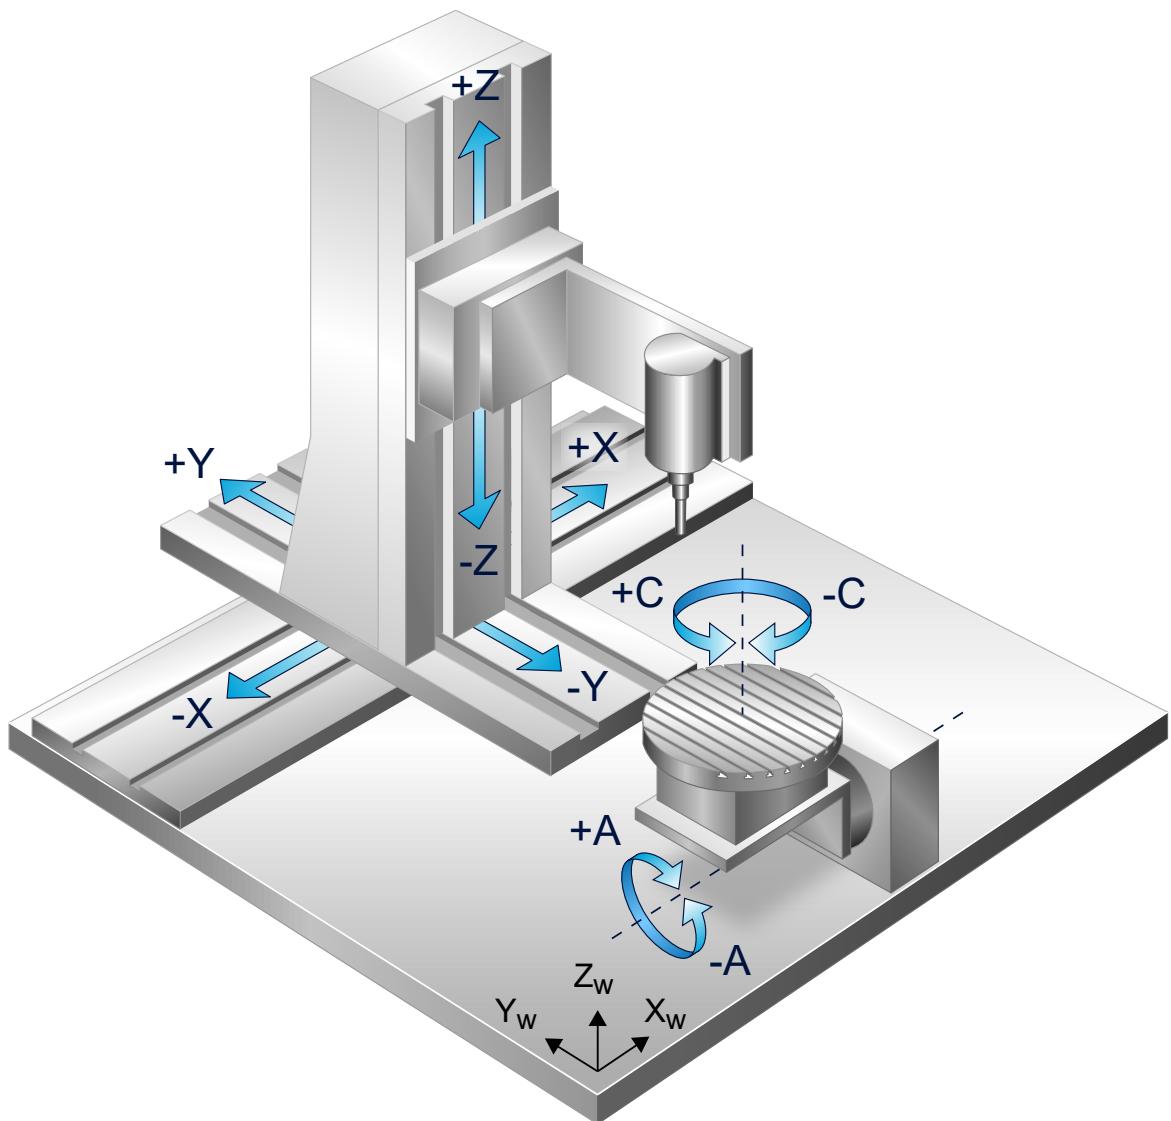


Fig. 65: Kinematics of 5-axis machine with AC workpiece table

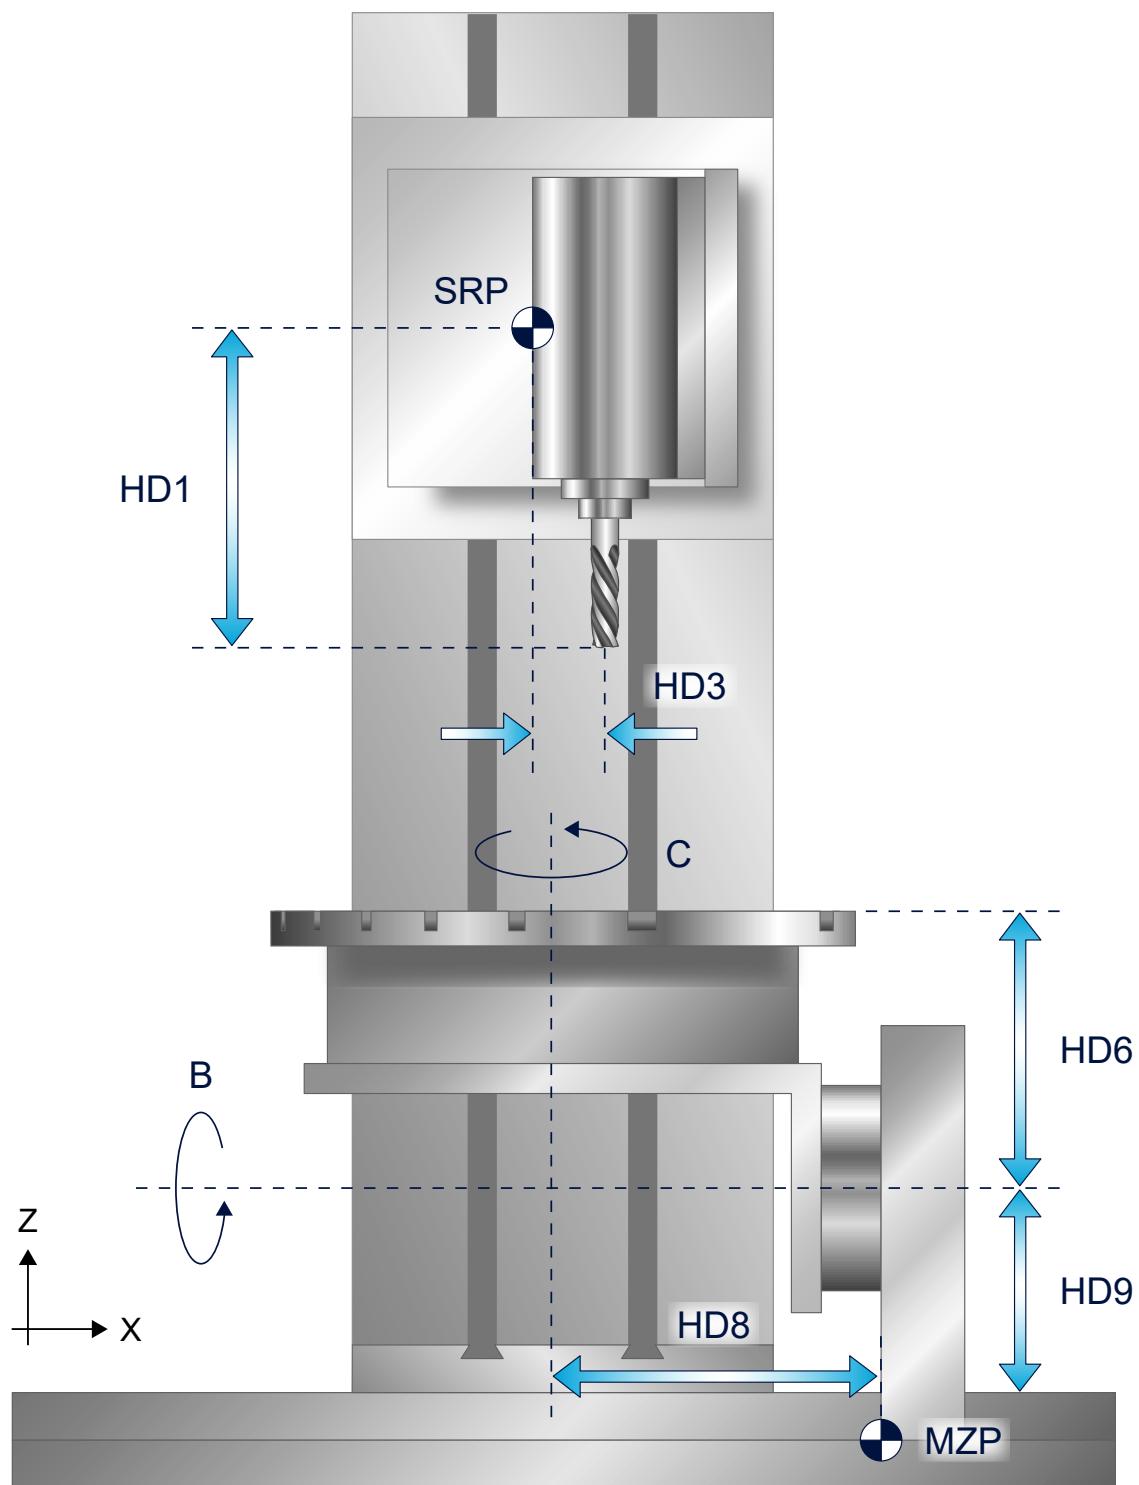


Fig. 66: Offsets in X/Z view

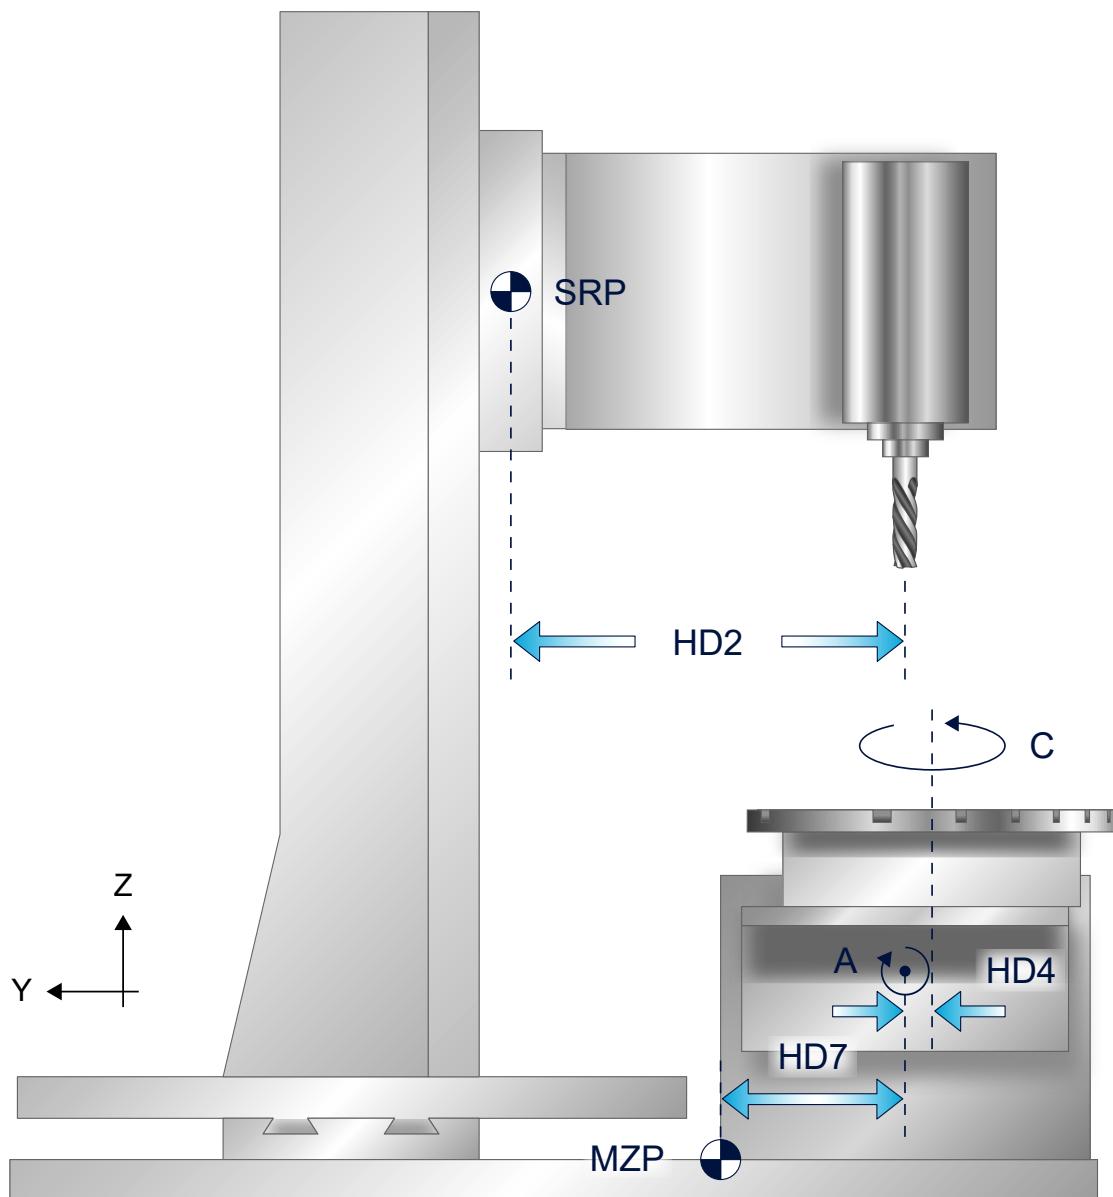


Fig. 67: Offsets in Y/Z view

Typically the machine origin is located in the rotary axis A. As required, it can be shifted using parameters HD7 to HD9. Differing zero positions of the rotary axes A and C can be set by the parameters HD10 and HD11 so that the internal kinematic model matches the real machine kinematics. In the same way differing rotation directions of the A and C axes can be set by the parameters HD12, HD13. In general, the signs of command and actual parameters must also be modified accordingly in the axis parameters.

The origin of the WCS on the turning table can be shifted by the parameters HD14 to HD16.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z tool offset holding device to reference point tool slide SBP	10 E-4 mm
HD2	1	X axis offset holding device to reference point tool slide SBP	10 E-4 mm
HD3	2	Y axis offset holding device to reference point tool slide SBP	10 E-4 mm
HD4	3	X axis offset rotary axis A to rotary axis C, origin WCS	10 E-4 mm
HD5	4	Y axis offset from rotary axis A to rotary axis C, origin WCS	10 E-4 mm
HD6	5	Z axis offset from rotary axis A to rotary axis C, origin WCS	10 E-4 mm
HD7	6	X offset from machine origin MNP to rotary axis A	10 E-4 mm
HD8	7	Y offset from machine origin MNP to rotary axis A	10 E-4 mm
HD9	8	Z offset from machine origin MNP to rotary axis A	10 E-4 mm
HD10	9	Rotary offset A axis	10 E-4°
HD11	10	Rotary offset C axis	10 E-4°
HD12	11	Rotation direction flag A axis	[-]
HD13	12	Rotation direction flag C axis	[-]
HD14	13	X offset origin WCS	10 E-4 mm
HD15	14	Y offset origin WCS	10 E-4 mm
HD16	15	Z offset origin WCS	10 E-4 mm

2.29 Cardanic kinematics

2.29.1 KIN_TYP_59 – Cardanic kinematics with C/A head

The kinematic structure consists of 3 translatory and 3 rotary NC axes in the tool. The A axis is rotated about the Y axis by an angle!= 90 degrees; typically the angle is between 30 and 60 degrees.

Axis configuration in the NC channel	
Axis identifier	X, Y, Z, C, A
Axis index	0, 1, 2, 3, 4
Kinematic structure	
Tool axes	Workpiece axes
NC axes	X, Y, Z,C,A

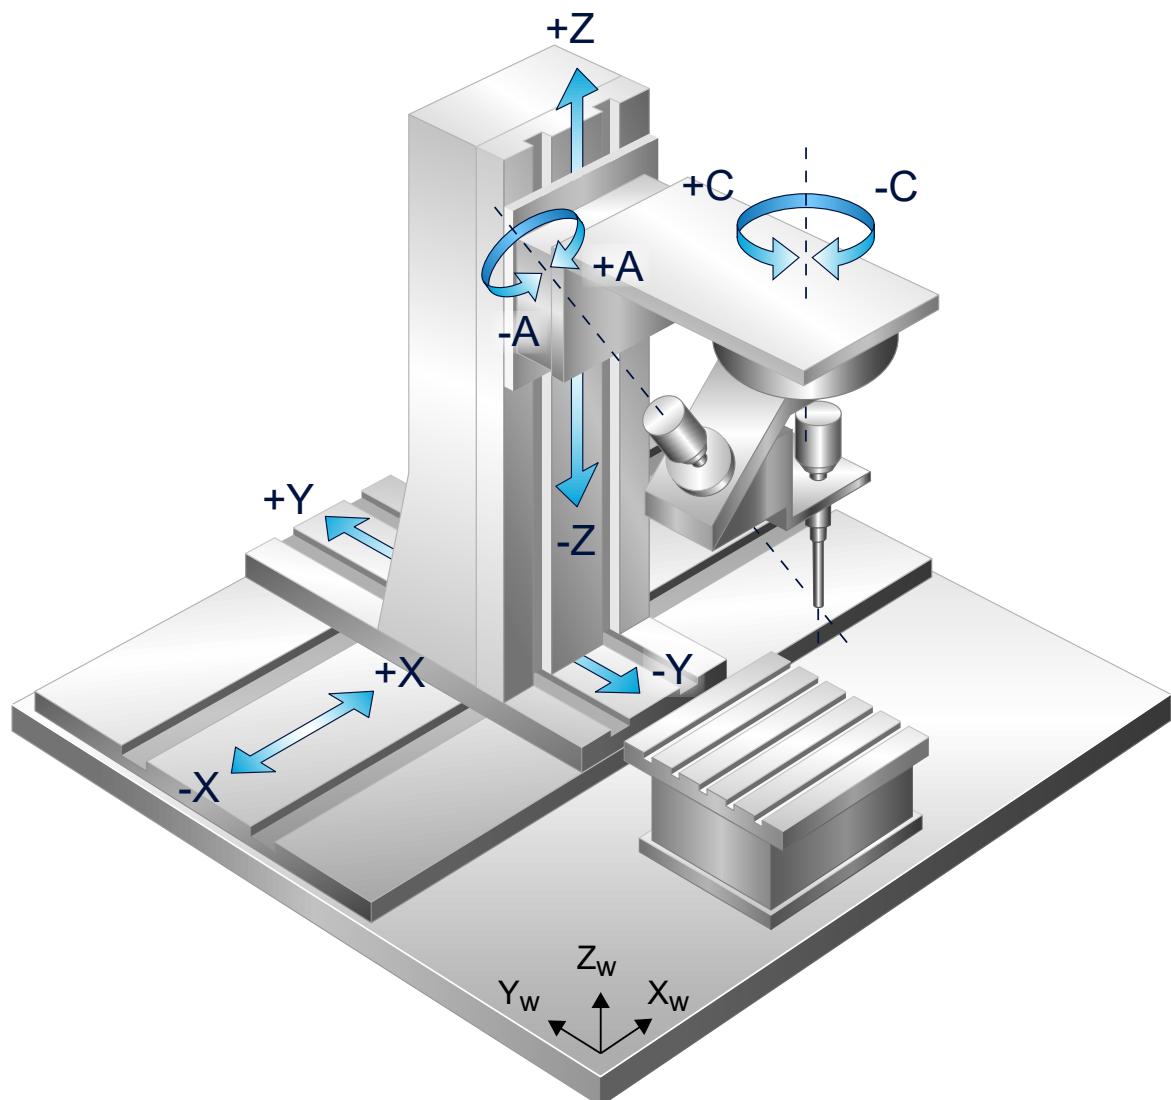


Fig. 68: Cardanic kinematic with CA head

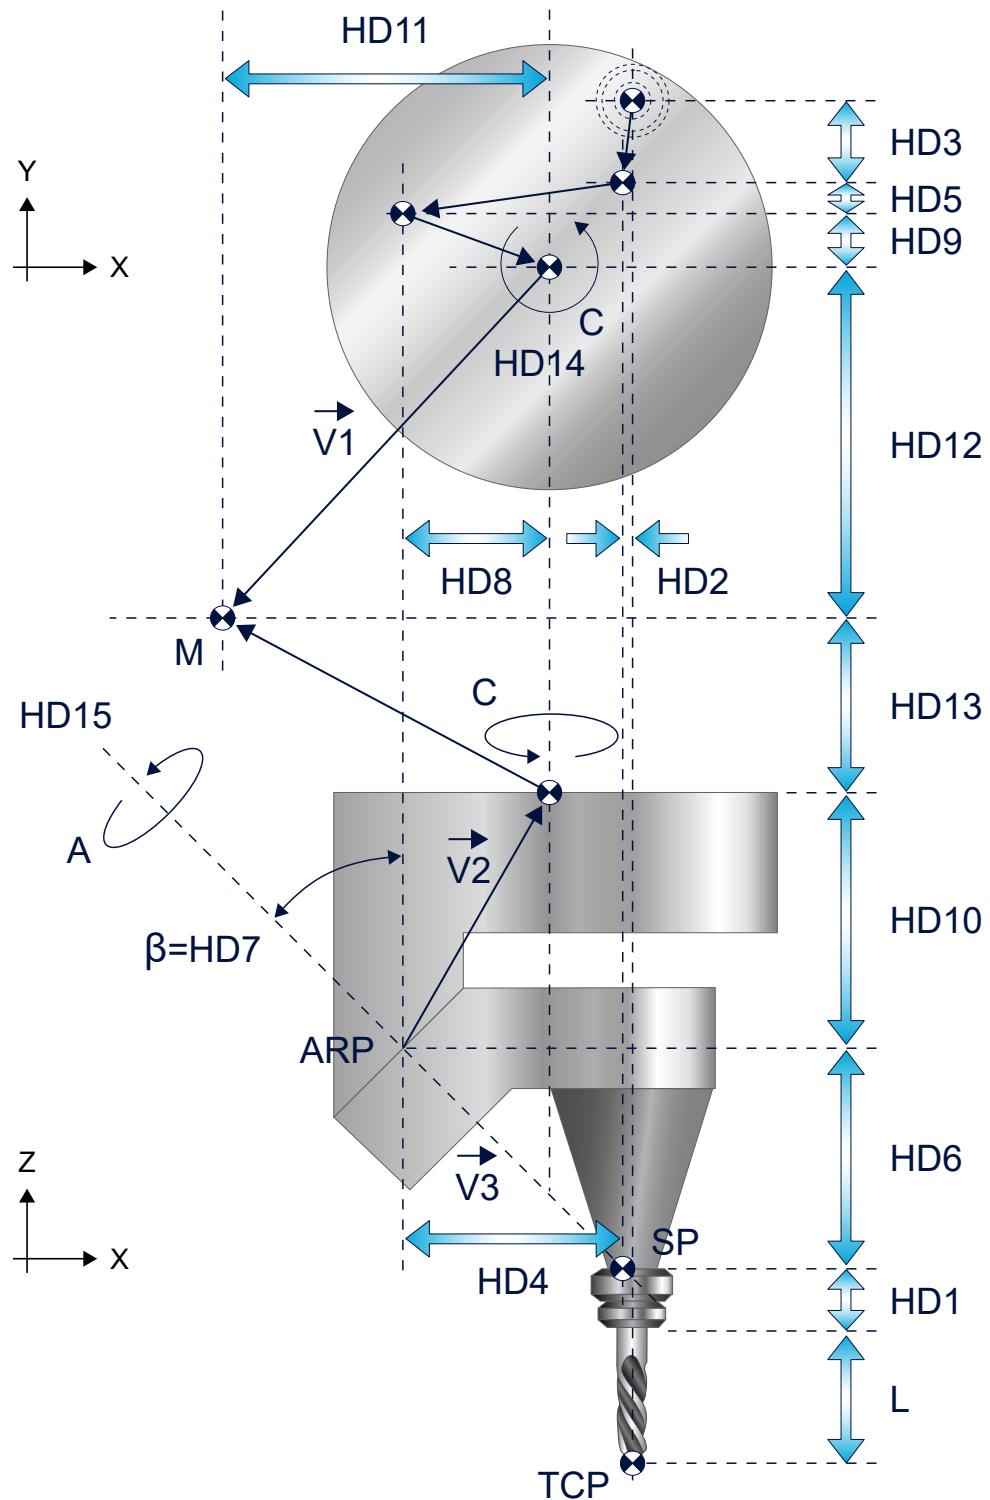


Fig. 69: Offsets of cardanic CA 5-axis head

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset to tool holding device	10 E-4 mm
HD2	1	X offset to tool holding device	10 E-4 mm
HD3	2	Y offset to tool holding device	10 E-4 mm
HD4	3	X offset compensation point (SP) to A axis	10 E-4 mm
HD5	4	Y offset compensation point (SP) to A axis	10 E-4 mm
HD6	5	Z offset compensation point (SP) to A axis	10 E-4 mm
HD7	6	Angle between A axis and Z axis	10 E-4°
HD8	7	X offset A axis to C axis	10 E-4 mm
HD9	8	Y offset A axis to C axis	10 E-4 mm
HD10	9	Z offset A axis to C axis	10 E-4 mm
HD11	10	X offset C axis to machine point M	10 E-4 mm
HD12	11	Y offset C axis to machine point M	10 E-4 mm
HD13	12	Z offset C axis to machine point M	10 E-4 mm
HD14	13	Rotary internal offset C axis (*)	10 E-4°
HD15	14	Rotary internal offset A axis (*)	10 E-4°
HD16	15	Rotary offset C axis (*)	10 E-4°
HD17	16	Rotary offset A axis (*)	10 E-4°
HD21	20	Control flag: 0: Transformation of rotary axes C and A, default. 1: The rotary axes C and A are machine angles.	[-]

In general the reference point referred to as ARP (rotation point of A axis) wanders to reference point SP, i.e. the vector V3 is 0 and the point SP is located in the tool axis which has the same rotary axis as the C axis. In this case only the parameters L, HD1, HD7 and HD10 are required. The kinematics can transform an A spatial angle of maximum $2 \cdot HD7$.

(*) The rotary offsets HD14 and HD15 only act on the internal kinematic model, i.e. these offsets are not transferred to the rotary axes. By contrast, the offsets HD16 and HD17 act like a zero offset when kinematic transformation is active. They also lead to a re-positioning of the cardanic head with rotary offset when an angular position is programmed.

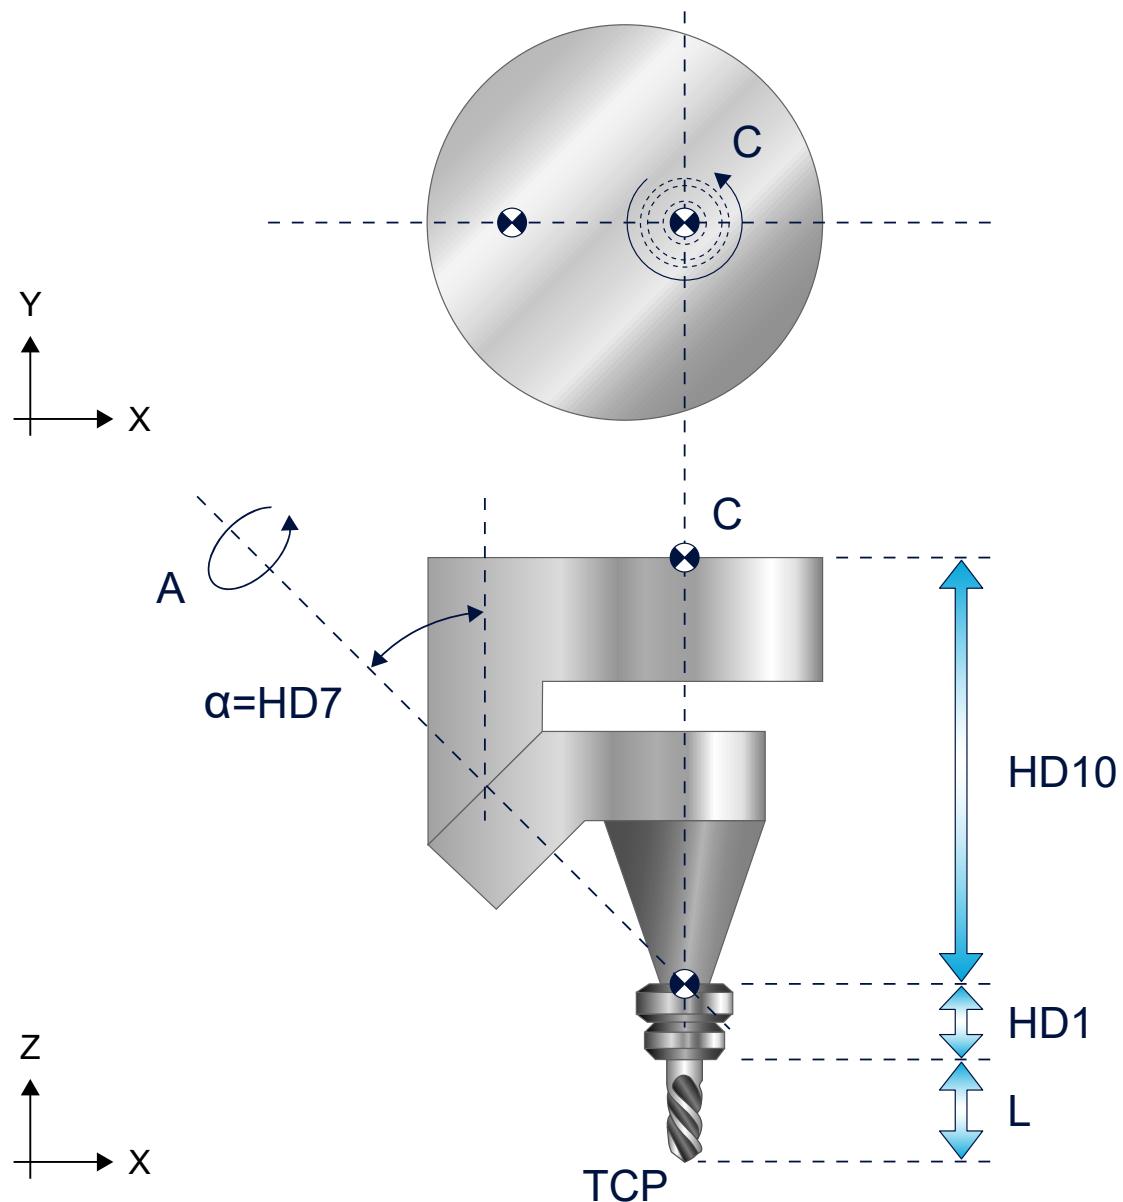


Fig. 70: Cardanic head with ideal head geometry (intersection of C-A axis is located in tool axis)

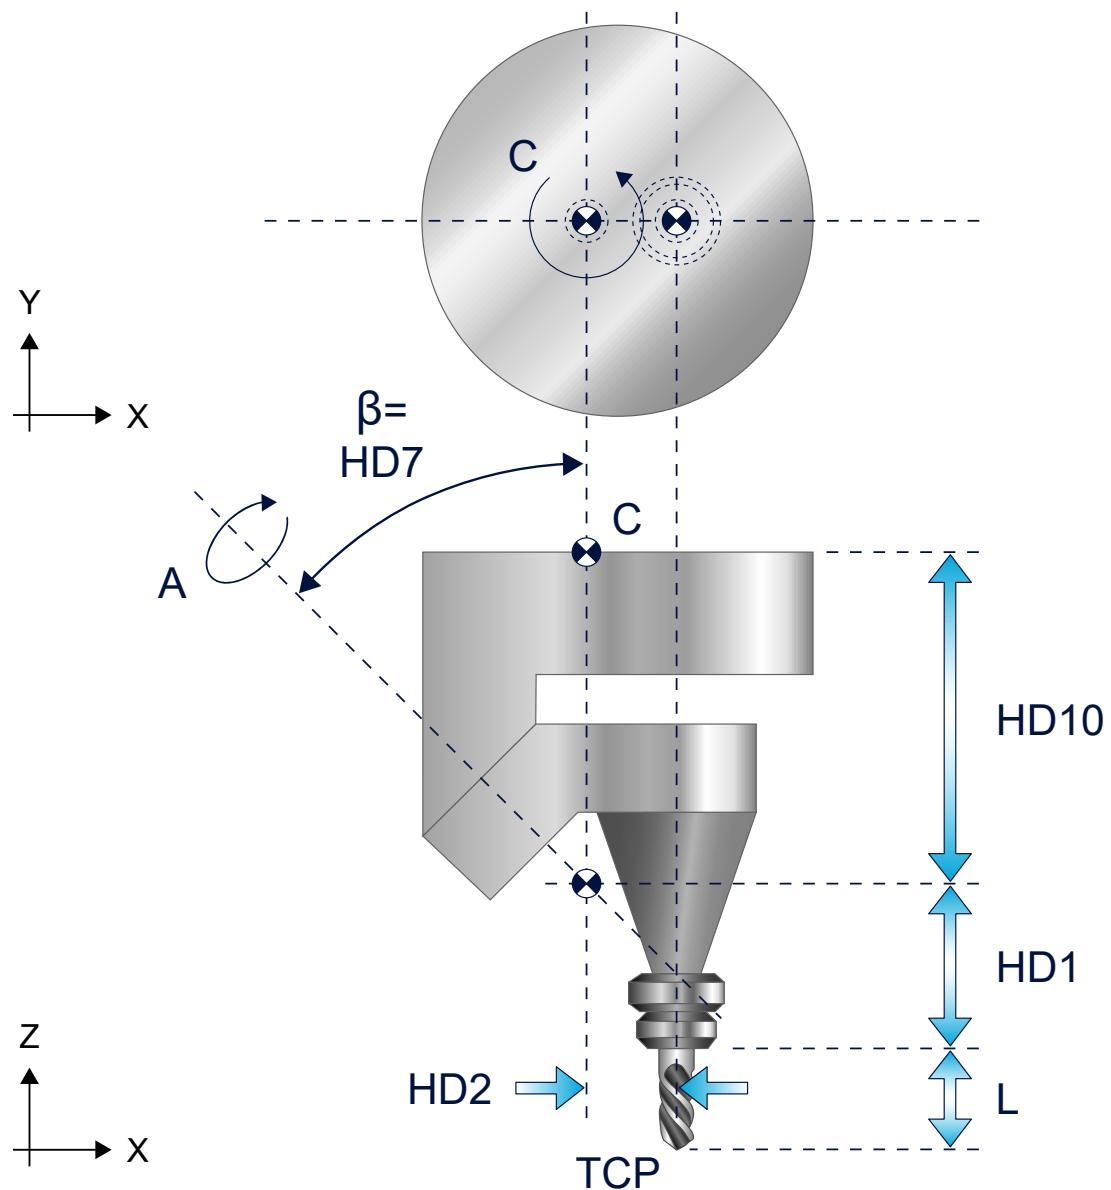


Fig. 71: Cardanic head with offset C axis (C axis not located in tool axis)

2.29.1.1 Saw blade with TCP function

When parameter HD20 is activated, kinematic transformation can be used to calculate TCP offsets dependent on the target angle A of the cardanic head. This is required to program the correct cutting depth of the saw blade when $A \neq 0$. The TCP is then located at the lowest point of the saw blade.

Set the target angle A in parameter HD19.

After target angle $A \neq 0$ is approached, the TCP is located at the bottom of the point at minimum distance to the workpiece surface as shown in the figure (when A is in zero position, the TCP is located on the right of the saw blade in X direction)

HD offset	param[i]	Description
HD19	18	Target angle A of head for saw machining
HD20	19	<p>Control flag: 0: Default, cardanic transformation for milling 2: Cardanic transformation with TCP on saw blade</p> <p>When the kinematic is activated, the required tool offsets are calculated depending on the saw blade radius and target angle A. In the target angle position $A \neq 0$, the TCP is located at the lowest point on the saw blade (generally at minimum distance to the workpiece).</p>

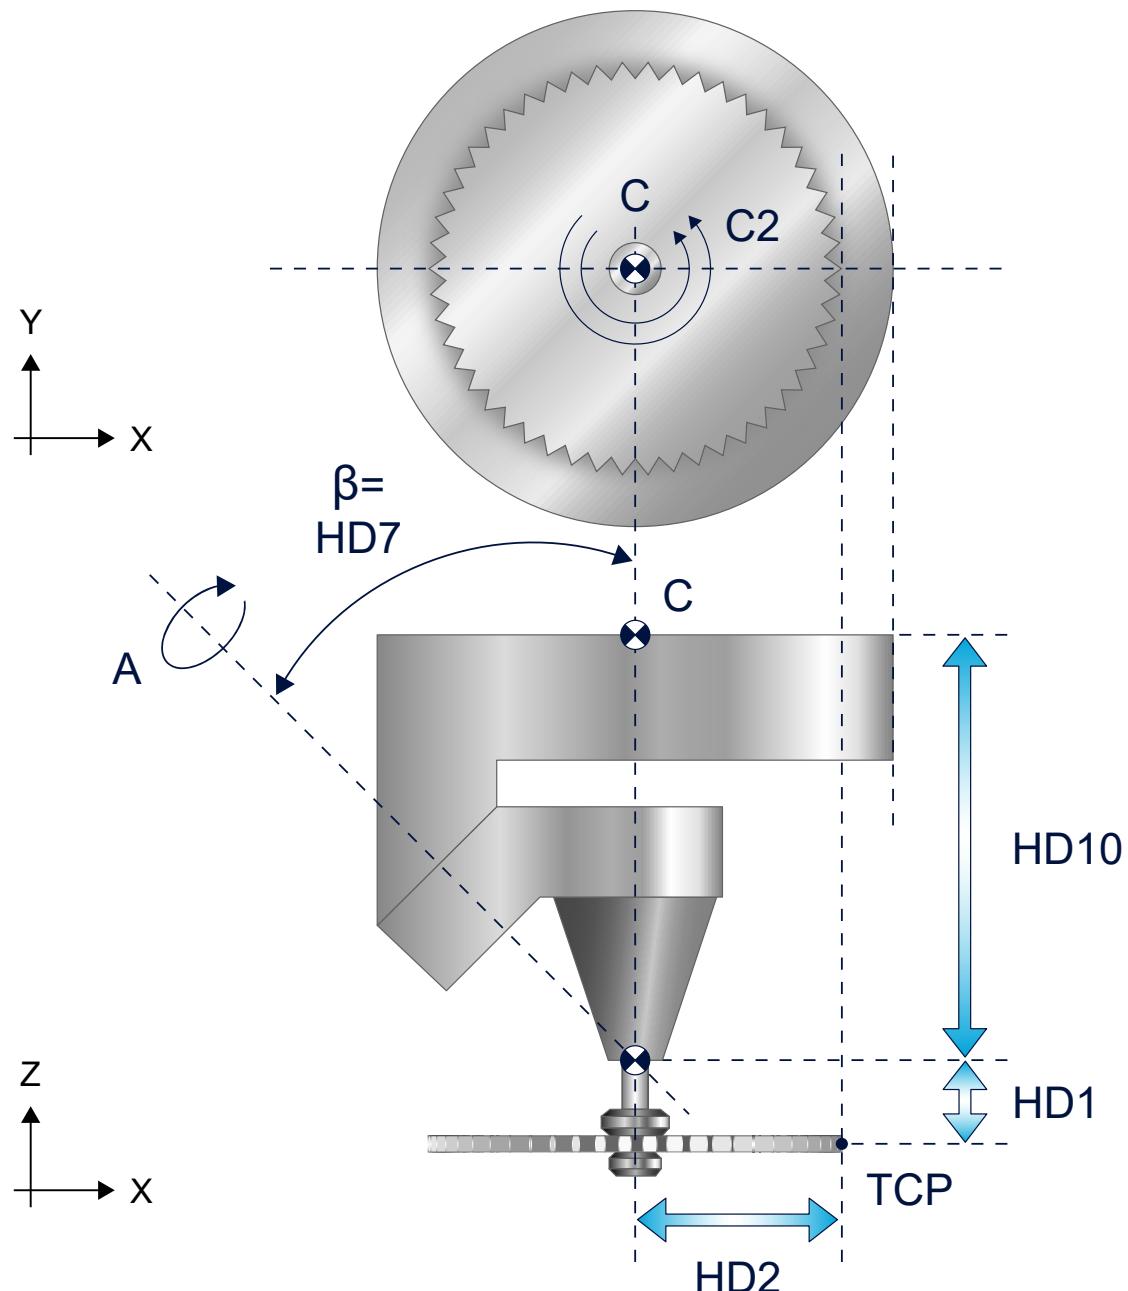


Fig. 72: Cardanic head with saw tool and TCP at saw tooth

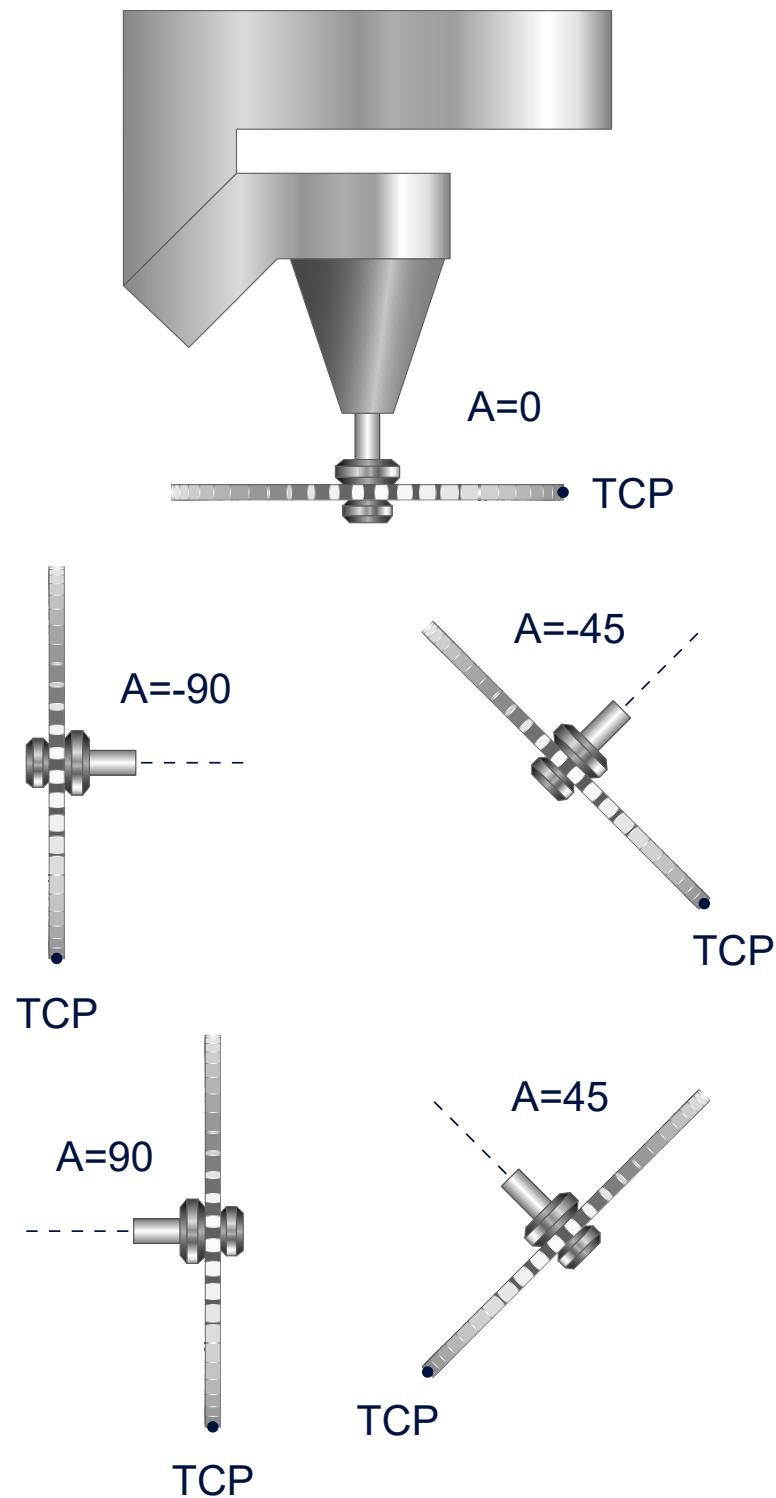


Fig. 73: Angle representations – saw tool and TCP

2.29.1.2 Special function: Flange-mounted underfloor milling tool

Additional offset data:

HD offset	param[i]	Description
HD19	18	C2 angle
HD20	19	Control flag: 0: Default cardanic transformation 1: Utility function for the calculation of the C2 angle with underfloor milling tool flange-mounted to spindle with manually adjustable C2 angle.

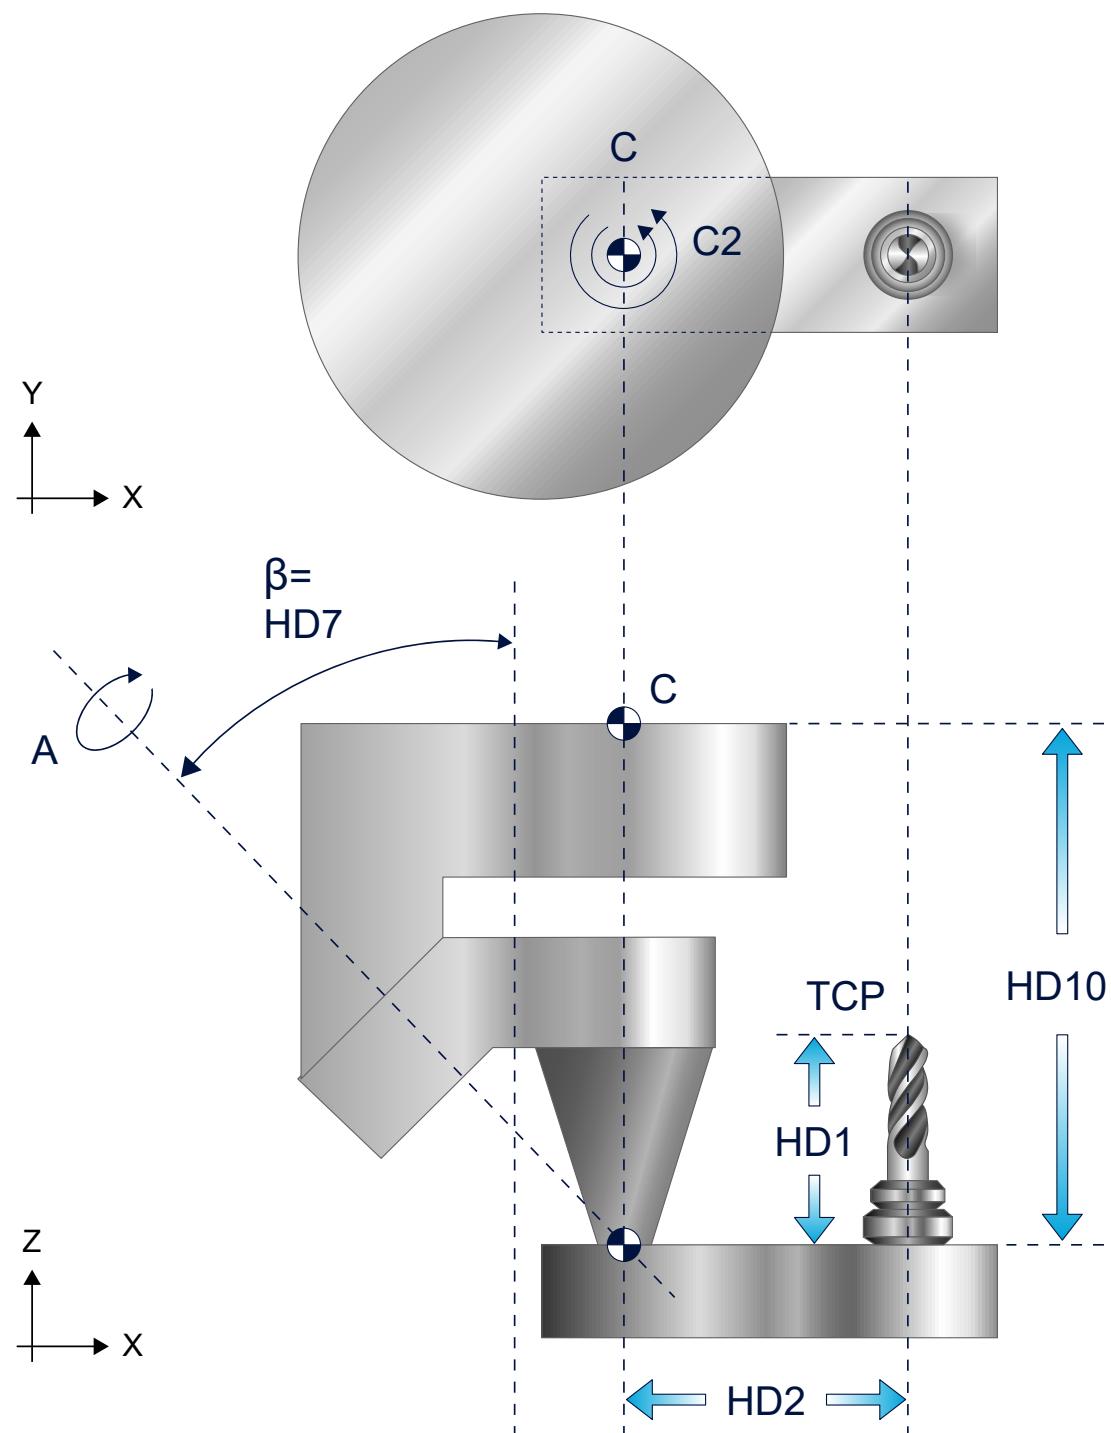


Fig. 74: Cardanic head with underfloor milling tool

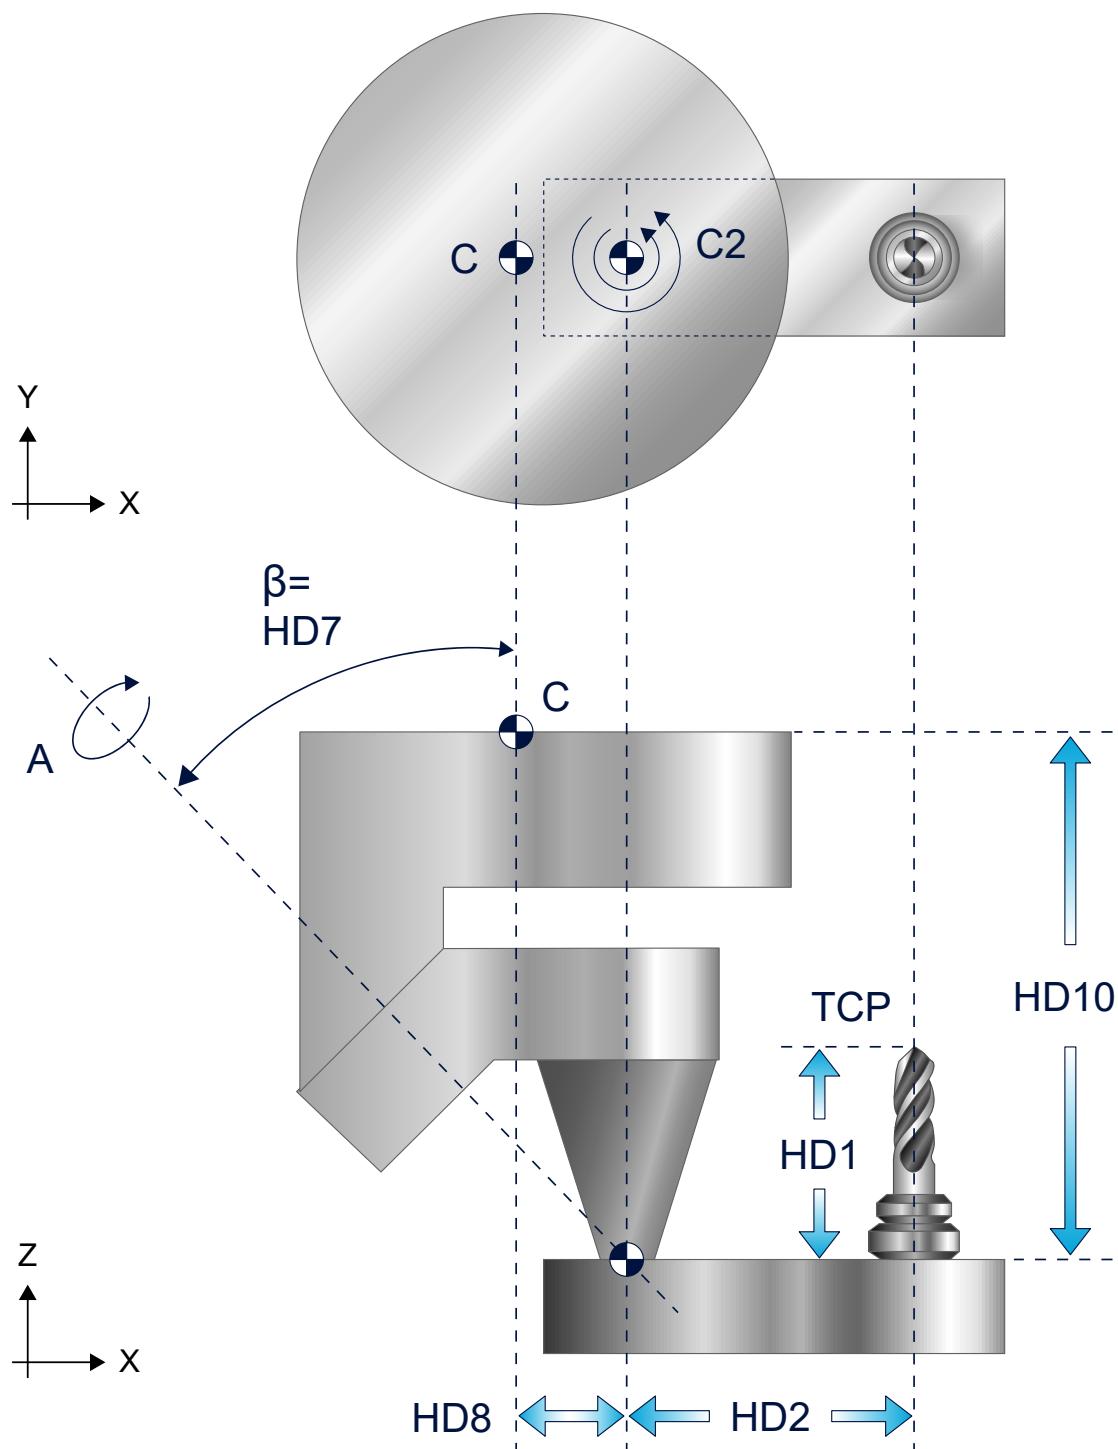


Fig. 75: Cardanic head with underfloor milling tool with offset C

2.29.2

KIN_TYP_60 – Cardanic kinematics with C/B head

The kinematic structure consists of 3 translatory and 3 rotary NC axes in the tool. The B axis is arranged about the X axis rotated by an angle $\neq 90$ degrees; the angle is typically between 30 and 60 degrees.

Axis configuration in the NC channel	
Axis identifier	X, Y, Z, C, B
Axis index	0, 1, 2, 3, 4
Kinematic structure	
Tool axes	Workpiece axes
NC axes	X, Y, Z,C,B

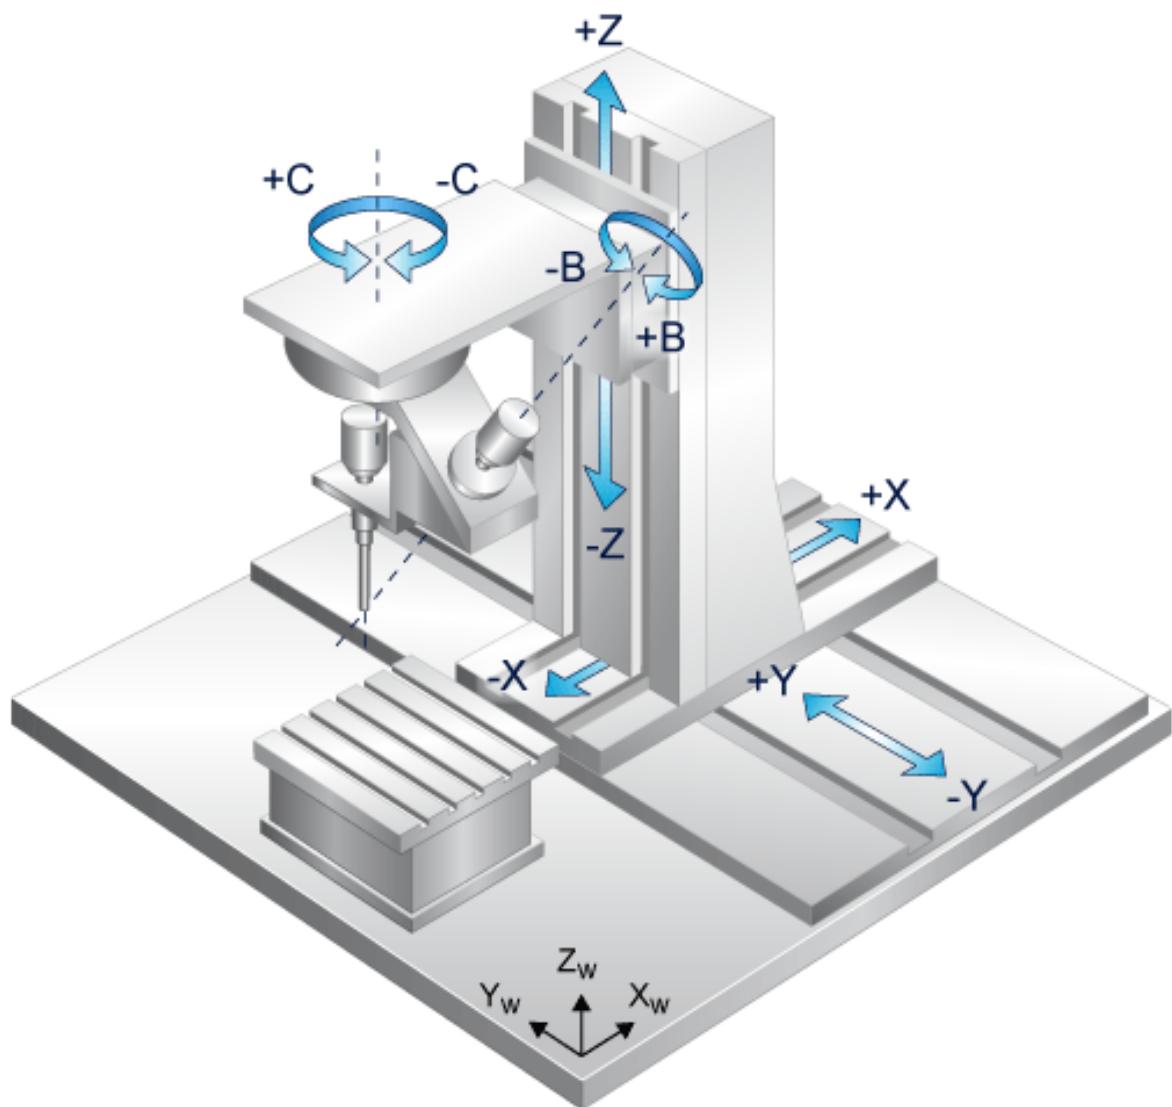


Fig. 76: Cardanic kinematic with CB head

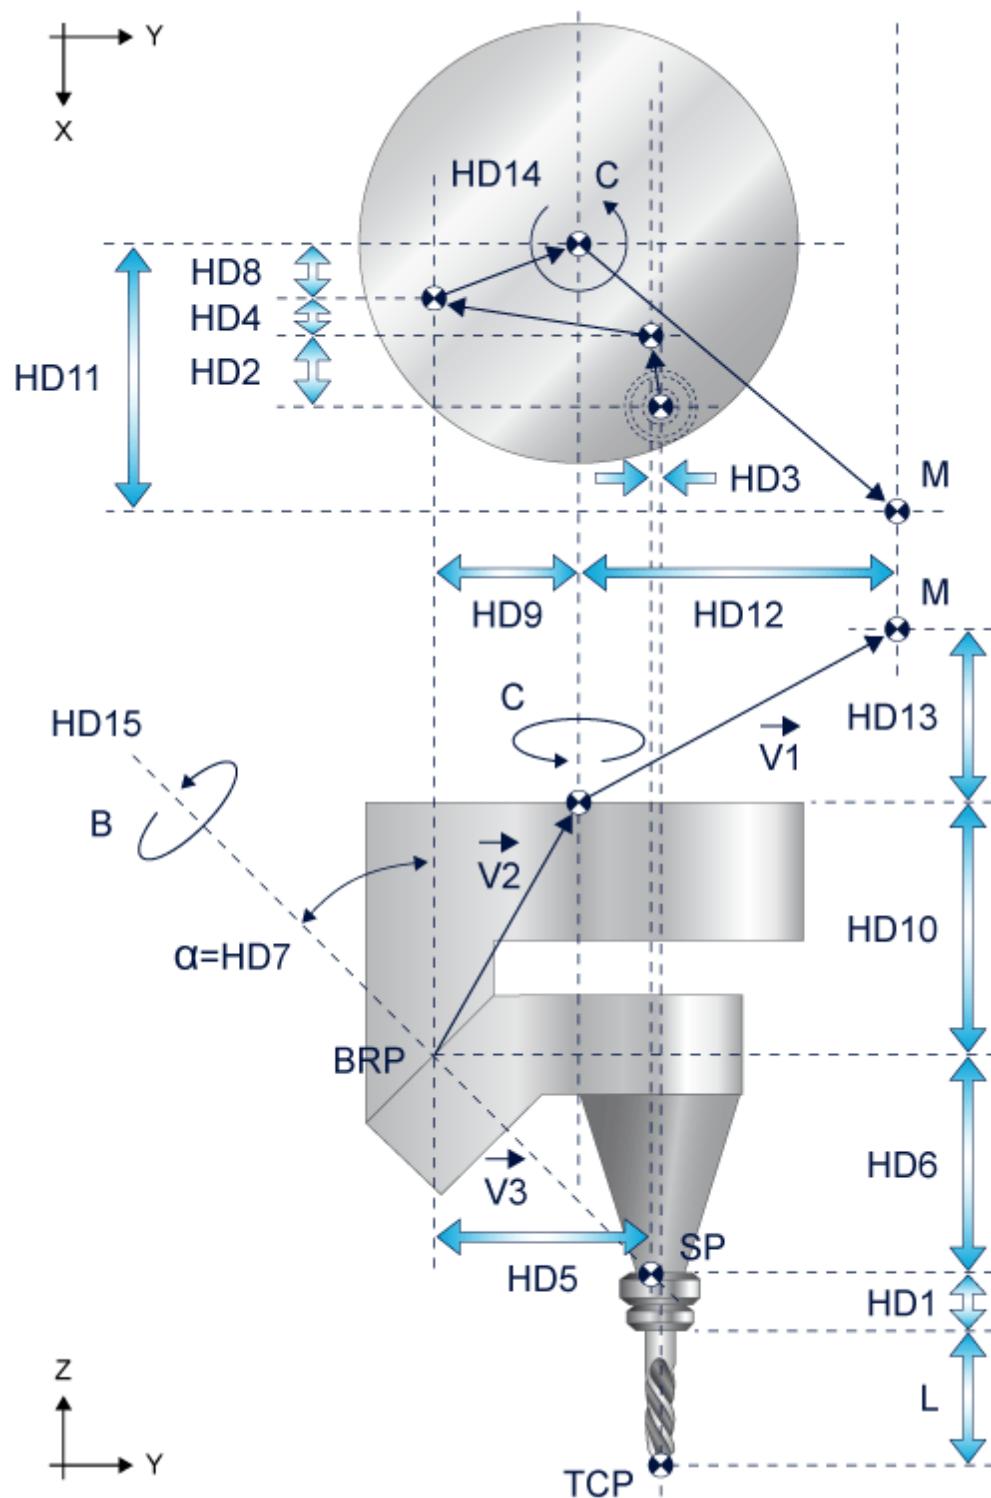


Fig. 77: Offsets of cardanic CB 5-axis head

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset to tool holding device	10 E-4 mm
HD2	1	X offset to tool holding device	10 E-4 mm
HD3	2	Y offset to tool holding device	10 E-4 mm
HD4	3	X offset compensation point (SP) to B axis	10 E-4 mm
HD5	4	Y offset compensation point (SP) to B axis	10 E-4 mm
HD6	5	Z offset compensation point (SP) to B axis	10 E-4 mm
HD7	6	Angle between B axis and Z axis	10 E-4°
HD8	7	X offset B axis to C axis	10 E-4 mm
HD9	8	Y offset B axis to C axis	10 E-4 mm
HD10	9	Z offset B axis to C axis	10 E-4 mm
HD11	10	X offset C axis to machine point M	10 E-4 mm
HD12	11	Y offset C axis to machine point M	10 E-4 mm
HD13	12	Z offset C axis to machine point M	10 E-4 mm
HD14	13	Rotary offset C axis	10 E-4°
HD15	14	Rotary offset B axis	10 E-4°
HD21	20	Control flag for rotary axes C and B 0: Transformation of C and B, default. 1: C and B are machine angles.	[-]

In general the reference point referred to as BRP (rotation point of B axis) wanders to reference point SP, i.e. the vector V3 is 0 and the point SP is located in the tool axis which has the same rotary axis as the C axis. In this case only the parameters L, HD1, HD7 and HD10 are required.

The kinematics can transform a B spatial angle of maximum $2 \times HD7$.

(*) The rotary offsets HS14 and HD 15 only act on the internal kinematic model, i.e. these offsets do not lead to a re-positioning of the cardanic head as for a rotary zero offset and programming of an angle position.

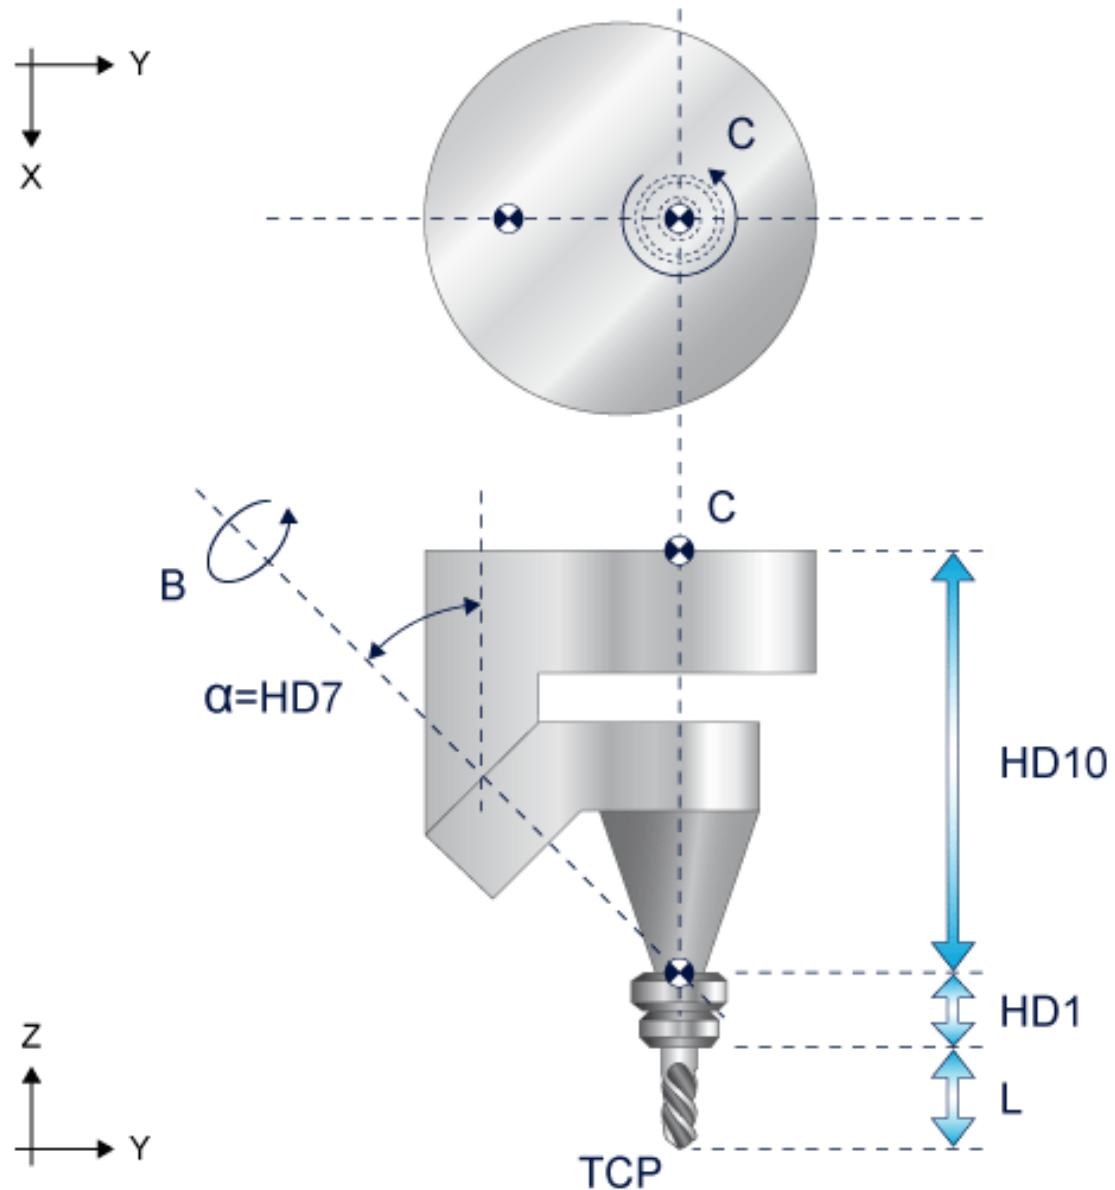


Fig. 78: Cardanic head with ideal head geometry (intersection of C and B axis located in tool axis)

2.30**KIN_TYP_61 – 5-axis kinematics with Y/A workpiece table****Kinematic structure**

The kinematic structure consists of 1 translatory and 1 rotary NC axis in the workpiece and 2 translatory and one rotary NC axis in the tool.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, A, B	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Z, B	Y, A

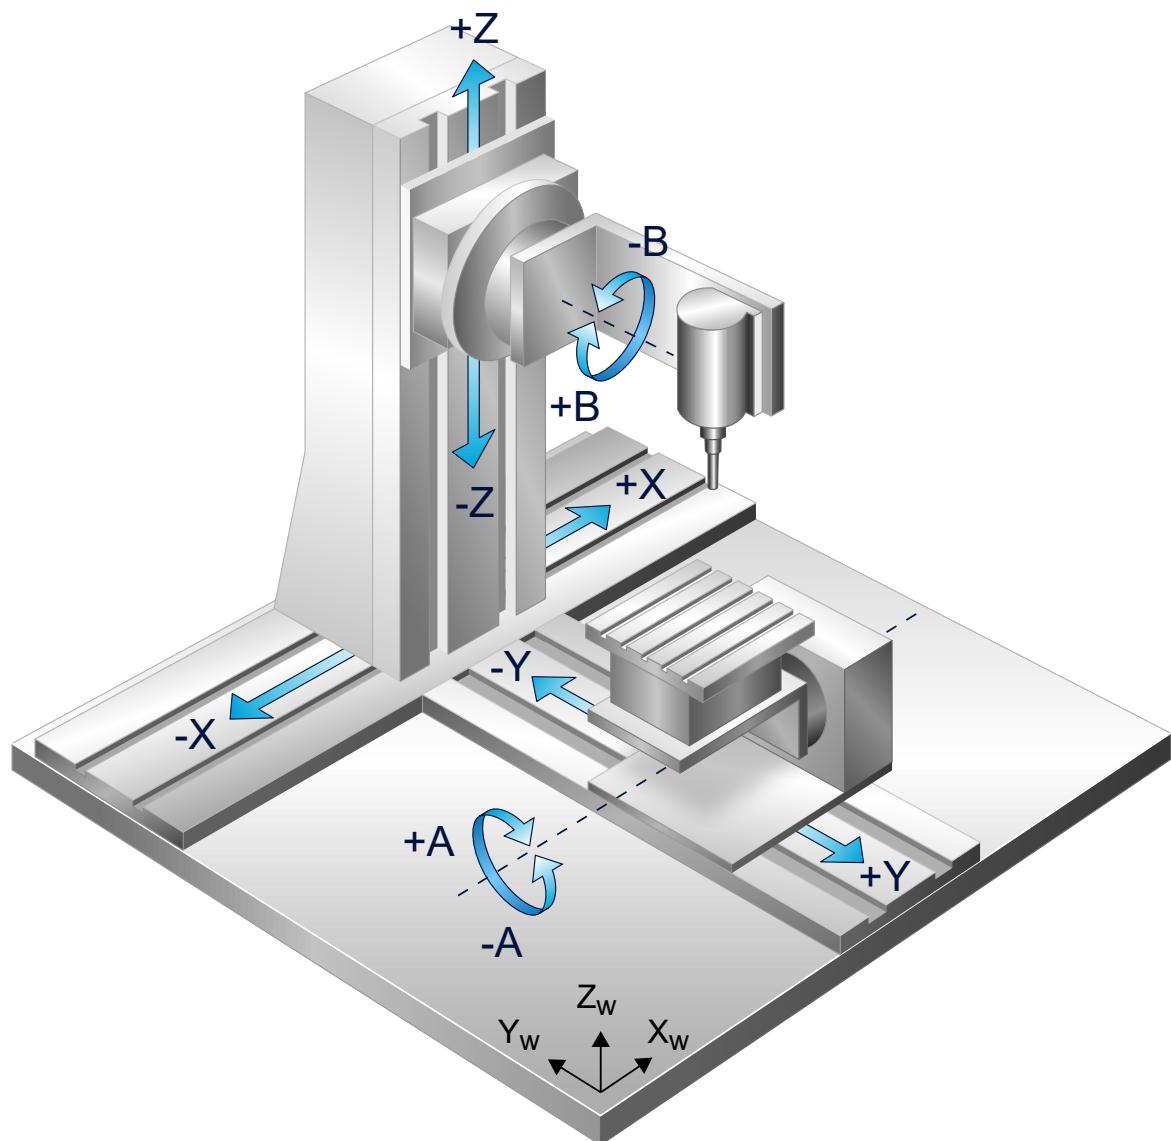


Fig. 79: Axis configuration of 5-axis machine

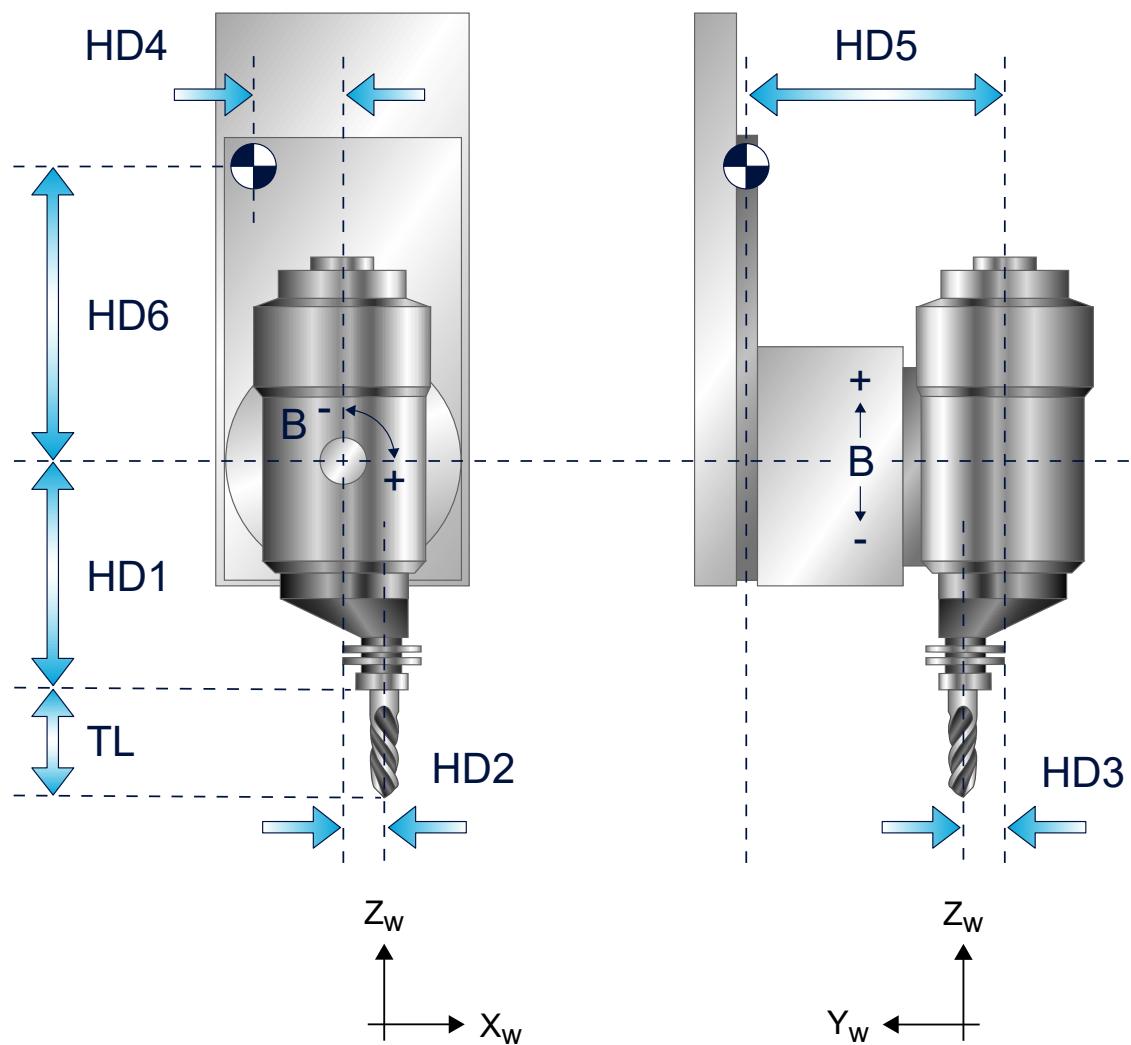


Fig. 80: Offsets of tool head

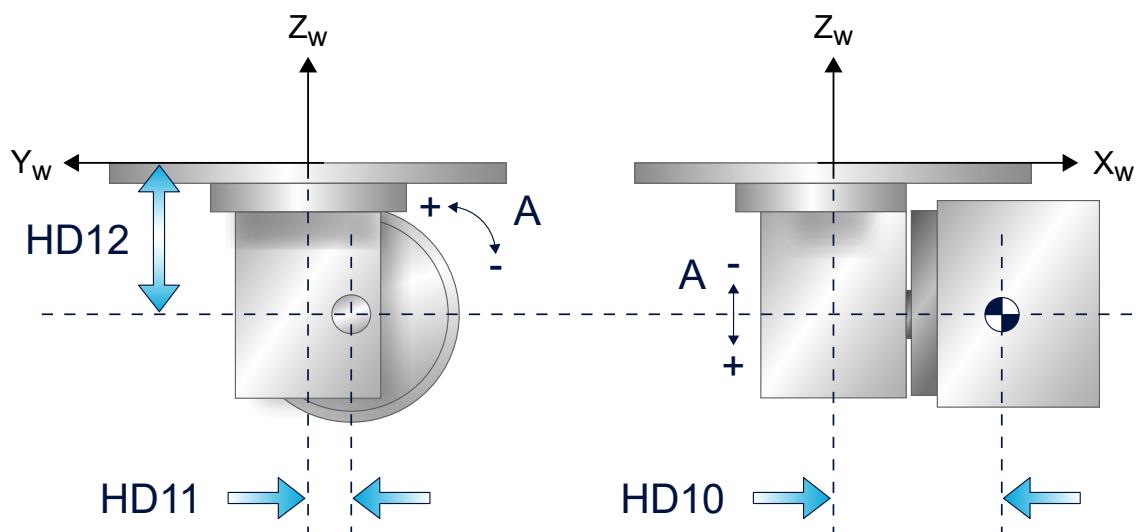


Fig. 81: Offsets of workpiece holder

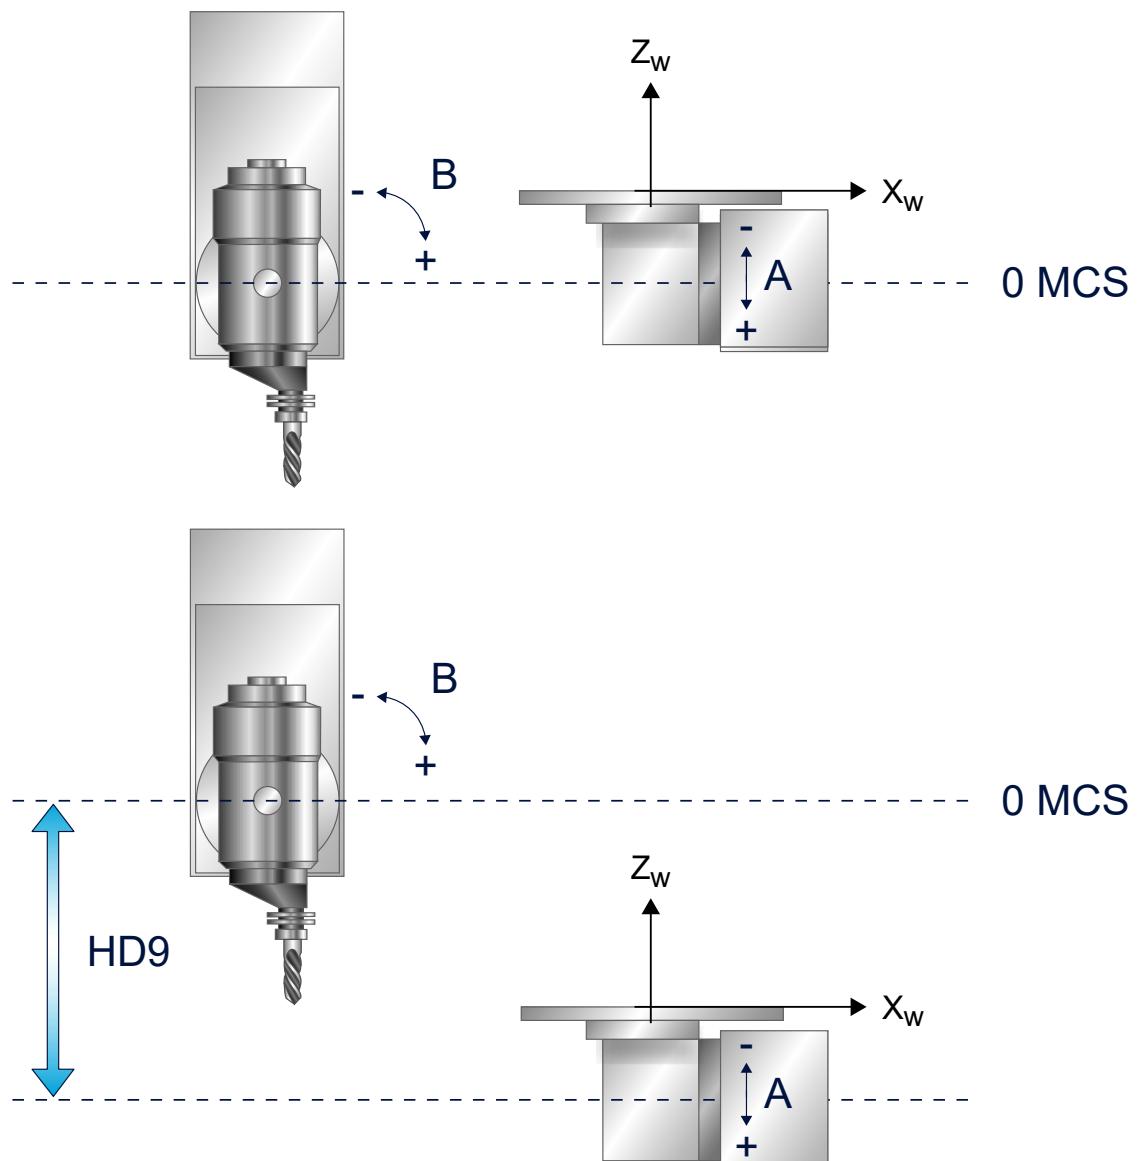


Fig. 82: Ideal and real z zero position

In the ideal zero position of the kinematic structure, the rotary axis A in the workpiece and the rotary axis B in the tool intersect at one point. The machine axis positions of the tool slide are then 0 in this position. Normally these axis positions cannot be approached with a real machine structure. The offsets at tool slide position 0 to this position can be set with parameters HD7, HD8, HD9.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset tool rotation point B axis to tool holder point	10 E-4 mm
HD2	1	X offset tool rotation point B axis to tool holder point	10 E-4 mm
HD3	2	Y offset tool rotation point B axis to tool holder point	10 E-4 mm
HD4	3	X offset rotation point B axis to reference point tool slide	10 E-4 mm
HD5	4	Y offset rotation point B axis to reference point tool slide	10 E-4 mm
HD6	5	Z offset rotation point B-axis to reference point tool slide	10 E-4 mm
HD7	6	X offset to machine origin	10 E-4 mm
HD8	7	Y offset to machine origin	10 E-4 mm
HD9	8	Z offset to machine origin	10 E-4 mm
HD10	9	X offset A rotary axis to origin WCS	10 E-4 mm
HD11	10	Y offset A rotary axis to origin WCS	10 E-4 mm
HD12	11	Z offset A rotary axis to origin WCS	10 E-4 mm
HD13	12	Rotary offset A axis	10 E-4°
HD14	13	Rotary offset B axis	10 E-4°
HD15	14	Rotation direction flag A axis	[-]
HD16	15	Rotation direction flag B axis	[-]

2.31

KIN_TYP_63 – 5-axis kinematics with X/Y/B workpiece table**Kinematic structure**

The kinematic structure consists of 1 translatory and 1 rotary NC axis in the workpiece and 2 translatory and one rotary NC axis in the tool. The transformation supports additional offset parameters for a non-symmetric construction and substitutes the existing kinematic structure KIN_TYP_23.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, A, B	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	Z, A	X, Y, B

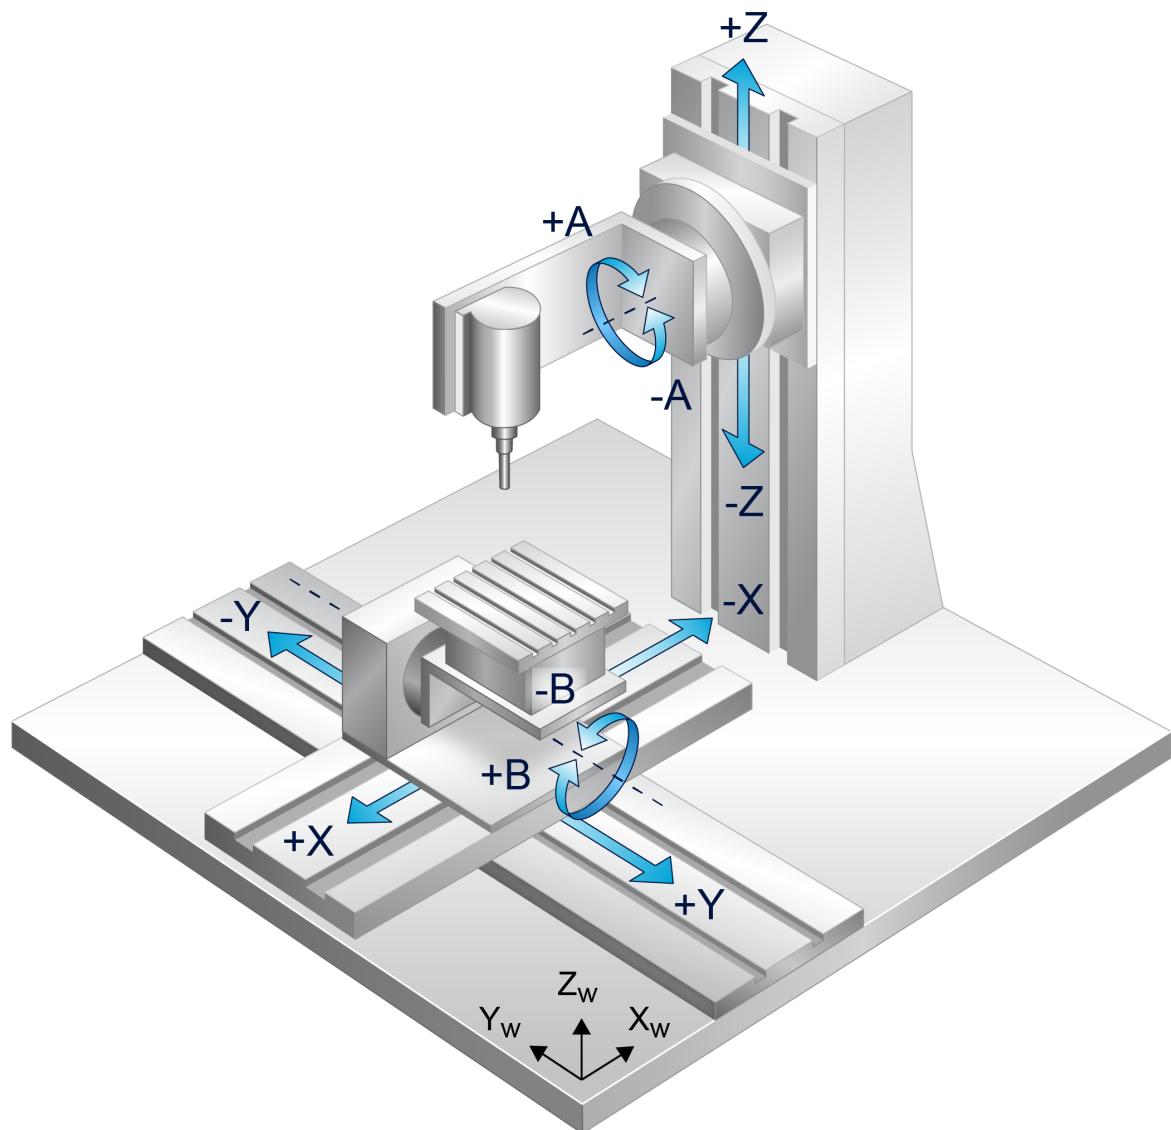


Fig. 83: Axis configuration of 5-axis machine

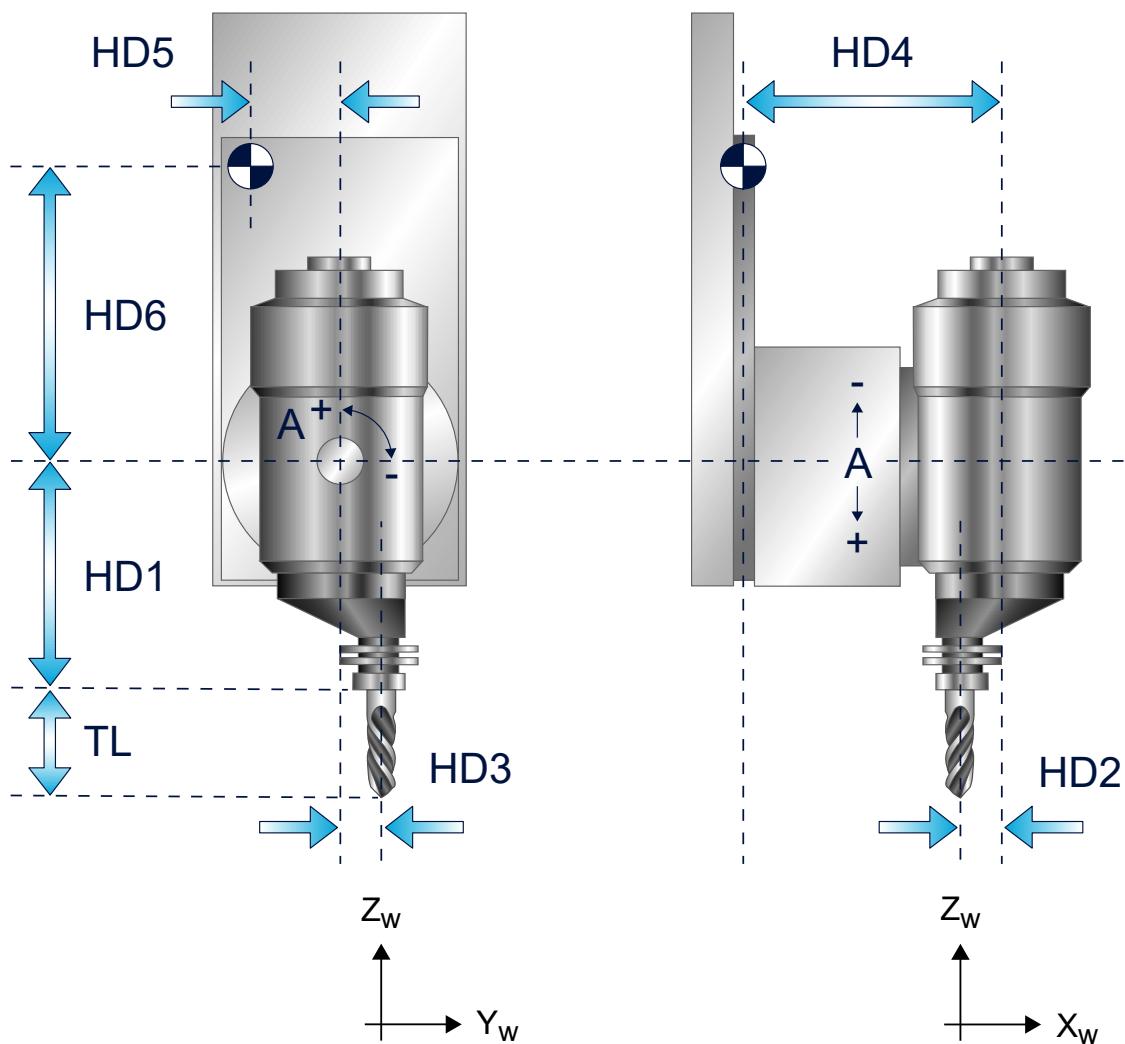


Fig. 84: Offsets of tool head

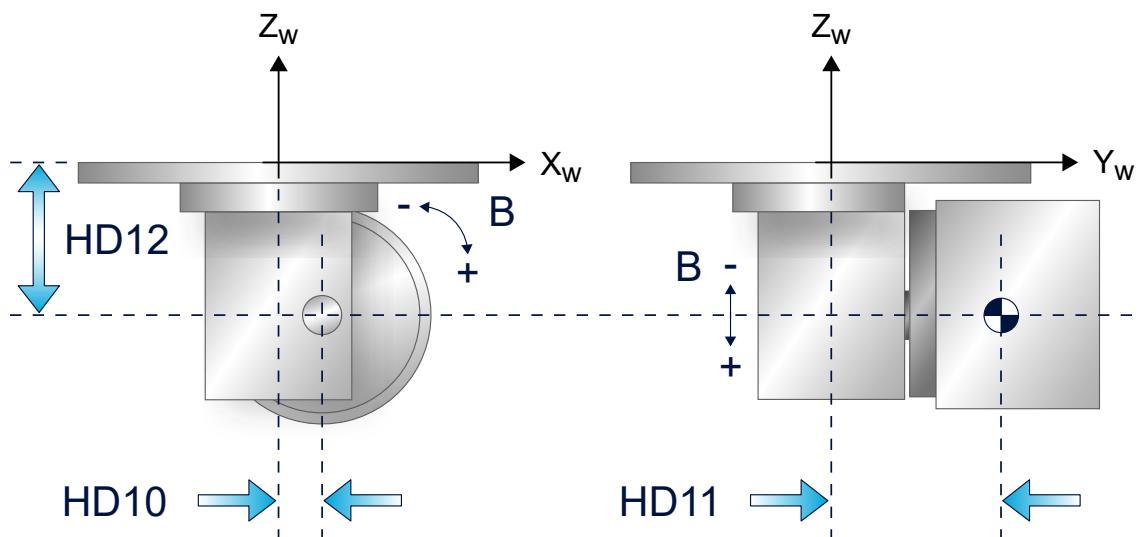


Fig. 85: Offsets of workpiece holder

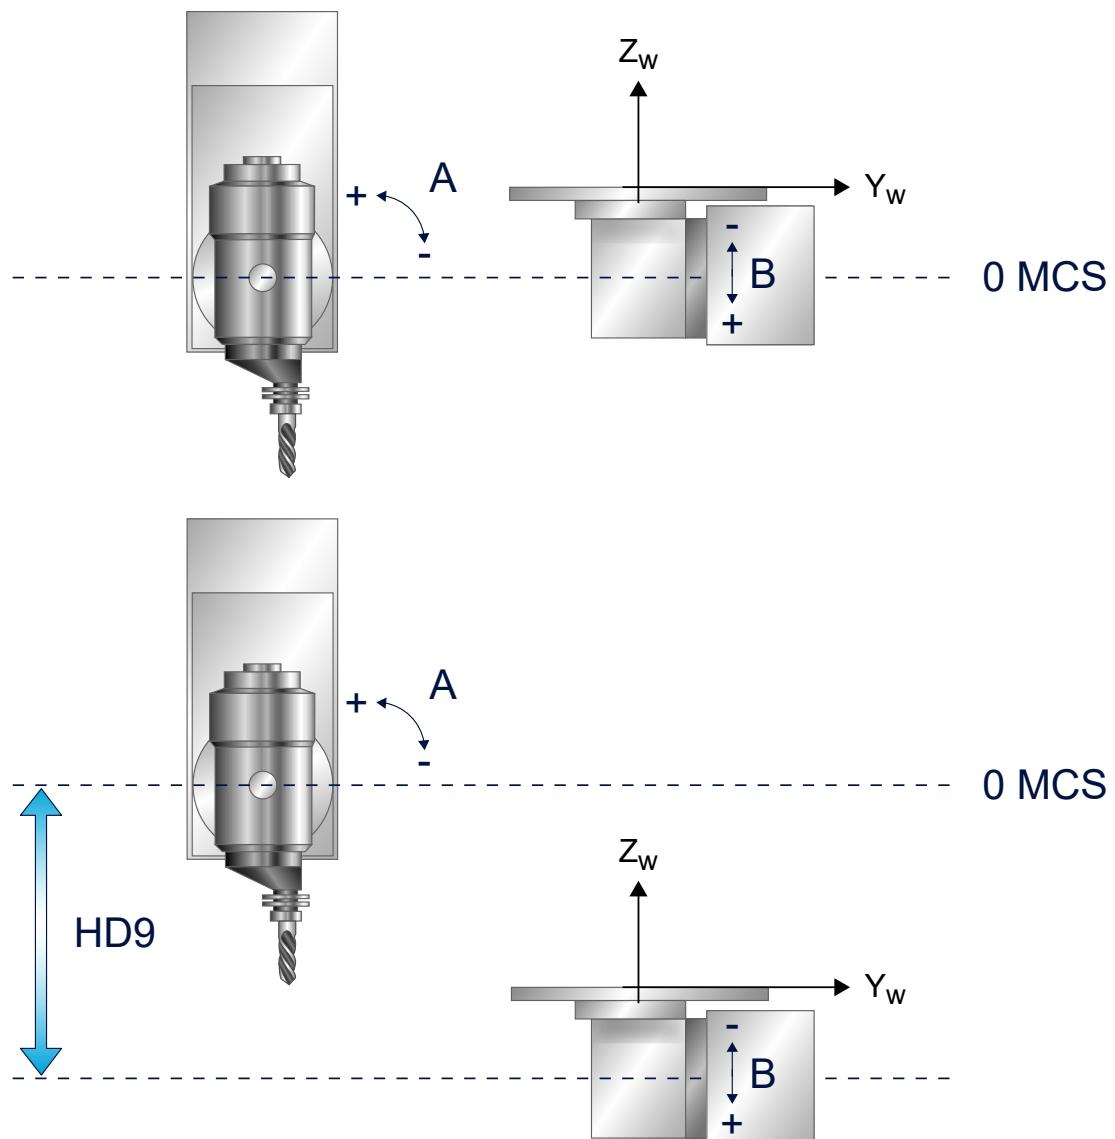


Fig. 86: Ideal and real Z zero position

In the ideal zero position of kinematic structure, the rotary axis B in the workpiece and the rotary axis A in the tool intersect at one point. The machine axis positions of the tool slide are then 0 in this position. Normally these axis positions cannot be approached with a real machine structure. The offsets at tool slide position 0 to this position can be set with parameters HD7, HD8, HD9.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset tool rotation point A axis to tool holder device	10 E-4 mm
HD2	1	X offset tool rotation point A axis to tool holder device	10 E-4 mm
HD3	2	Y offset tool rotation point A axis to tool holder device	10 E-4 mm
HD4	3	X offset rotation point A axis to reference point tool slide	10 E-4 mm
HD5	4	Y offset rotation point A axis to reference point tool slide	10 E-4 mm
HD6	5	Z offset rotation point A axis to reference point tool slide	10 E-4 mm
HD7	6	X offset to machine origin	10 E-4 mm
HD8	7	Y offset to machine origin	10 E-4 mm
HD9	8	Z offset to machine origin	10 E-4 mm
HD10	9	X offset B rotary axis to origin WCS	10 E-4 mm
HD11	10	Y offset B rotary axis to origin WCS	10 E-4 mm
HD12	11	Z offset B rotary axis to origin WCS	10 E-4 mm
HD13	12	Rotary offset A axis	10 E-4°
HD14	13	Rotary offset B axis	10 E-4°
HD15	14	Rotation direction flag A axis	[-]
HD16	15	Rotation direction flag B axis	[-]

2.32

KIN_TYP_64 – 6-axis kinematics with C/A/C workpiece table

Kinematic structure

The kinematic structure consists of 3 translatory axes in the tool and 3 rotary axes in the work-piece.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, C1, A, C2	
Axis index	0, 1, 2, 3, 4, 5	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z	C1, A, C2

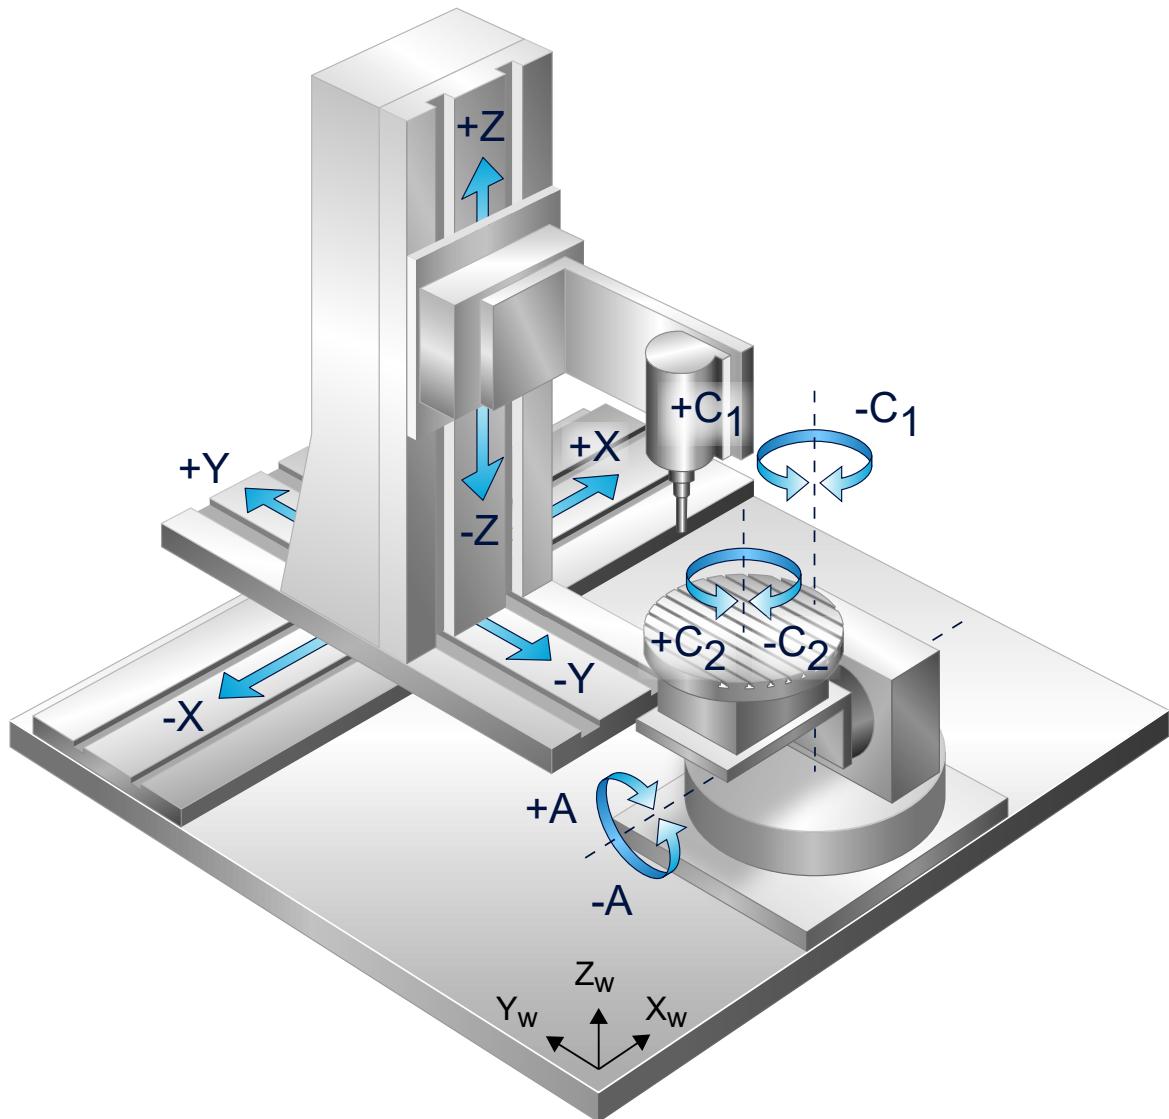


Fig. 87: Kinematic structure of 6-axis machine with CAC workpiece table.

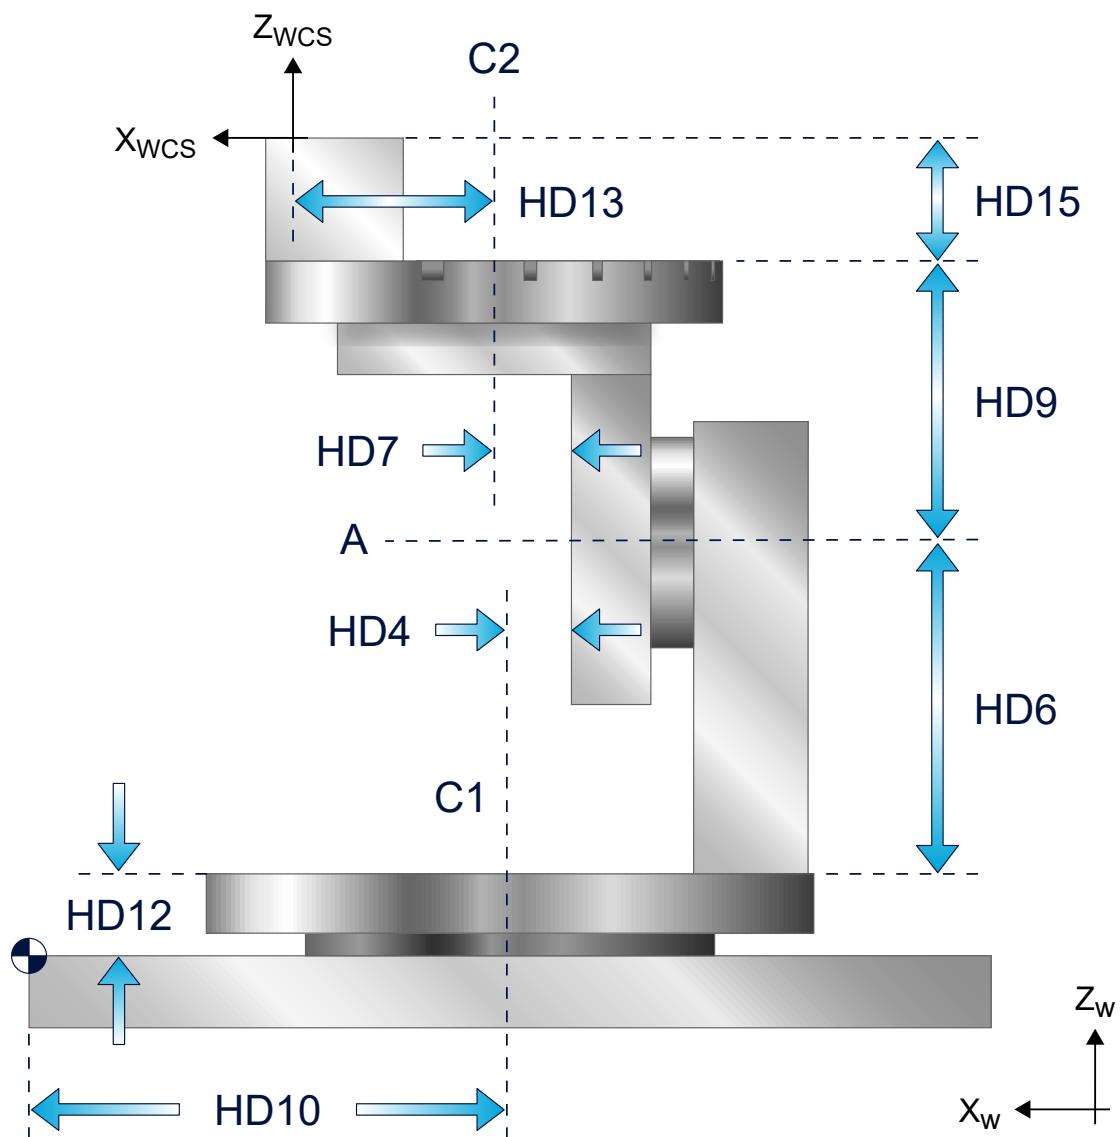


Fig. 88: Parameters of CAC workpiece table in X/Z representation

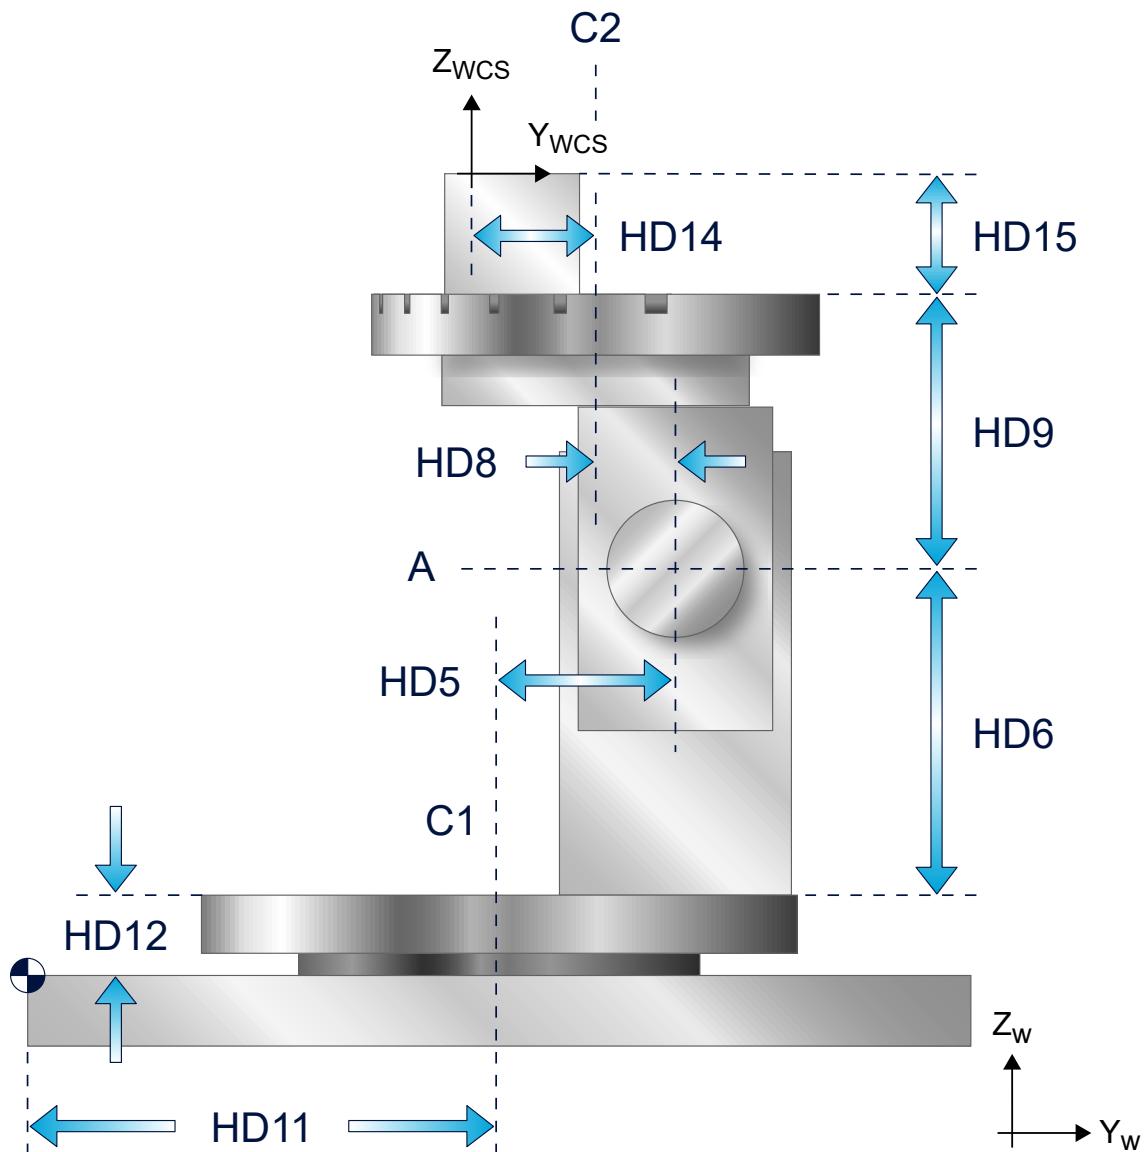


Fig. 89: Parameters of CAC workpiece table in Y/Z representation

Typically, the machine origin is located in the rotary axis C1. If required, it can be shifted using parameters HD10 to HD12. Differing origin positions of rotary axes C1 and A or A and C2 can be set using parameters HD4 to HD9 so that the internal kinematic model matches the real machine kinematics. In the same way, differing directions of rotation of the axes C1, A and C2 can be set using the parameters HD16 to HD18. In general, the signs of command and actual parameters must also be modified accordingly in the axis parameters.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z tool offset holding device to reference point tool slide SBP	10 E-4 mm
HD2	1	X axis offset holding device to reference point tool slide SBP	10 E-4 mm
HD3	2	Y axis offset holding device to reference point tool slide SBP	10 E-4 mm
HD4	3	X axis offset rotary axis C1 to rotary axis A, origin WCS	10 E-4 mm
HD5	4	Y axis offset rotary axis C1 to rotary axis A, origin WCS	10 E-4 mm
HD6	5	Z axis offset rotary axis C1 to rotary axis A, origin WCS	10 E-4 mm
HD7	6	X axis offset rotary axis A to rotary axis C2, origin WCS	10 E-4 mm
HD8	7	Y axis offset rotary axis A to rotary axis C2, origin WCS	10 E-4 mm
HD9	8	Z axis offset rotary axis A to rotary axis C2, origin WCS	10 E-4 mm
HD10	9	X offset machine origin MNP to rotary axis C1	10 E-4 mm
HD11	10	Y offset machine origin MNP to rotary axis C1	10 E-4 mm
HD12	11	Z offset machine origin MNP to rotary axis C1	10 E-4 mm
HD13	12	X offset origin CS	10 E-4 mm
HD14	13	Y offset origin CS	10 E-4 mm
HD15	14	Z offset origin CS	10 E-4 mm
HD16	15	Rotary offset C1 axis	10 E-4°
HD17	16	Rotary offset A axis	10 E-4°
HD18	17	Rotary offset C2 axis	10 E-4°
HD19	18	Rotation direction flag C1 axis	[-]
HD20	19	Rotation direction flag A axis	[-]
HD21	20	Rotation direction flag C2 axis	[-]

2.33 KIN_TYP_70 – 5-axis kinematics

Kinematic structure

The kinematic structure consists of 3 translatory and 3 rotary NC axes in the tool. With these kinematics, tool head rotation about Z can be set in the case of non-axis-parallel orientation of the BA rotary head. A virtual axis CV can be used to affect tool orientation.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, B, A, CV	
Axis index	0, 1, 2, 3, 4, 5	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, B, A, CV	-

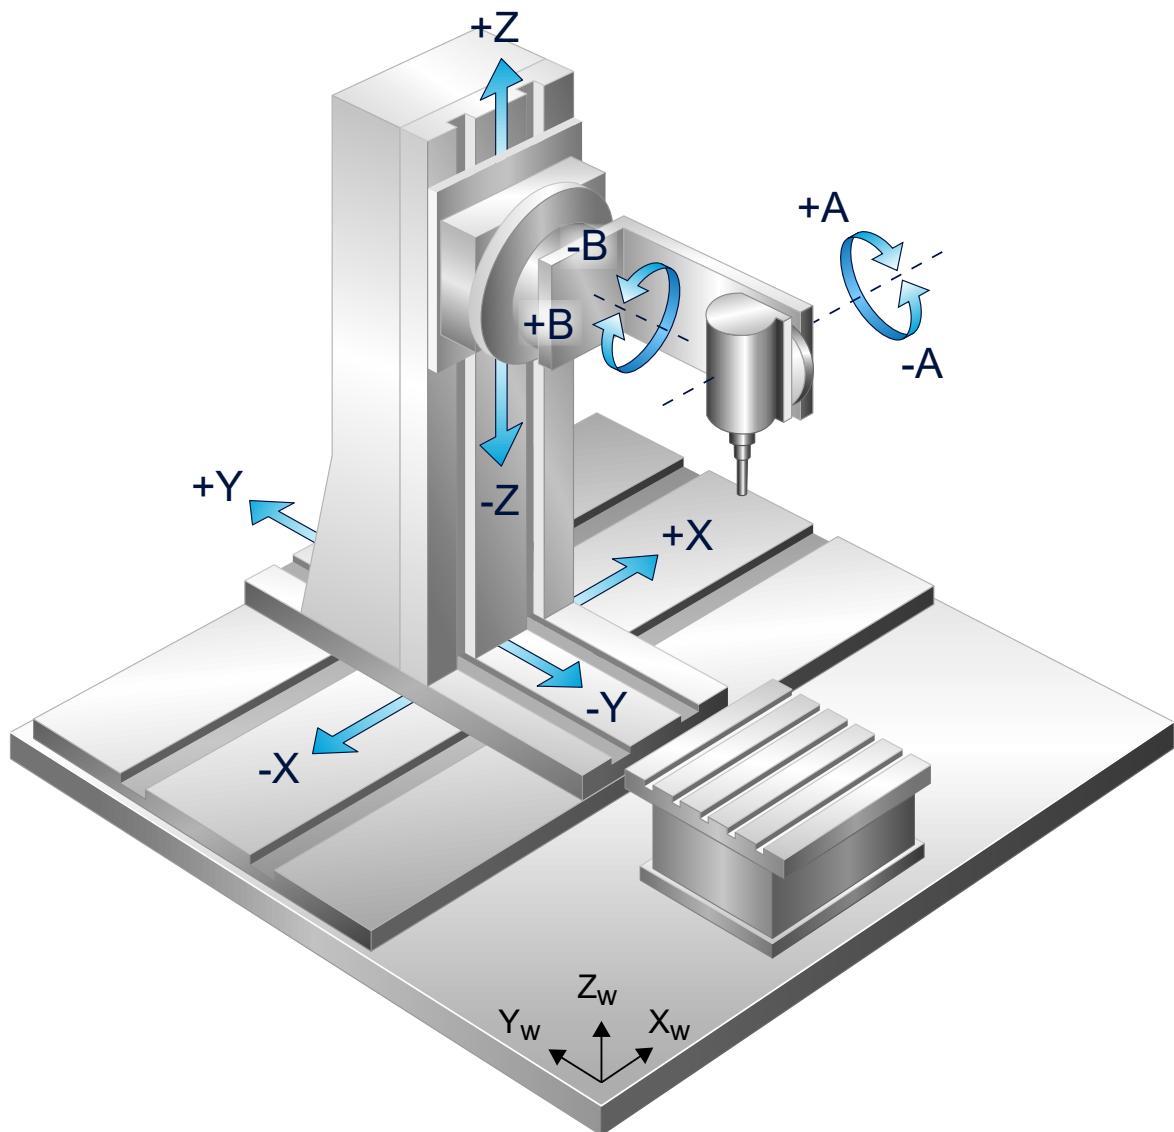


Fig. 90: Axis configuration of 5-axis machine

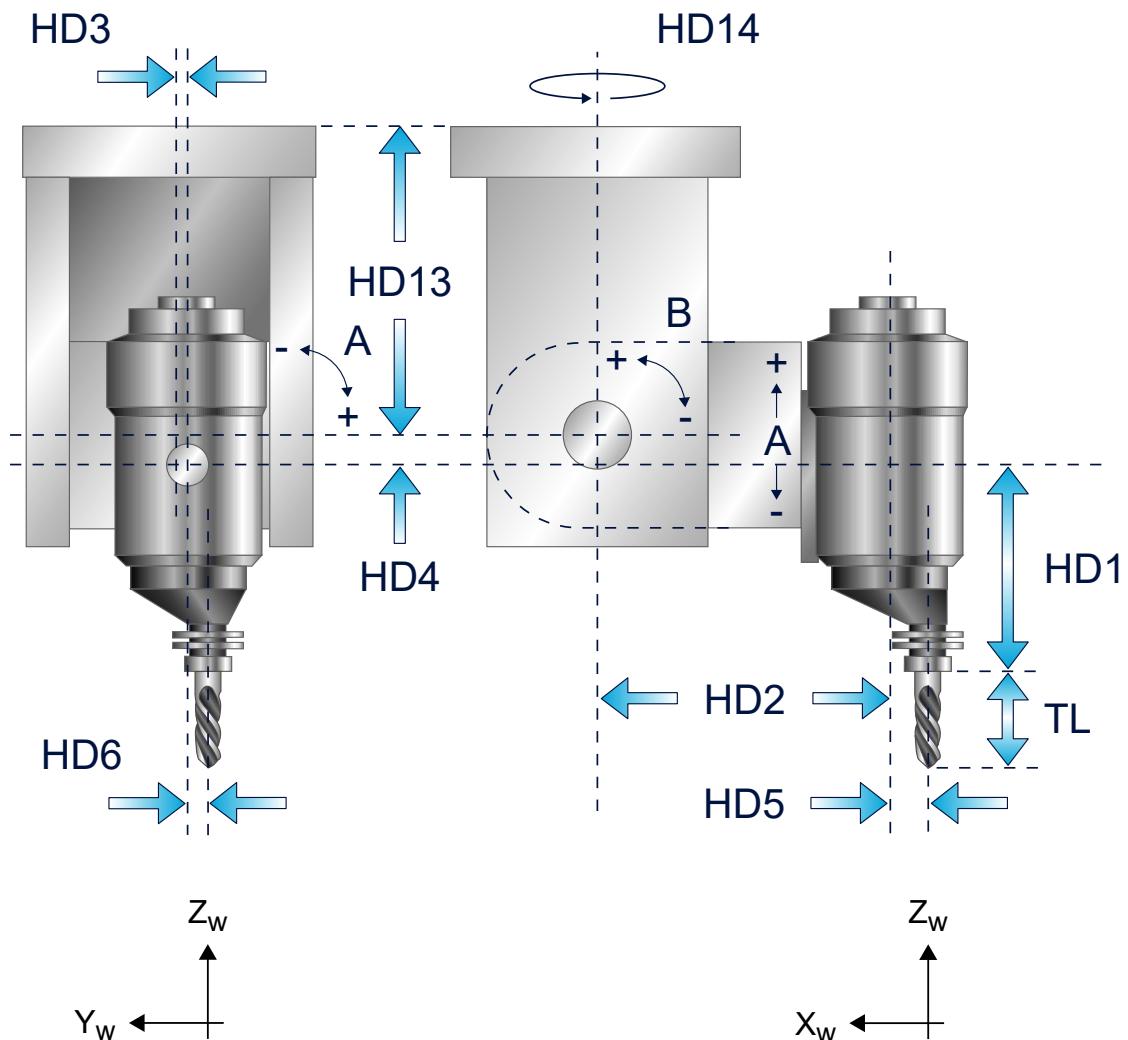


Fig. 91: Tool head parameters

Offset data of kinematics:

HD offset	param[i]	Description	Unit
HD1	0	Z offset to tool holding device	10 E-4 mm
HD2	1	X offset	10 E-4 mm
HD3	2	Y offset	10 E-4 mm
HD4	3	Z offset	10 E-4 mm
HD5	4	X offset	10 E-4 mm
HD6	5	Y axis offset to tool	10 E-4 mm
HD7	6	Rotary offset A axis	10 E-4°
HD8	7	Rotary offset B axis	10 E-4°
HD9	8	Sign for direction of rotation A axis	[-]
HD10	9	Sign for direction of rotation B axis	[-]
HD14	13	Rotary offset about Z (head position)	10 E-4°

Top view

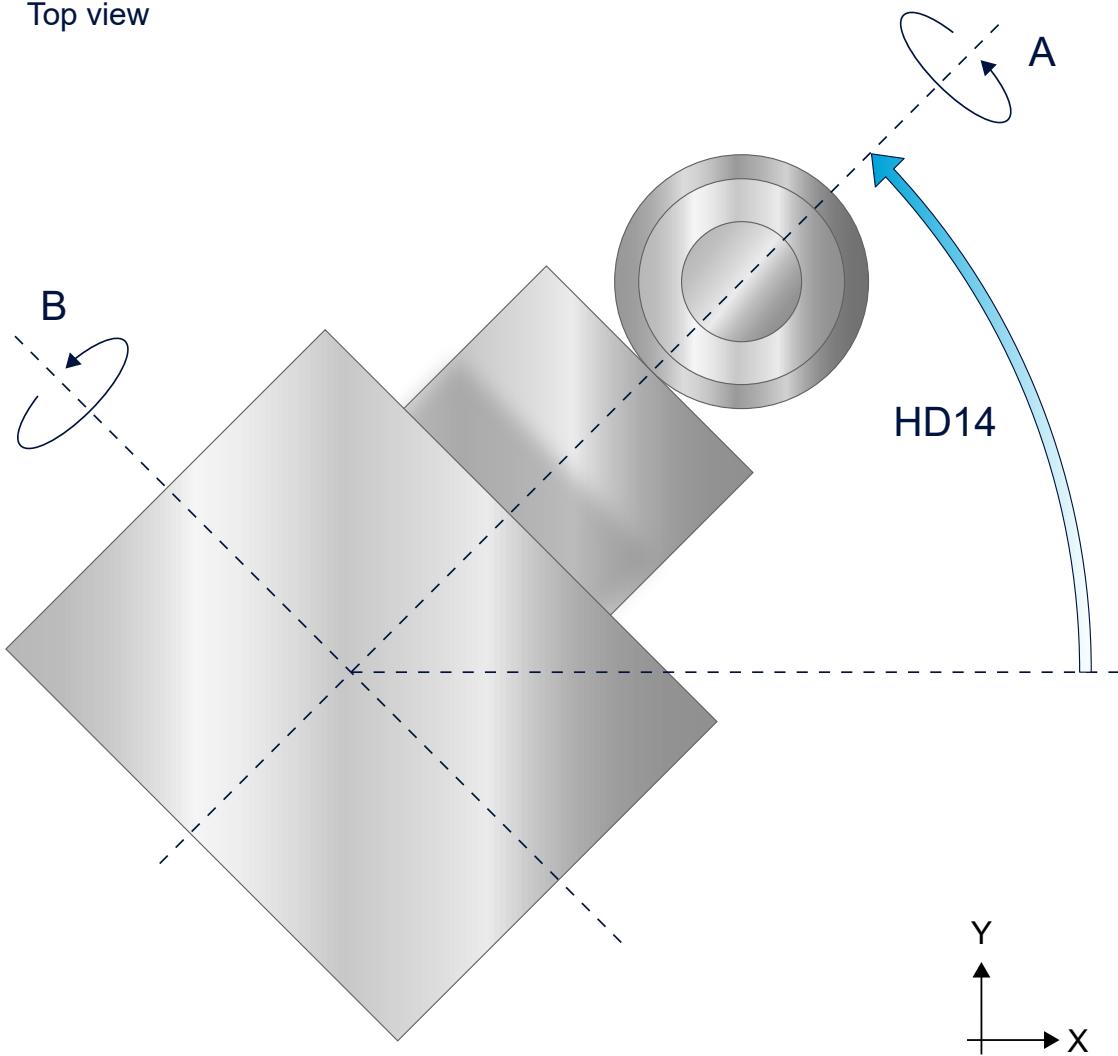


Fig. 92: Angular offset of rotary/swivel head

The CV axis is not a physical real axis existing in the kinematic structure. The CV axis executes a rotation of the tool direction vector about Z, i.e. the angles A and B are calculated depending on CV. One application can be the perpendicular alignment of one component of the XY tool direction to the programmed contour. This axis must therefore be configured as a simulation axis and can then be addressed in the NC program as usual.

The permitted angle range of the A and B axes is in the range of +/- 90 degrees.

2.34

KIN_TYP_76 – 5-axis kinematics with MTCP oblique tool head

Kinematic structure

The kinematic structure consists of 3 translatory and 3 rotary NC axes in the tool. The A and B axes are arranged about the Y axis at an angle $\neq 90$ degrees. Due to the design structure the TCP is mechanically compensated (MTCP). As required, a tool length can also be set but this leads to compensation motions in the Cartesian axes.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, C, A	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z,A,B	-

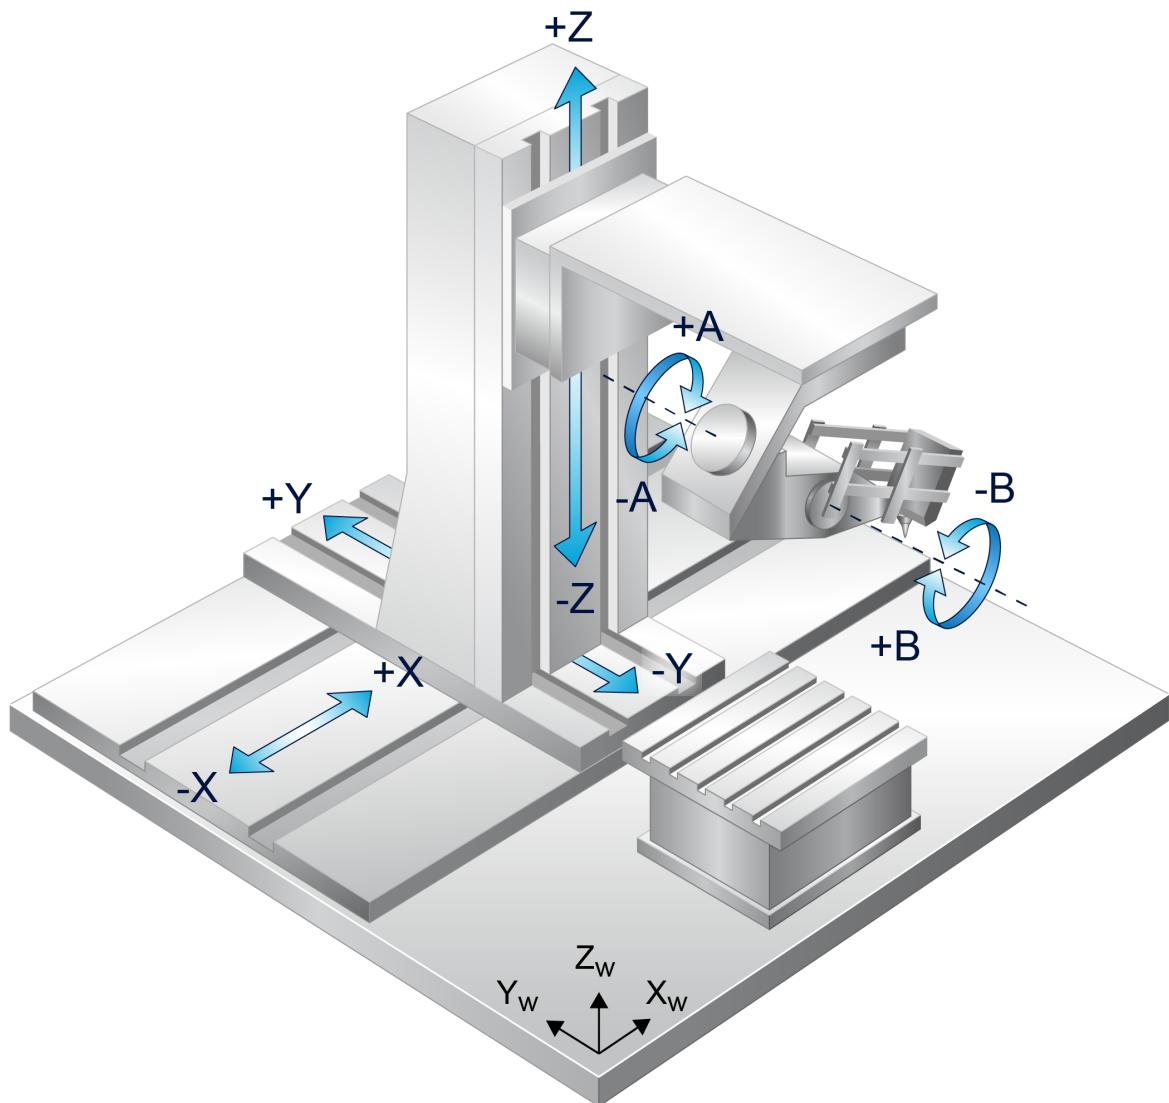


Fig. 93: Axis configuration of 5-axis machine

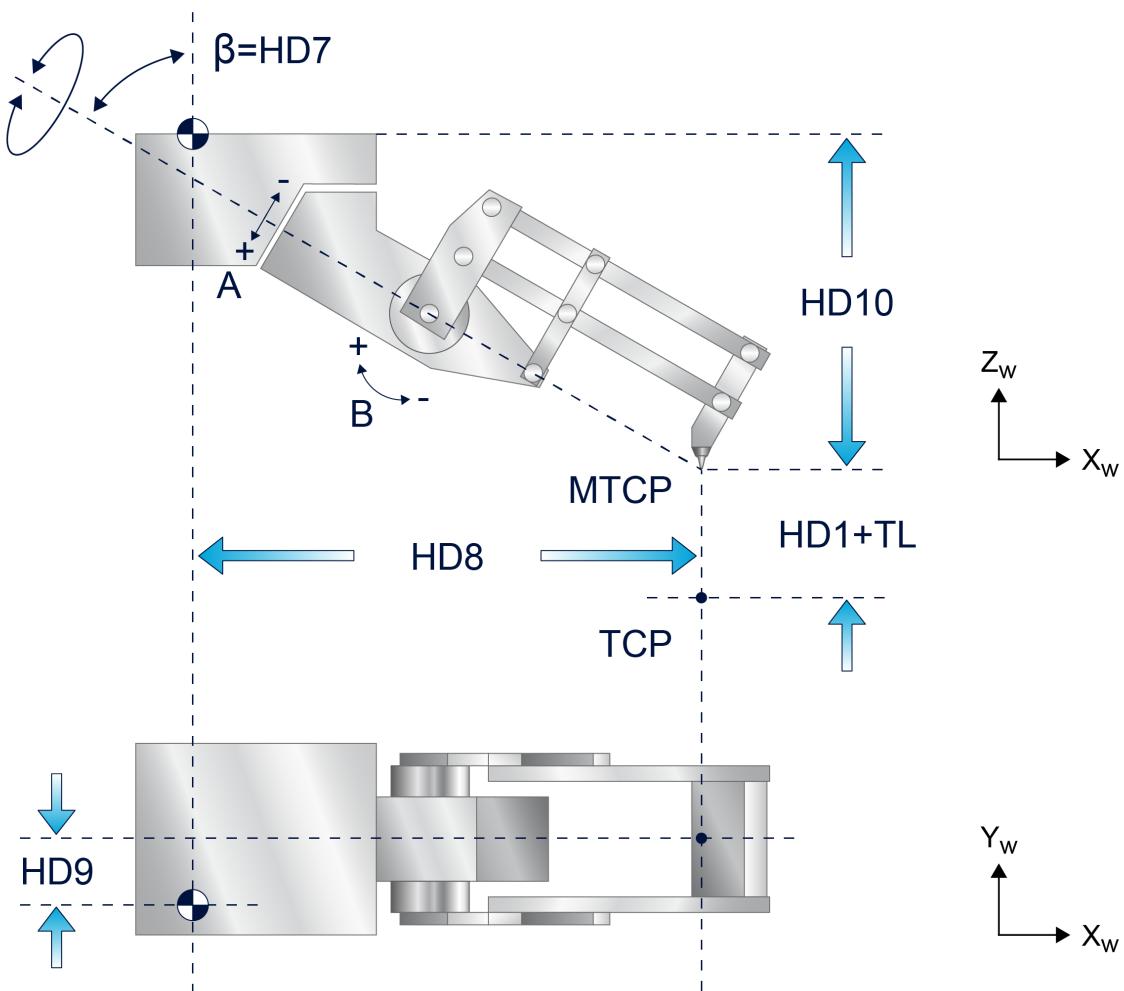


Fig. 94: Tool head parameters

Offset data of kinematics:

HD offset	param[i]	Description	Unit
HD1	0	Z offset to tool holding device	10 E-4 mm
HD6	5	Angle offset between Cartesian MCS and cutting head CS	10 E-4°
HD7	6	Angle between A axis and Z axis	10 E-4°
HD8	7	X offset MTCP to machine origin	10 E-4 mm
HD9	8	Y offset MTCP to machine origin	10 E-4 mm
HD10	9	Z offset MTCP to machine origin	10 E-4 mm

Tool orientation is programmed using rotation angles C and A with a rotation sequence in the listed sequence. With $HD6 = 65$ degrees the maximum angle position is in range of ± 60 degrees.

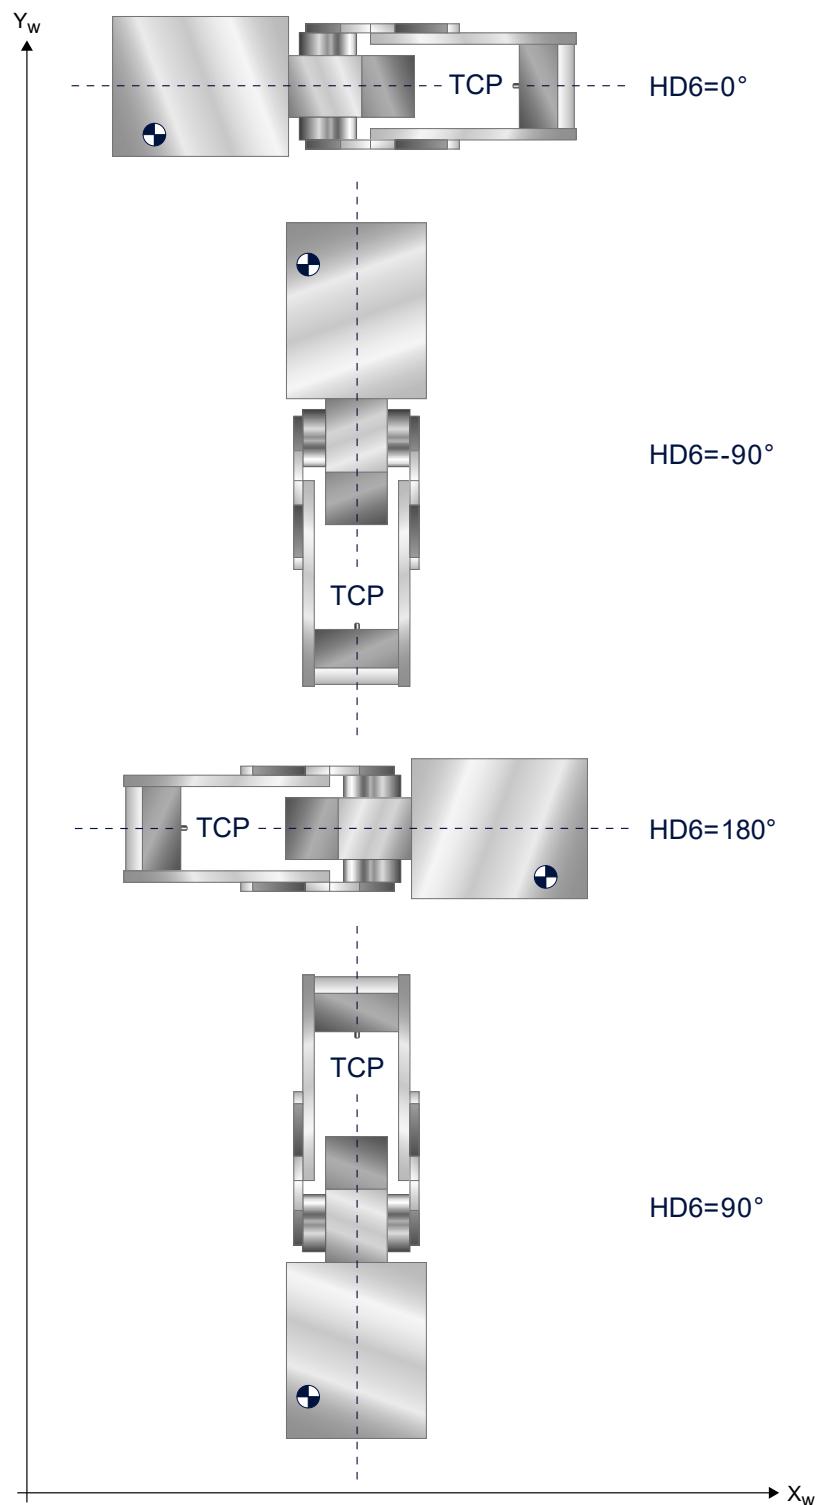


Fig. 95: Angle offset of bevel head with regard to mounting

The orientation of the bevel head with regard to the Cartesian machine coordinate system can be set with parameter HD6.

2.35 KIN_TYP_80 – 5-axis kinematics with A/B workpiece table

Kinematic structure

The kinematic structure consists of 3 translatory NC axes in the tool and two rotary NC axes in the workpiece.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, A, B	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z	A, B

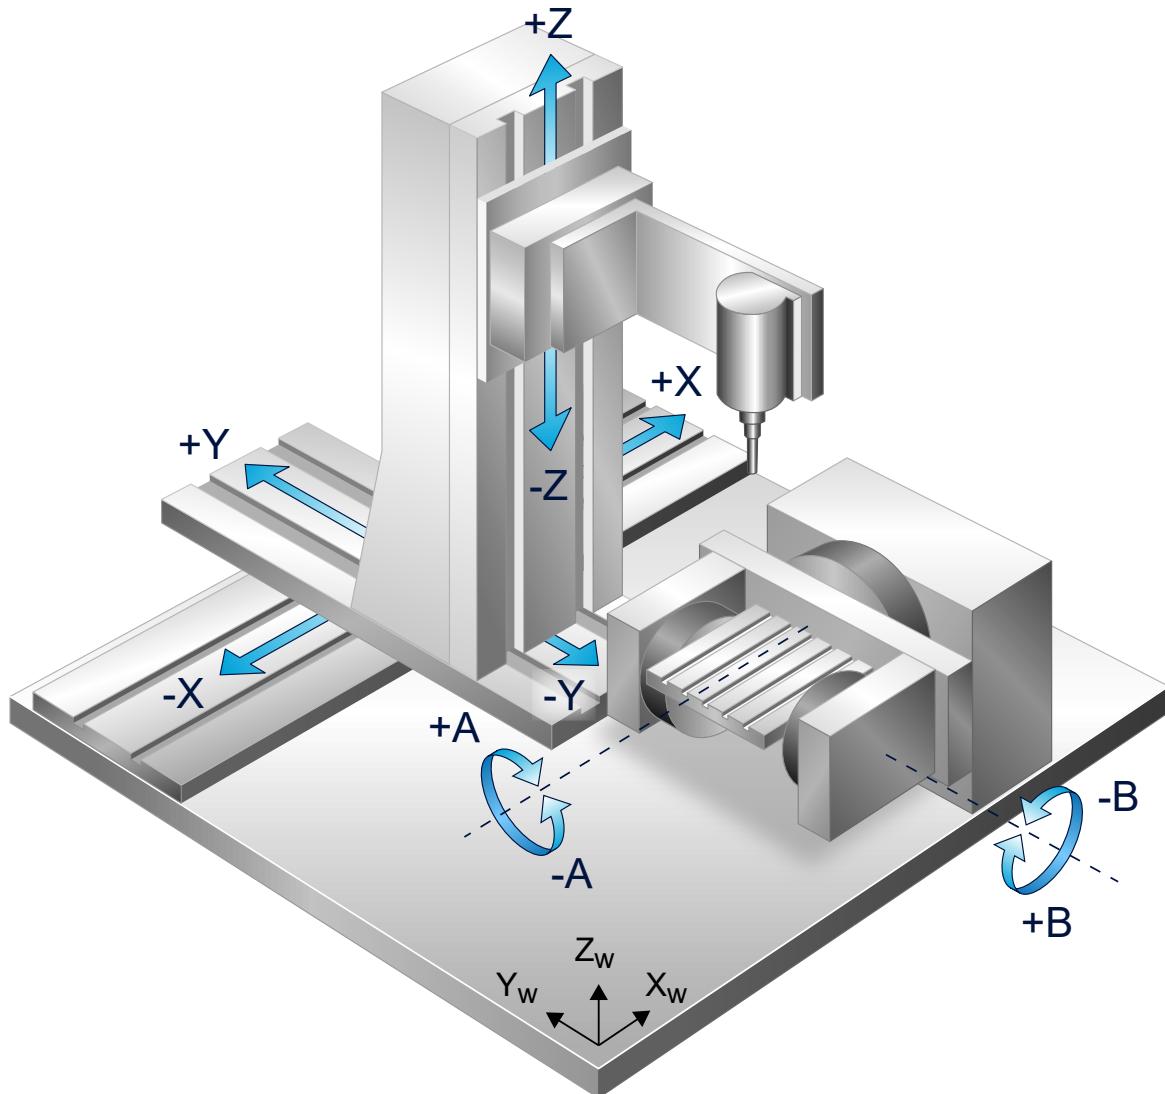


Fig. 96: Axis configuration of 5-axis machine

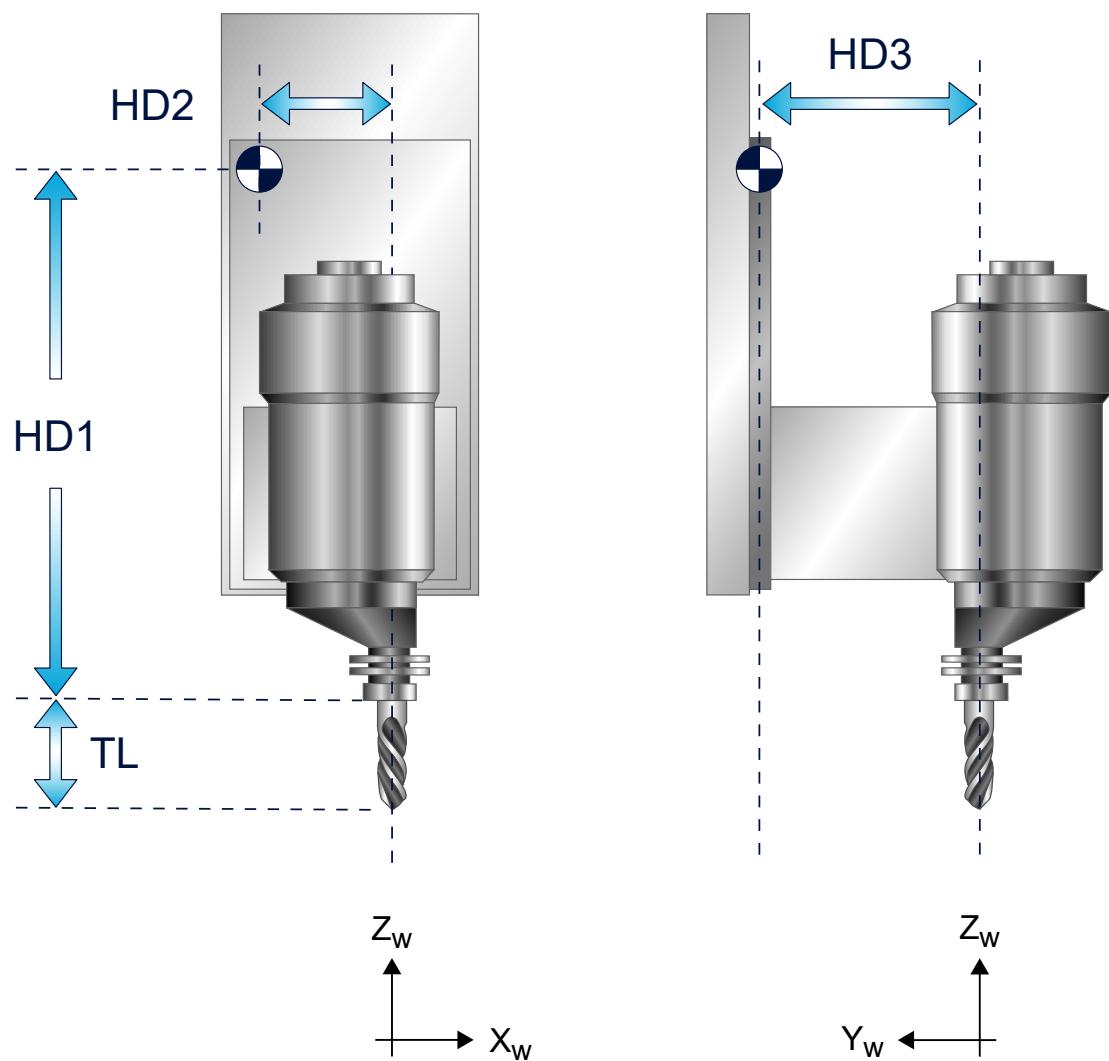


Fig. 97: Offsets of tool head

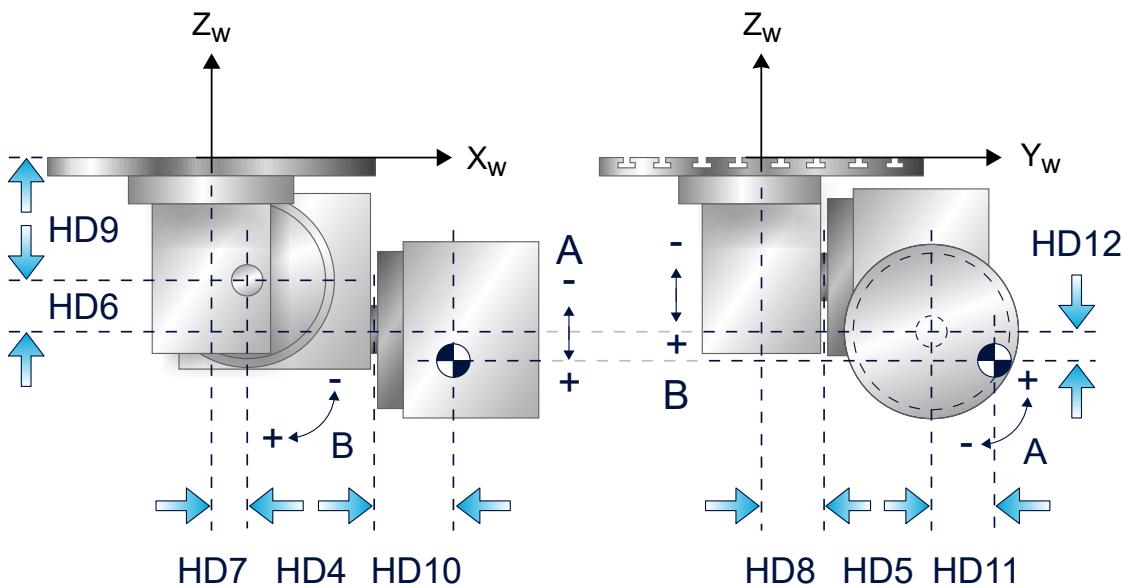


Fig. 98: Offsets of workpiece holder

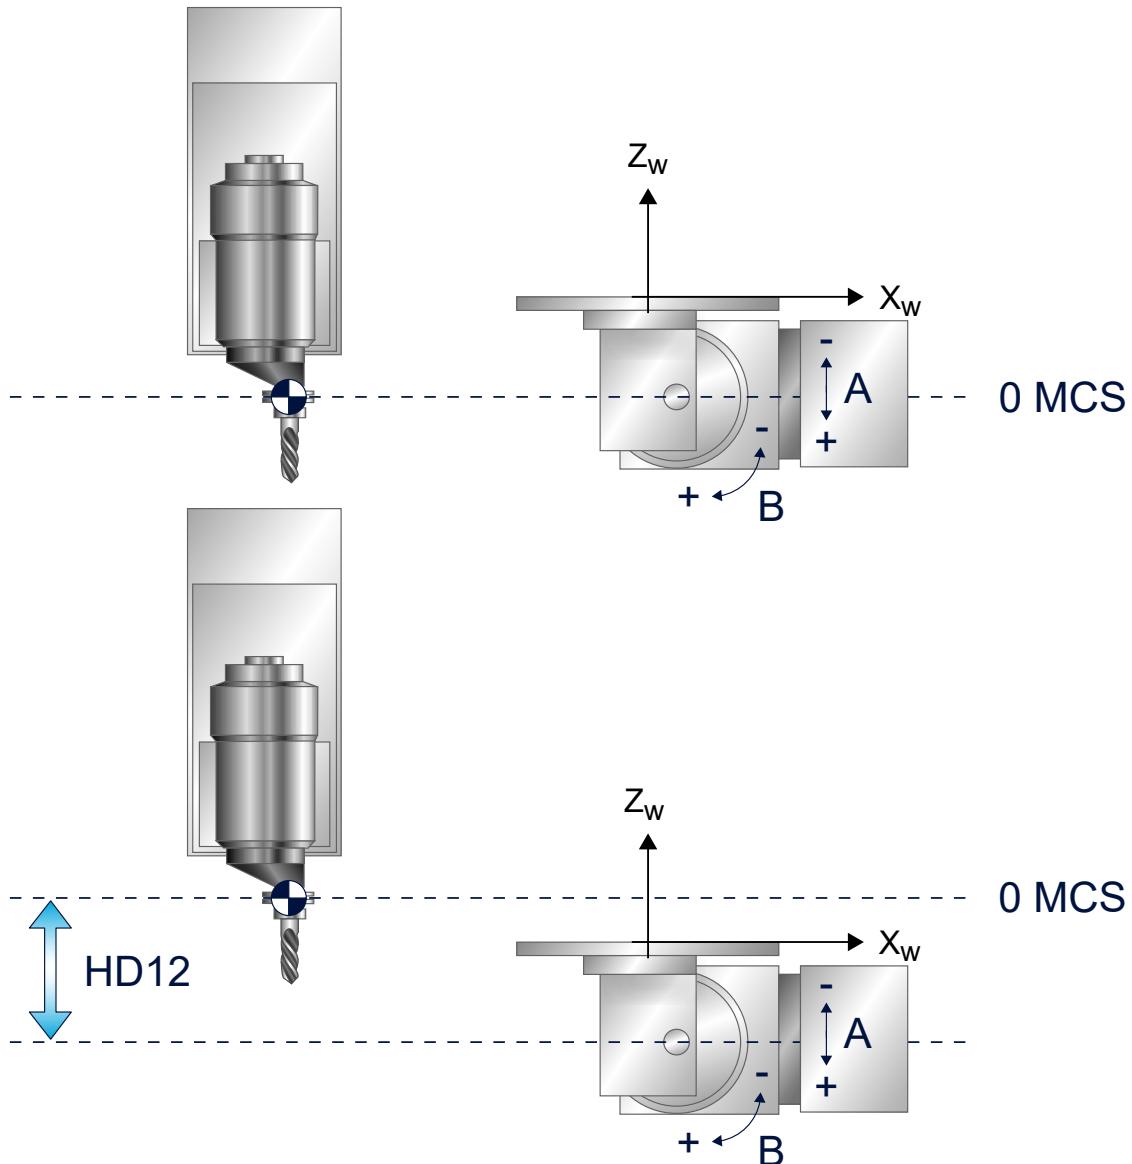


Fig. 99: Ideal and real Z zero position

When the kinematic structure is in ideal zero position, the rotary axis A in the workpiece and the reference point on the tool slide (here tool holding device) intersect at one point. The machine axis positions of the tool slide are then 0 in this position. In general these axis positions cannot be approached with a machine. The offsets to this position at tool slide position 0 can be set with parameters HD10, HD11, HD12.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset reference point tool slide to tool holding device	10 E-4 mm
HD2	1	X offset reference point tool slide to tool holding device	10 E-4 mm
HD3	2	Y offset reference point tool slide to tool holding device	10 E-4 mm
HD4	3	X axis offset rotary axis A to rotary axis B	10 E-4 mm
HD5	4	Y axis offset rotary axis A to rotary axis B	10 E-4 mm
HD6	5	Z axis offset rotary axis A to rotary axis B	10 E-4 mm
HD7	6	X axis offset rotary axis B to origin WCS	10 E-4 mm
HD8	7	Y axis offset rotary axis B to origin WCS	10 E-4 mm
HD9	8	Z axis offset rotary axis B to origin WCS	10 E-4 mm
HD10	9	X offset to machine origin MNP	10 E-4 mm
HD11	10	Y offset to machine origin MNP	10 E-4 mm
HD12	11	Z offset to machine origin MNP	10 E-4 mm
HD13	12	Rotary offset A axis	10 E-4°
HD14	13	Rotary offset B axis	10 E-4°
HD15	14	Rotation direction flag A axis	[-]
HD16	15	Rotation direction flag B axis	[-]

2.36**KIN_TYP_81 – 5-axis kinematics with B/A workpiece table****Kinematic structure**

The kinematic structure consists of 3 translatory NC axes in the tool and two rotary NC axes in the workpiece.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, B, A	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z	B, A

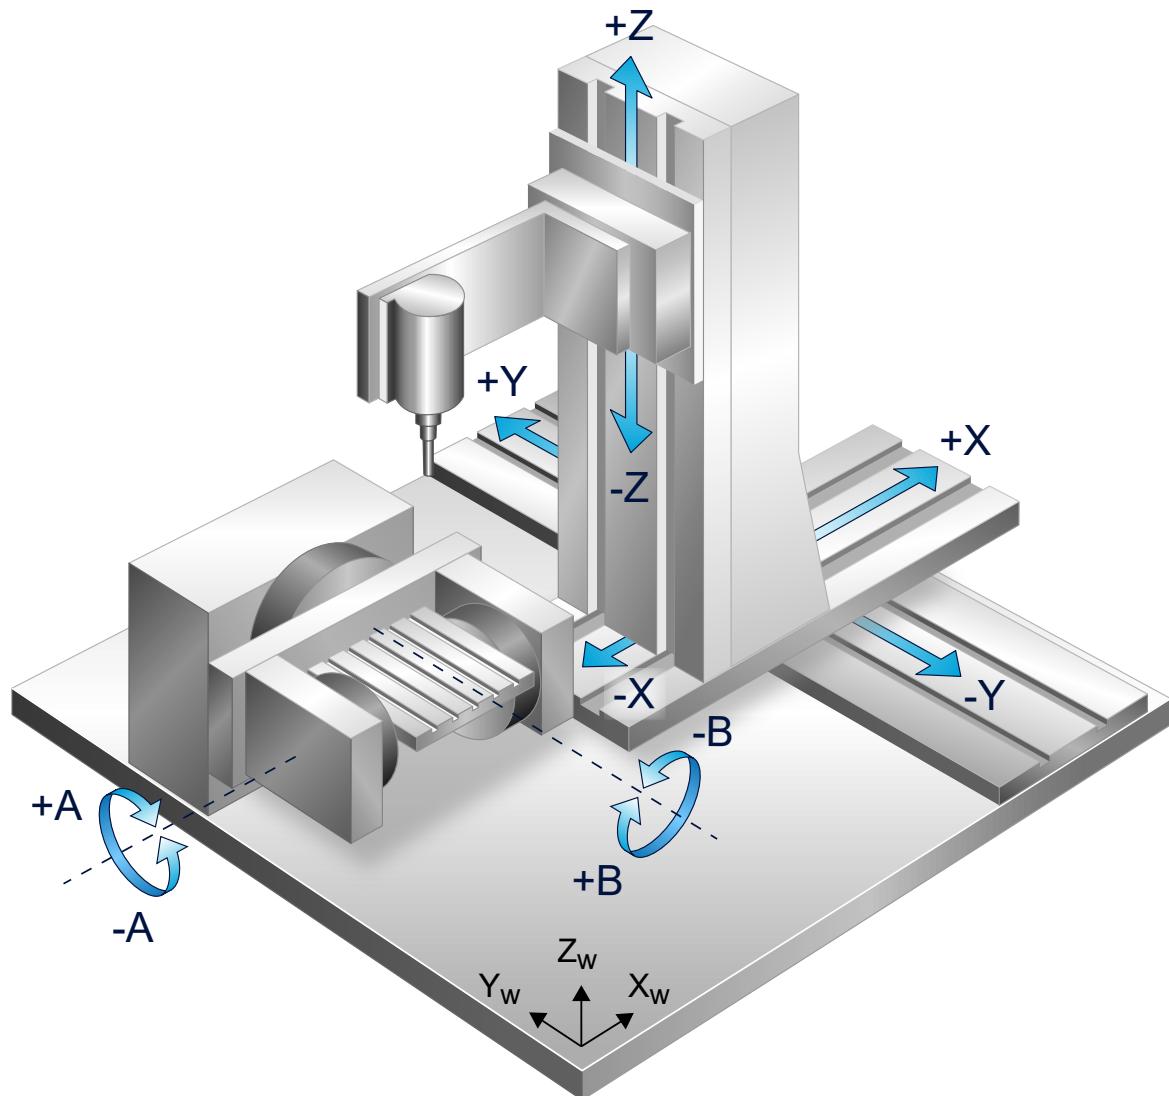


Fig. 100: Axis configuration of 5-axis machine

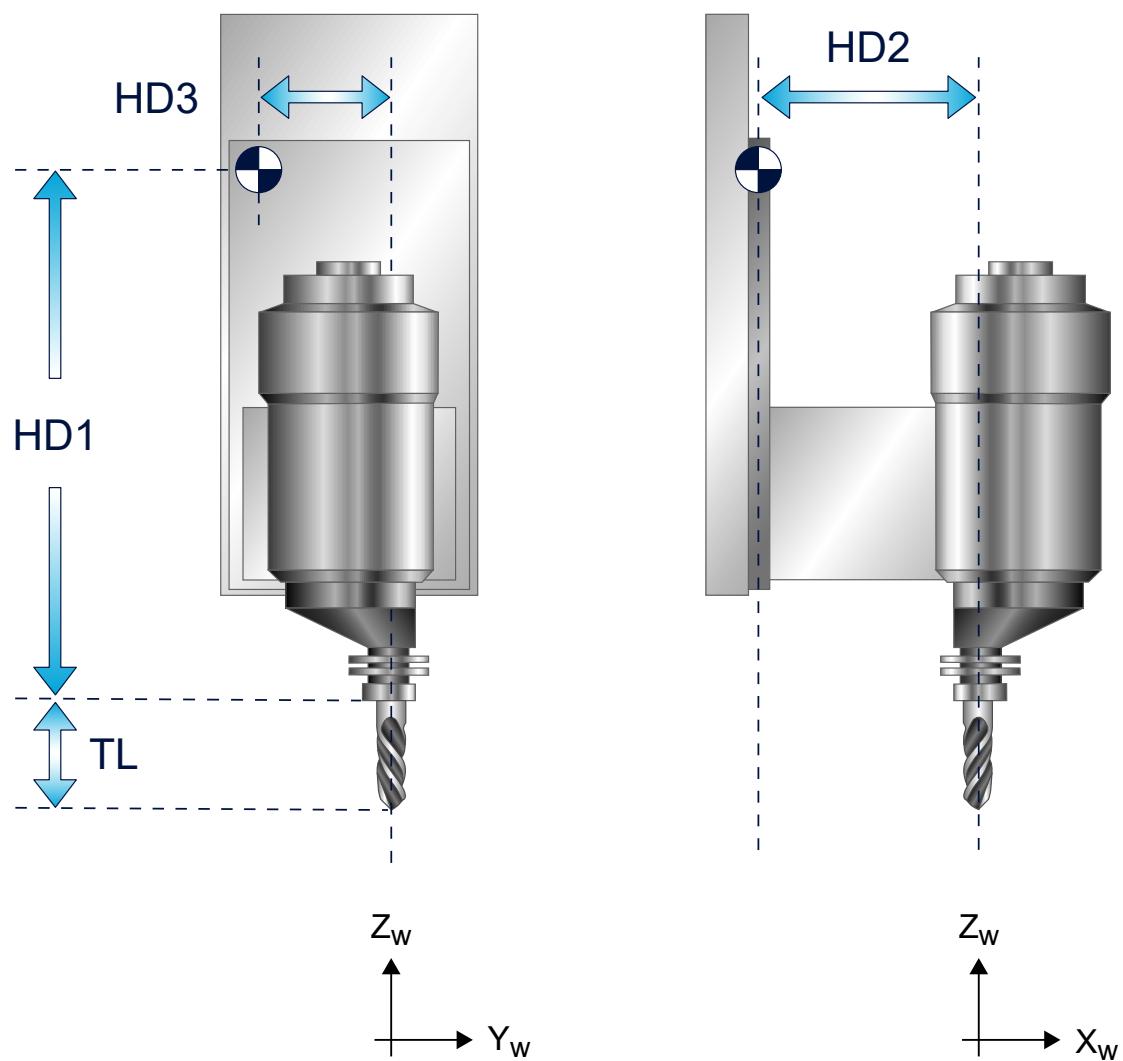


Fig. 101: Offsets of tool head

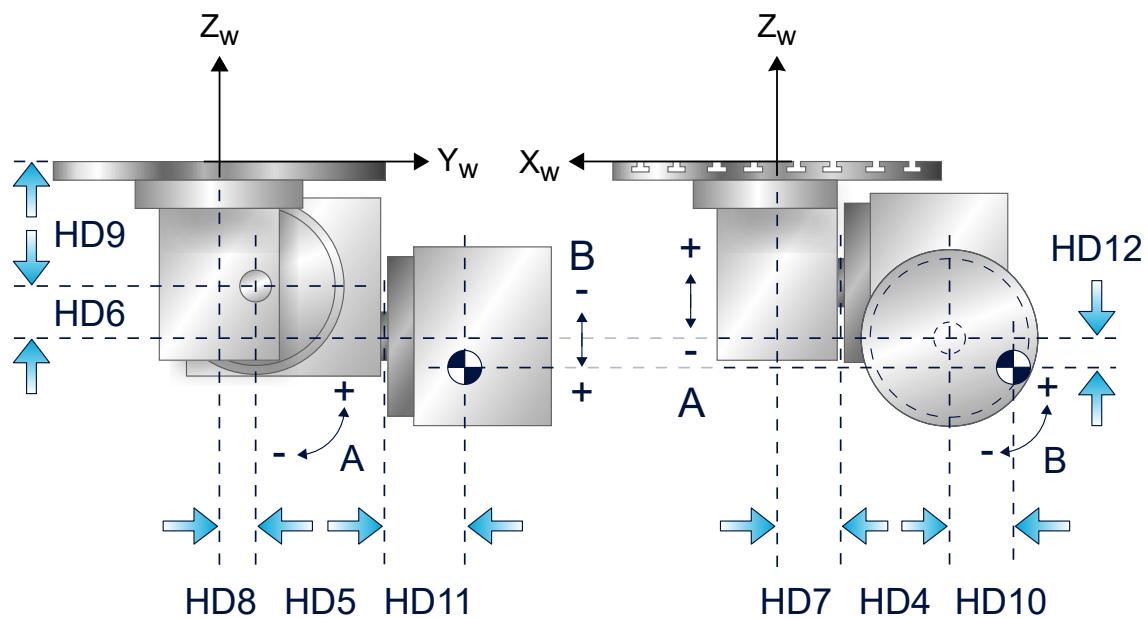


Fig. 102: Offsets of workpiece holder

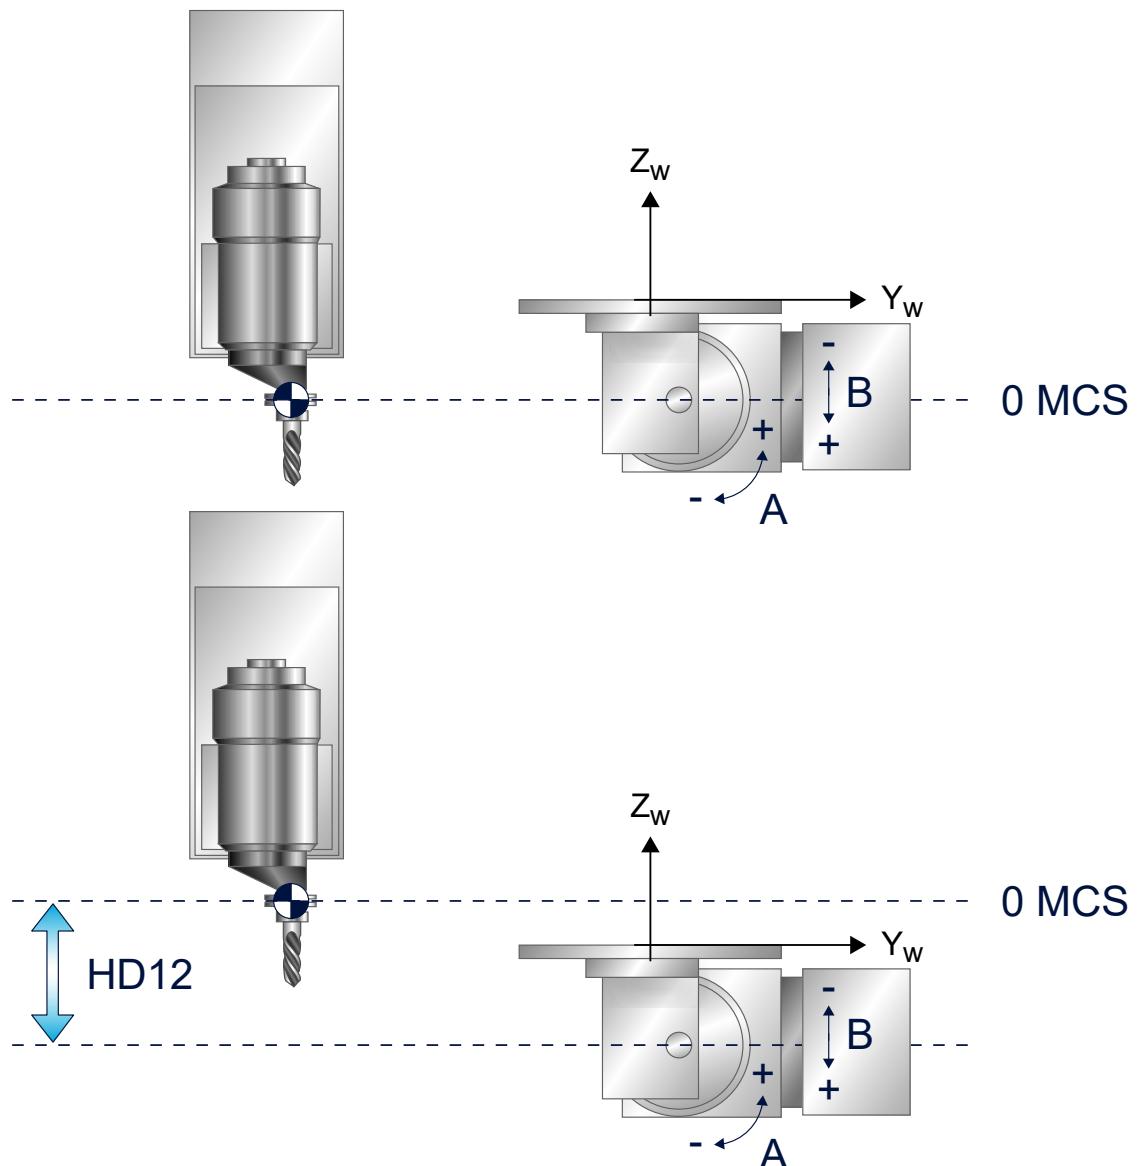


Fig. 103: Ideal and real Z zero position

In the ideal zero position of the kinematic structure, the rotary axis B in the workpiece and the reference point on the tool slide (here tool holding device) intersect at one point. The machine axis positions of the tool slide are then 0 in this position. In general these axis positions cannot be approached with a machine. The offsets to this position at tool slide position 0 can be set with parameters HD10, HD11, HD12.

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset reference point Tool slide to tool holding device	10 E-4 mm
HD2	1	X offset reference point Tool slide to tool holding device	10 E-4 mm
HD3	2	Y offset reference point Tool slide to tool holding device	10 E-4 mm
HD4	3	X axis offset rotary axis B to rotary axis A	10 E-4 mm
HD5	4	Y axis offset rotary axis B to rotary axis A	10 E-4 mm
HD6	5	Z axis offset rotary axis B to rotary axis A	10 E-4 mm
HD7	6	X axis offset rotary axis A to origin WCS	10 E-4 mm
HD8	7	Y axis offset rotary axis A to origin WCS	10 E-4 mm
HD9	8	Z axis offset rotary axis A to origin WCS	10 E-4 mm
HD10	9	X offset to machine origin MNP	10 E-4 mm
HD11	10	Y offset to machine origin MNP	10 E-4 mm
HD12	11	Z offset to machine origin MNP	10 E-4 mm
HD13	12	Rotary offset B axis	10 E-4°
HD14	13	Rotary offset A axis	10 E-4°
HD15	14	Rotation direction flag B axis	[-]
HD16	15	Rotation direction flag A axis	[-]

2.37

KIN_TYP_82 – 6-axis kinematics with C workpiece table

Kinematic structure

The kinematic structure consists of 3 translatory axes in the tool, 2 rotary NC axes in the tool and 1 rotary axis in the workpiece.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, B, C, A	
Axis index	0, 1, 2, 3, 4, 5	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, B, A	C

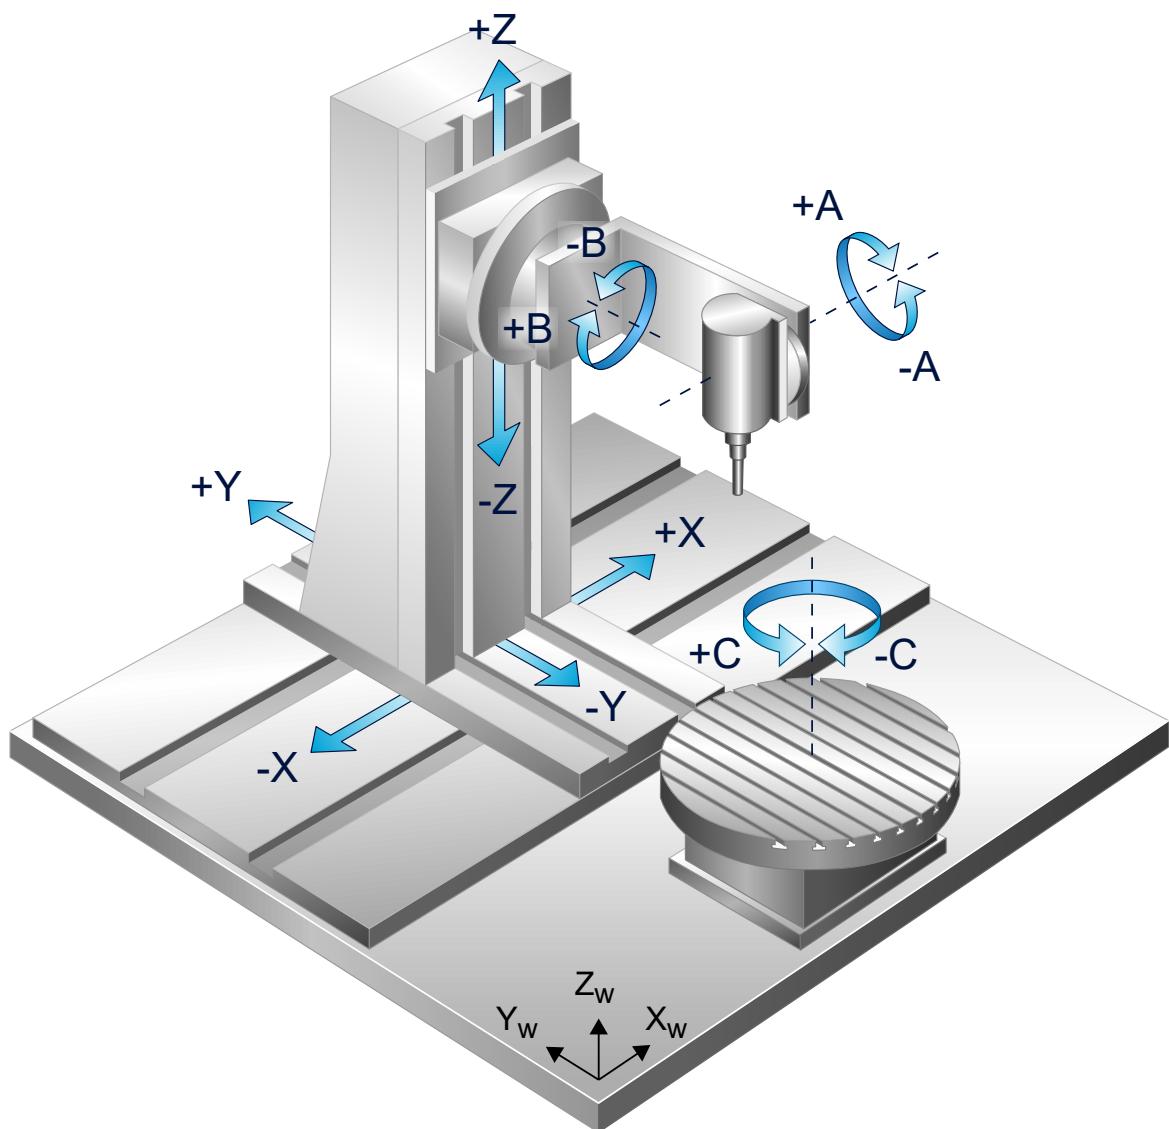


Fig. 104: Axis configuration of 6-axis machine

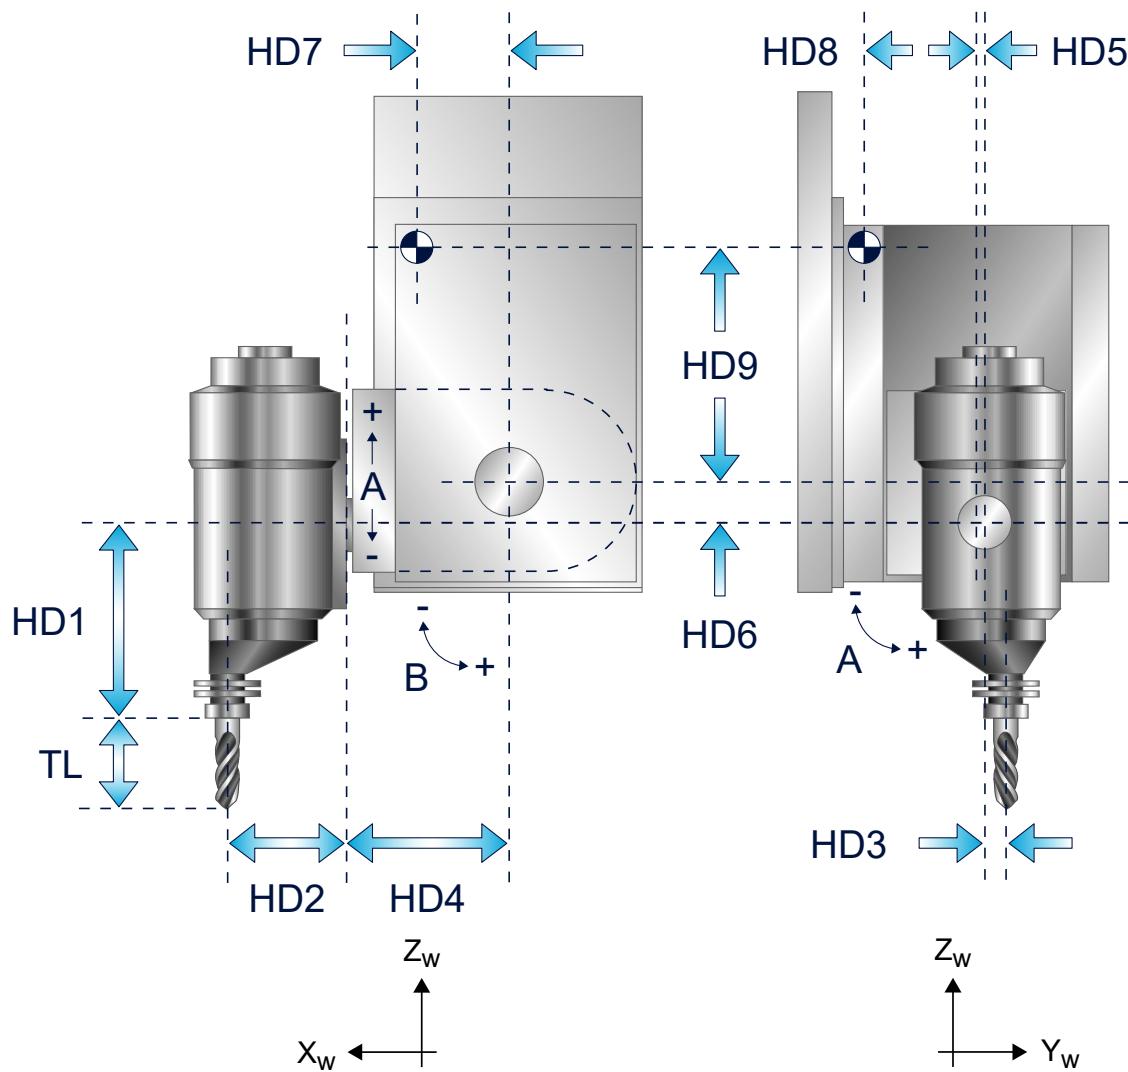


Fig. 105: Tool head parameters

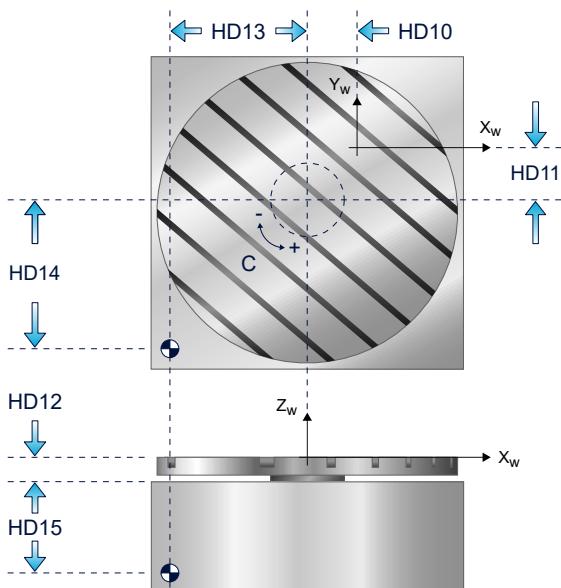


Fig. 106: Offsets on workpiece holder

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset tool to rotation point A axis	10 E-4 mm
HD2	1	X offset tool to rotation point A axis	10 E-4 mm
HD3	2	Y offset tool to rotation point A axis	10 E-4 mm
HD4	3	X offset rotation point A axis to B axis	10 E-4 mm
HD5	4	Y offset rotation point A axis to B axis	10 E-4 mm
HD6	5	Z offset rotation point A axis to B axis	10 E-4 mm
HD7	6	X offset B axis to reference point tool slide	10 E-4 mm
HD8	7	Y offset B axis to reference point tool slide	10 E-4 mm
HD9	8	Z offset B axis to reference point tool slide	10 E-4 mm
HD10	9	X offset C rotary axis to origin WCS	10 E-4 mm
HD11	10	Y offset C rotary axis to origin WCS	10 E-4 mm
HD12	11	Z offset C rotary axis to origin WCS	10 E-4 mm
HD13	12	X offset to machine origin	10 E-4 mm
HD14	13	Y offset to machine origin	10 E-4 mm
HD15	14	Z offset to machine origin	10 E-4 mm
HD16	15	Rotary offset B axis	10 E-4°
HD17	16	Rotary offset C axis	10 E-4°
HD18	17	Rotation direction flag B axis	[-]
HD19	18	Rotation direction flag C axis	[-]

2.38

KIN_TYP_85 – Lever arm kinematics

Kinematic structure

The kinematic structure consists of 1 translatory axis and 1 rotary NC axis. The transformation can be selected for any X axis position (ACS). In this case a corresponding machine X position (MCS) is determined.

Depending on the angle position when the transformation is selected, the programmed contour is moved in the left-handed or right-handed pattern. When the transformation is active, the selection side is retained, i.e. there is no swapping between right-handed/left-handed beam. To swap the selection side, the transformation must be switched off.

In the motion range of the transformation used, the rotary axis may not have a modulo transition.

Axis configuration in the NC channel		
Axis identifier	X, Z	
Axis index	0, 1	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, C	-

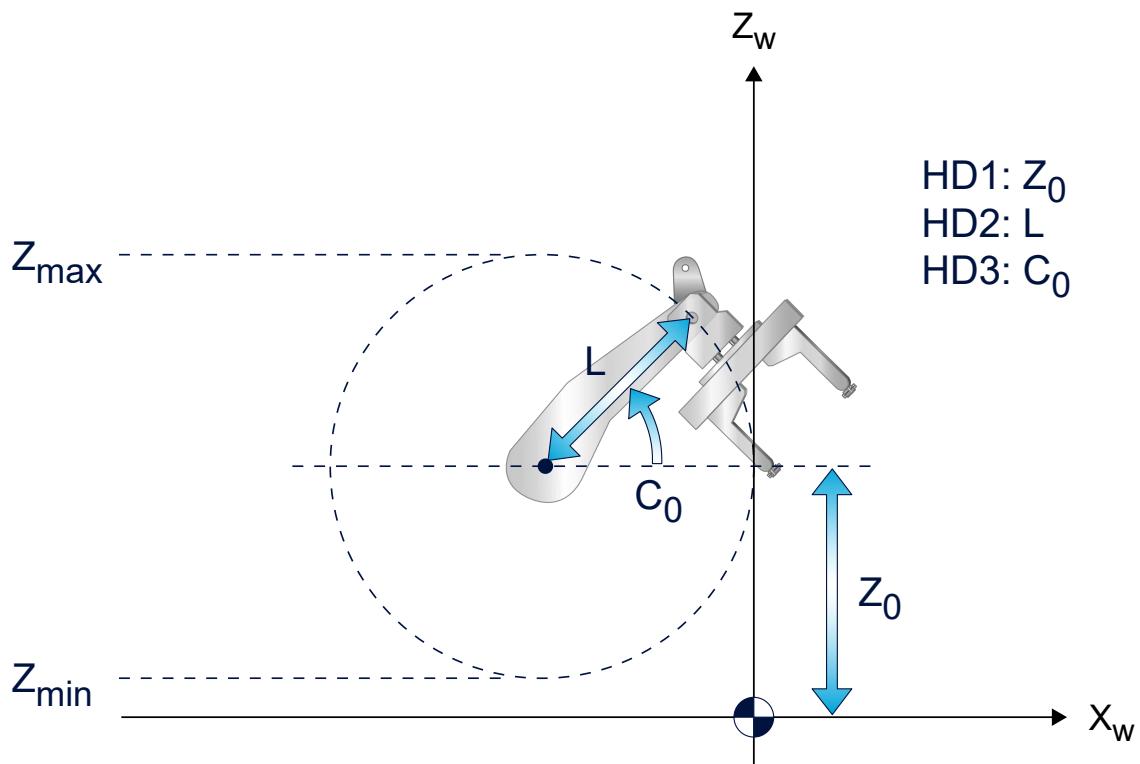


Fig. 107: Position of the coordinate system

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Z offset of rotation centre point	10 E-4 mm
HD2	1	Arm length of lever arm	10 E-4 mm
HD3	2	Angle offset of C axis to the horizontal	10 E-4°

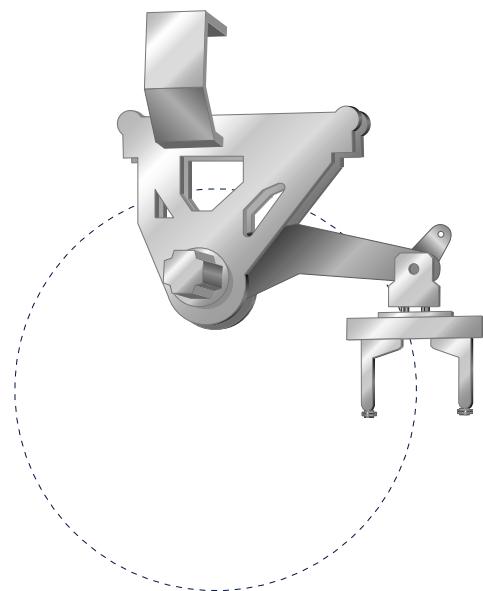


Fig. 108: Axis configuration for left-handed beam

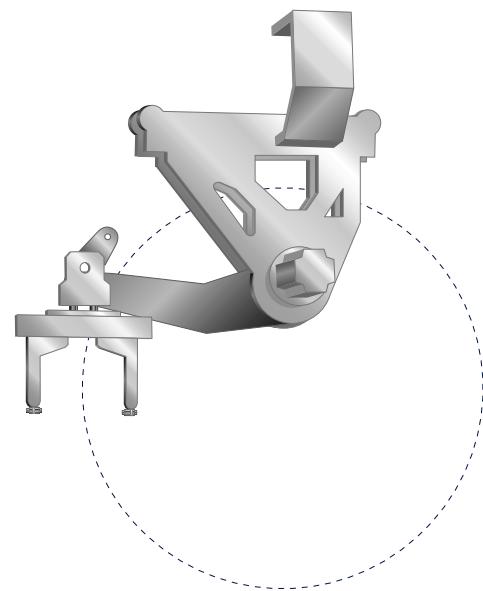


Fig. 109: Axis configuration for right-handed beam

2.39**KIN_TYP_207- five-axis kinematics with inclined tool****Kinematic structure**

The kinematic structure consists of 3 translatory NC axes and 1 rotary NC axis in the tool. A manually adjustable rotary 5th axis continues to be available. This kinematic allows inclined machining edges at a fixed with manually preset angle (A). This A axis cannot be addressed by the NC program.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, C	
Axis index	0, 1, 2, 3	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, A, C	-
Auxiliary axes	A	-

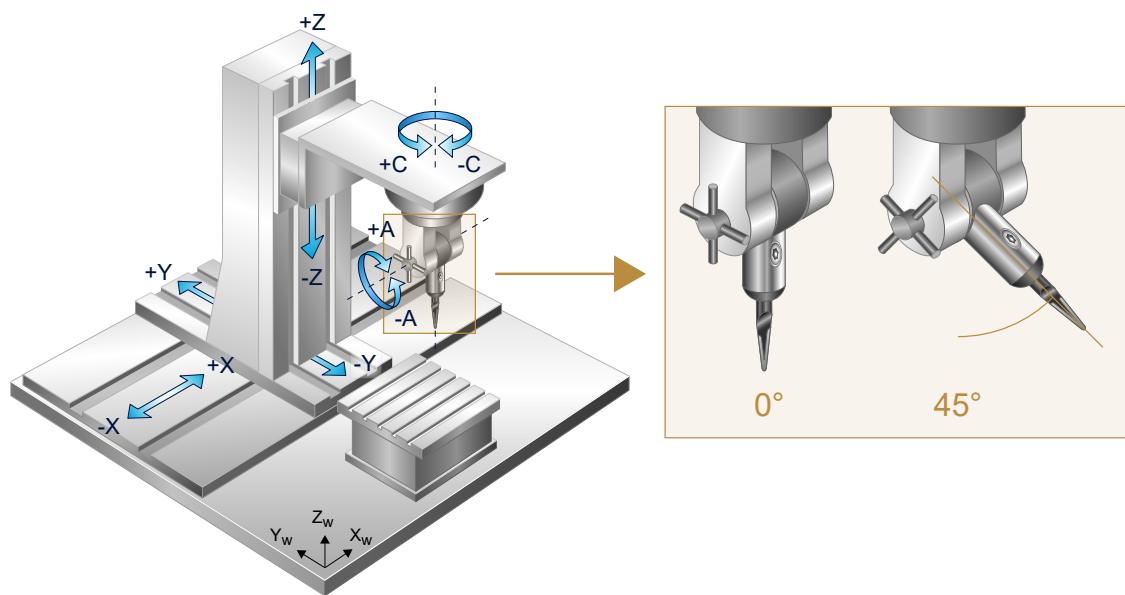


Fig. 110: 5-axis kinematic (metal cutting tool with manual auxiliary axis A)

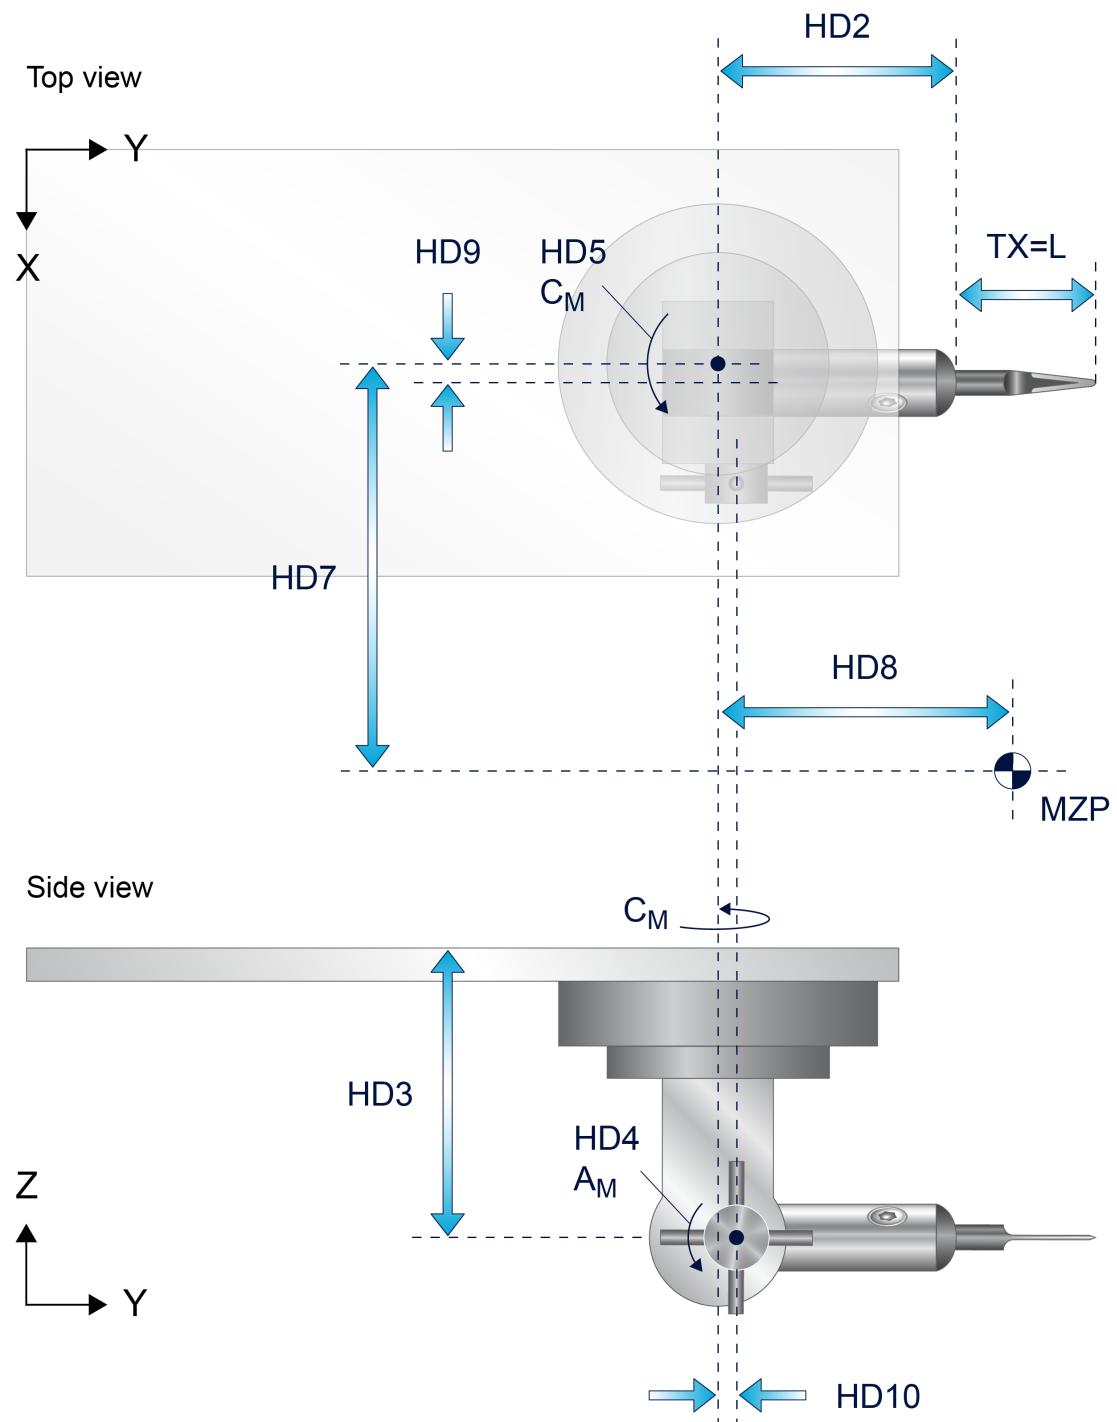


Fig. 111: 5-Axis metal cutting tool with 90 degree angle setting

Additional information to parameter HD11

HD11 specifies the machining depth or the tool thickness used at cutting height Z0. Reference plan for programming the contour is Z0. It is not possible to move deeper than the specified cutting height.

When moving to cutting height Z0, this kinematic executes an inclined plunge or withdrawal of the tool at manually set tool angle A (HD4).

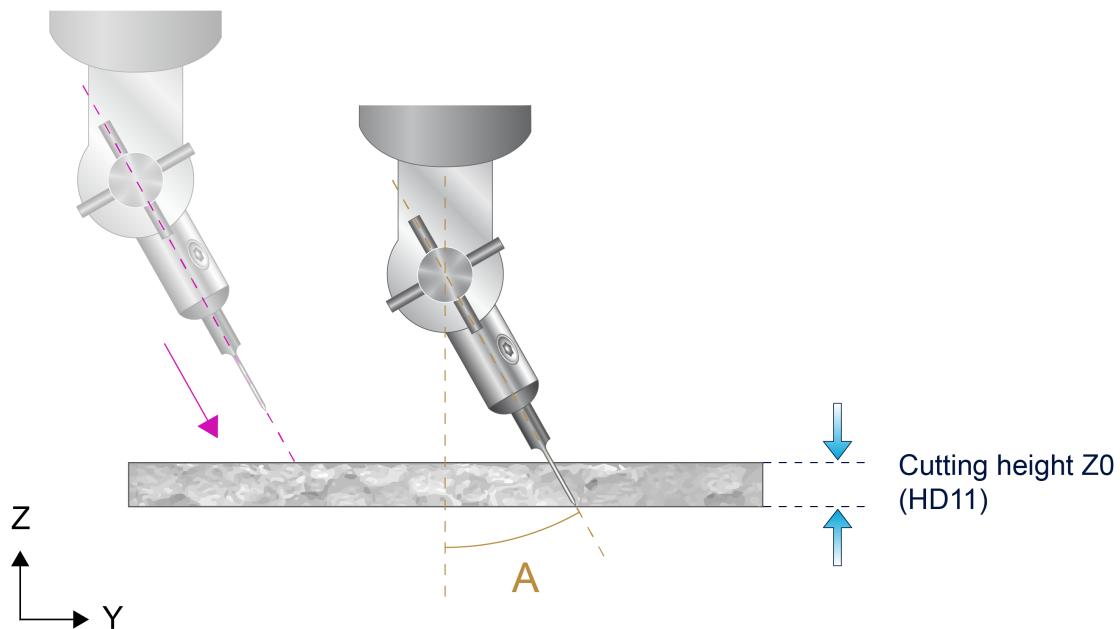


Fig. 112: Cutting height

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD2	1	Y axis offset from tool holding device to rotation point A axis (swivel axis)	10 E-4 mm
HD3	2	Z axis offset from rotation point A axis to tool reference point	10 E-4 mm
HD4	3	Fixed angle setting of rotary A axis (tool angle)	10 E-4°
HD5	4	Rotary angular offset C axis	10 E-4°
HD7	6	Static tool offset in X	10 E-4 mm
HD8	7	Static tool offset in Y	10 E-4 mm
HD9	8	X axis offset rotation point A axis to rotation point C axis	10 E-4 mm
HD10	9	Y axis offset rotation point A axis to rotation point C axis	10 E-4 mm
HD11	10	Define the cutting height Z0	10 E-4 mm

2.40

KIN_TYP_209 - Tripod with rotary/swivel workpiece table

This kinematic is based on the strut kinematic (KIN_TYP_12) and additionally contains a rotary/swivel workpiece table to carry out conventional 5-axis machining.

**Release Note**

This kinematic is available as of CNC Build V3.01.3078.

Axis configuration in NC channel		
Axis identifier	X, Y, Z (Z1, Z2, Z3), A(B), C	
Axis index	0, 1, 2, 3, 4	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z	A(B), C

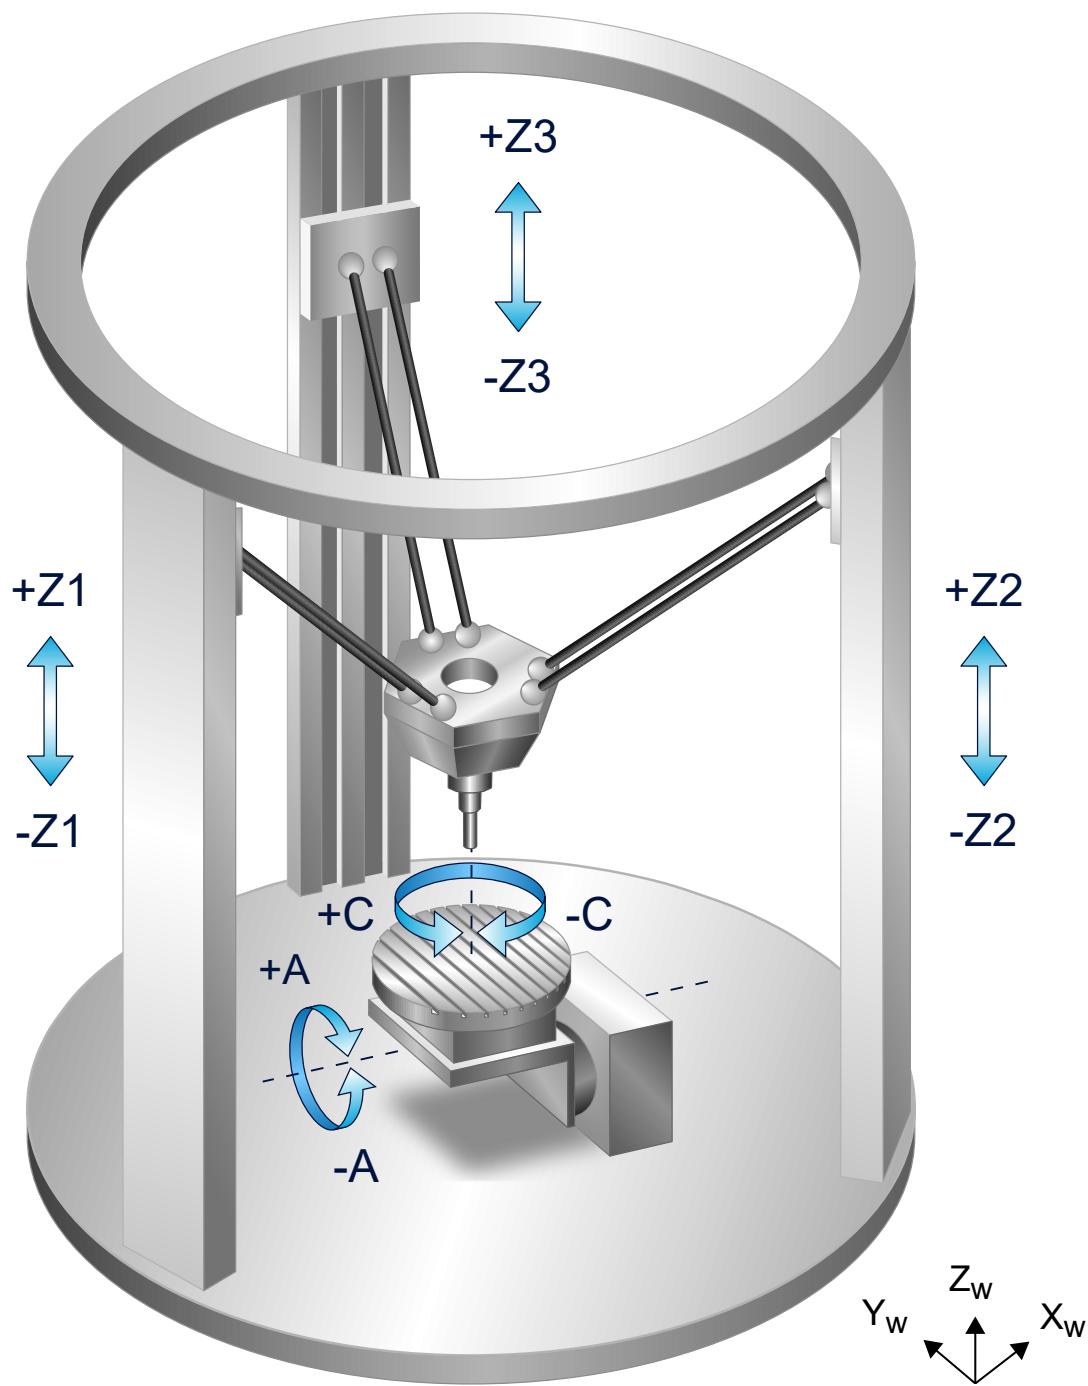


Fig. 113: Trip kinematics with CA rotary/swivel table

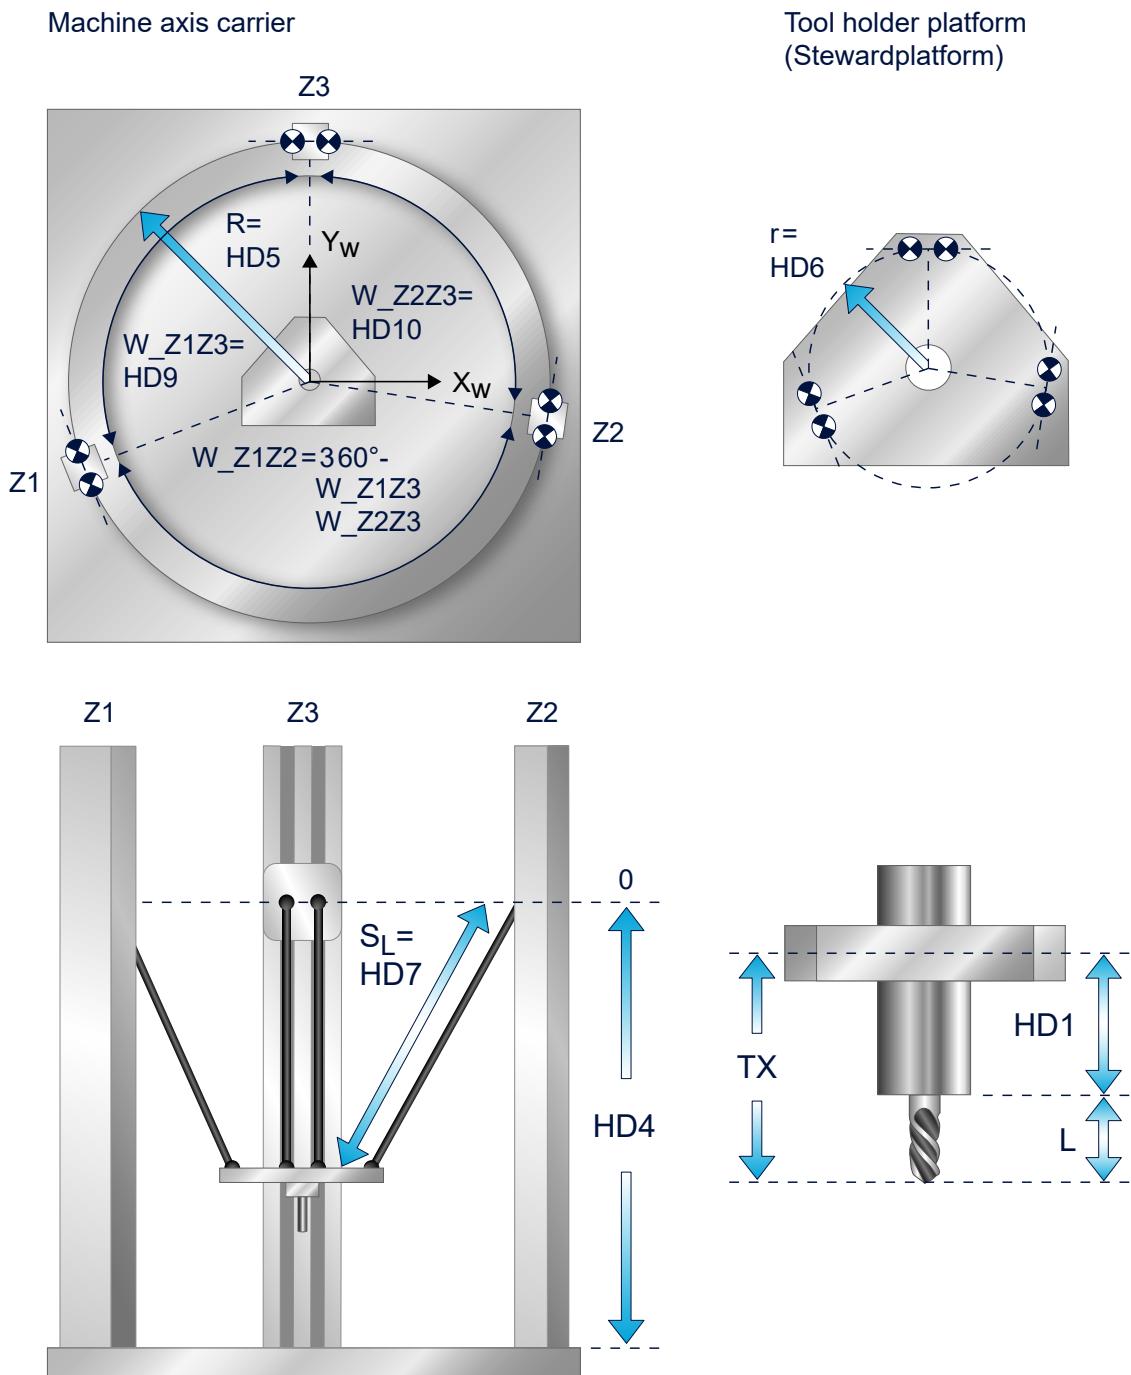


Fig. 114: Offset dimensions of strut kinematics

The parameter HD8 is used to toggle between an ideal (1) and non-ideal (0) tripod. An ideal tripod has an angle of 120° between all columns. A non-ideal tripod must be defined by the angles HD9 and HD10.

The third angle between columns is calculated as follows:

$$W_{Z1Z2} = 360^\circ - HD9 - HD10 = 360^\circ - W_{Z2Z3} - W_{Z1Z3}$$

An angle offset of the rotary/swivel table due to mounting constraints can be compensated by HD30.

Rotary/swivel table – CA variant

HD31 defines the rotary/swivel table variant. By default the parameter is assigned the value 0 defining the CA variant.

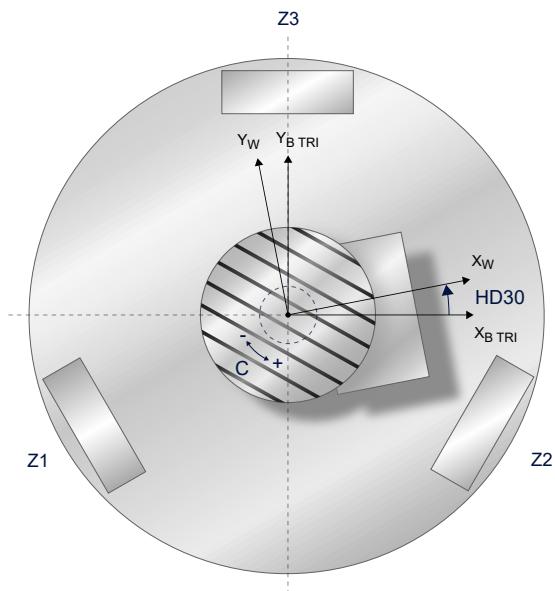


Fig. 115: Angle offset HD30 of the CA rotary/swivel table

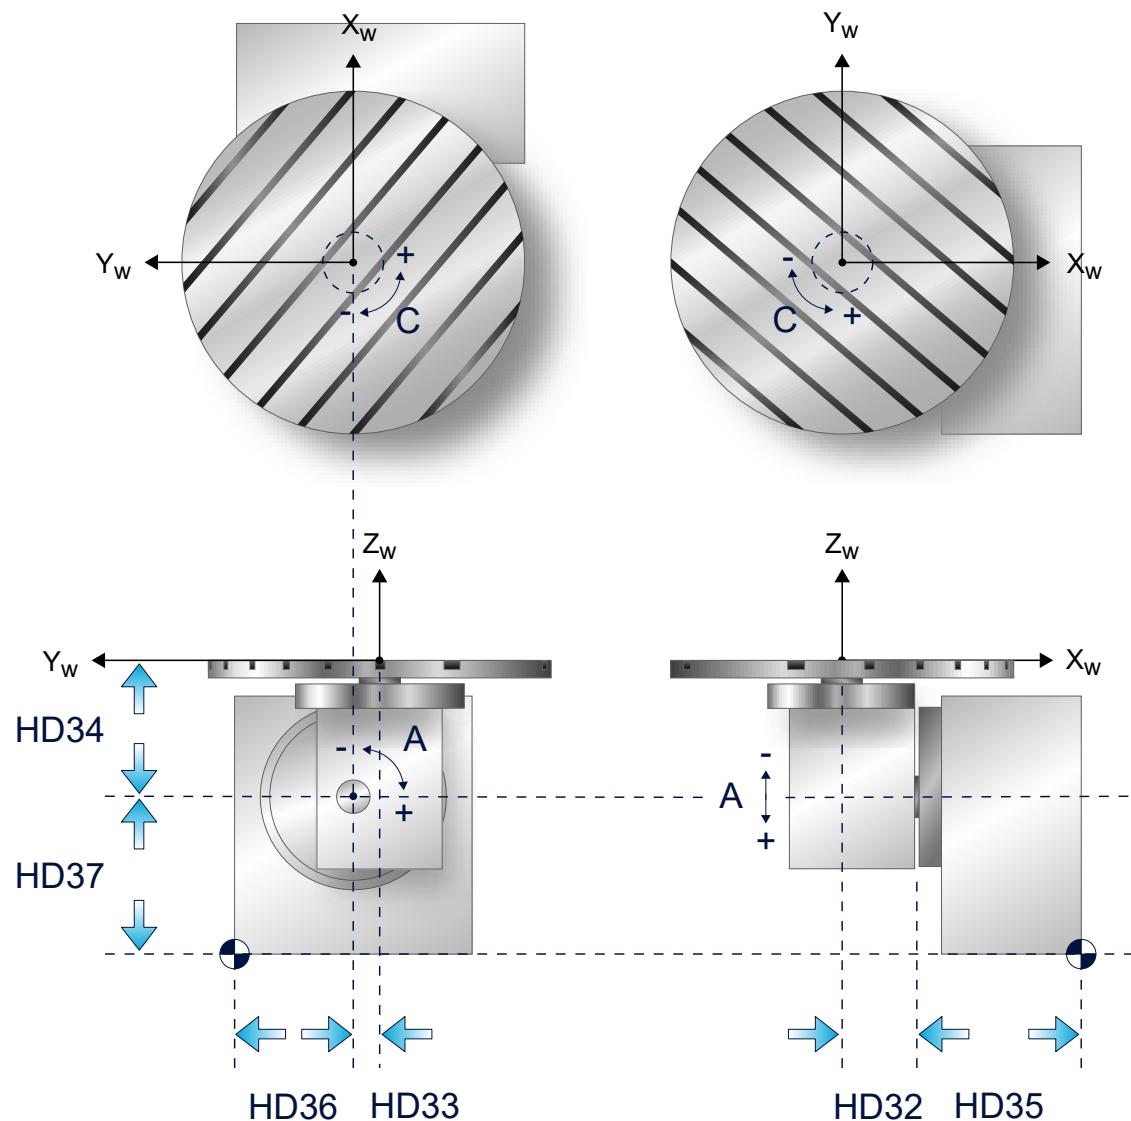
CA rotary/swivel table offsets

Fig. 116: CA rotary/swivel table offsets

Rotary/swivel table – CB variant

If HD31 is assigned the value 1, the CB variant is defined.

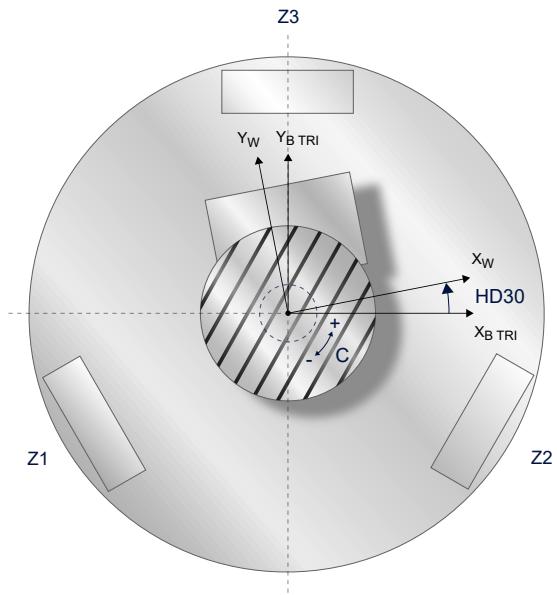


Fig. 117: Angle offset HD30 of the CB rotary/swivel table

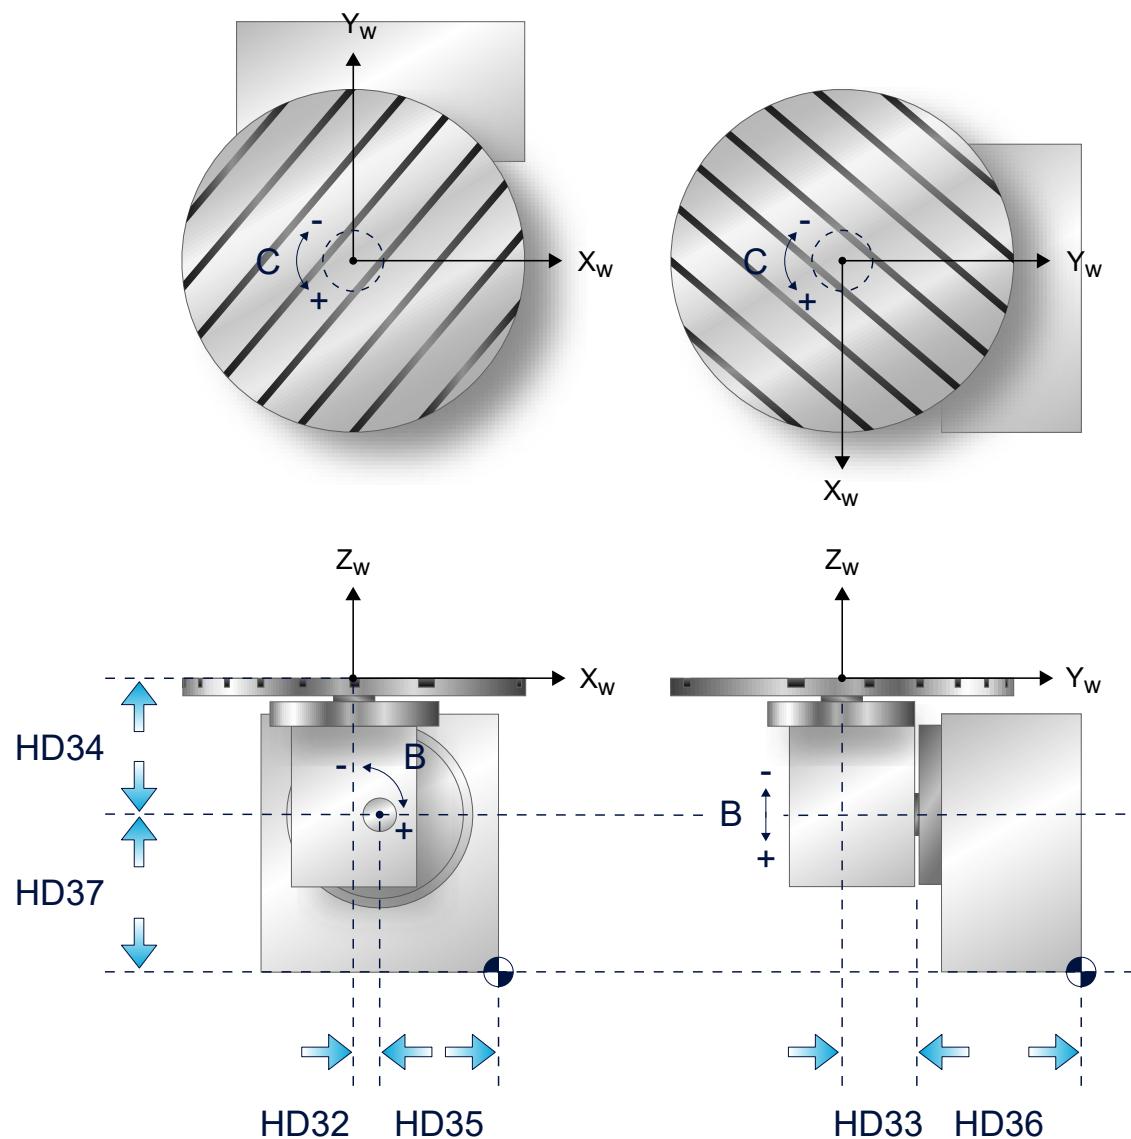
CB rotary/swivel table offsets

Fig. 118: CB rotary/swivel table offsets

Tripod kinematics offset data

HD offset	param[i]	Description	Unit
HD1	0	Tool offset Z	10 E-4 mm
HD2	1	Tool offset Y	10 E-4 mm
HD3	2	Tool offset X	10 E-4 mm
HD4	3	Z axis offset machine origin	10 E-4 mm
HD5	4	Radius to connecting line joint centre points drive columns (large circle)	10 E-4 mm
HD6	5	Radius to connecting line joint centre points Stewart platform joints (small circle)	10 E-4 mm
HD7	6	Strut length to each joint centre point	10 E-4 mm
HD8	7	Switch to switch over to non-ideal tripod 0 : ideal tripod 1 : non-ideal tripod and enable HD9 / HD 10	[-]
HD9	8	Angle column / joint 3 to column / joint 1	10 E-4°
HD10	9	Angle column / joint 3 to column / joint 2	10 E-4°

Offset data of the rotary/swivel table

HD offset	param[i]	Description	Unit
HD30	29	Angle offset about Z of Cartesian basic system to tripod column Z3	10 E-4°
HD31	30	Type of rotary workpiece holder 0: CA, 1:CB Default value = 0	[-]
HD32	31	X axis offset rotary axis A, (B) to rotary axis C, origin WCS	10 E-4 mm
HD33	32	Y axis offset rotary axis A, (B) to rotary axis C, origin WCS	10 E-4 mm
HD34	33	Z axis offset rotary axis A, (B) to rotary axis C, origin WCS	10 E-4 mm
HD35	34	X offset machine origin MNP to rotary axis A, (B)	10 E-4 mm
HD36	35	Y offset from machine origin MNP to rotary axis A, (B)	10 E-4 mm
HD37	36	Z offset machine origin MNP to rotary axis A, (B)	10 E-4 mm
HD38	37	Rotary offset A (B) axis	10 E-4°
HD39	38	Rotary offset C axis	10 E-4°
HD40	39	Rotation direction flag A (B) axis	[-]
HD41	40	Rotation direction flag C axis	[-]

3 Robot kinematics

3.1 KIN_TYP_36 – SCARA kinematics

Kinematic structure

The robot kinematics consist of 3 rotary and 1 translatory NC axes in the tool. Tool length compensation takes place in the Z axis. All rotary axes are C axes.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, C (C1, C2, Z, C3)	
Axis index	0, 1, 2, 3	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, C	-

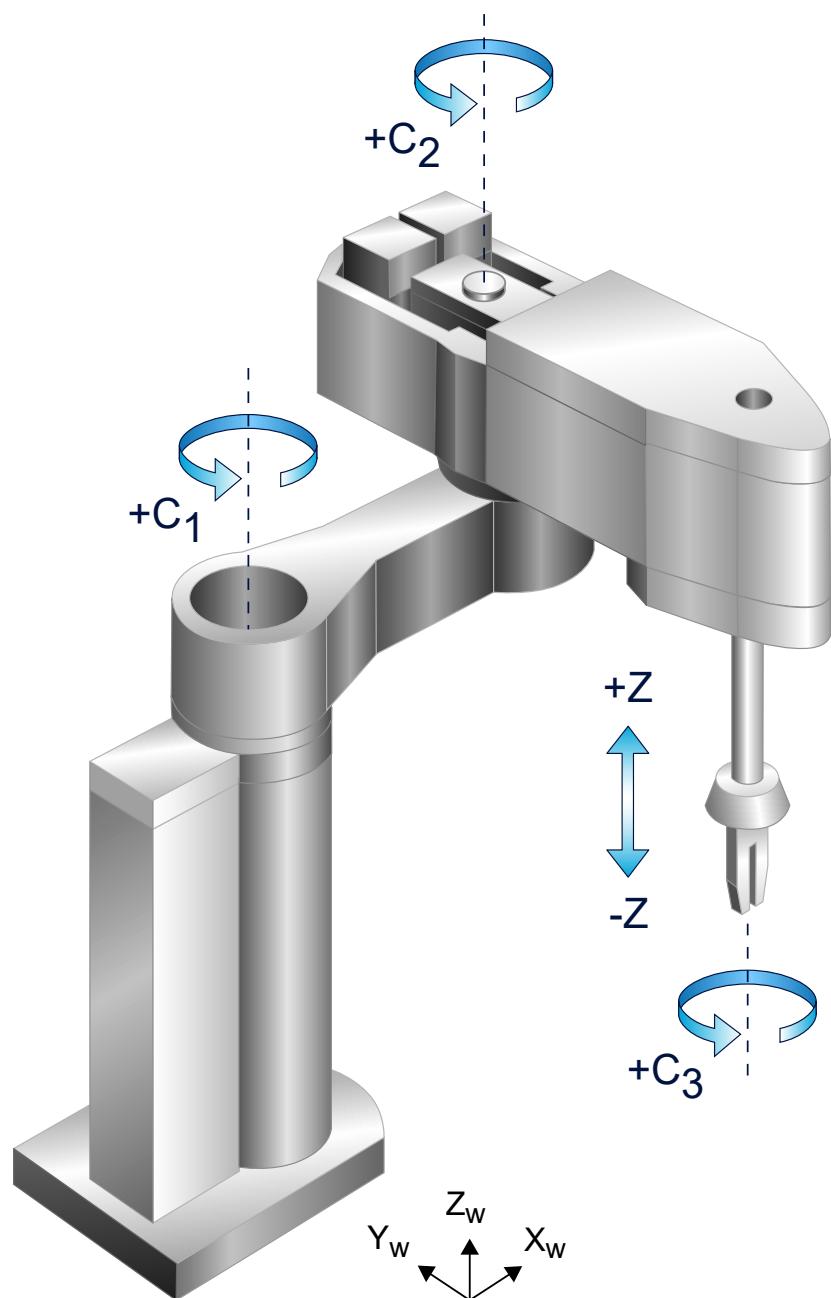


Fig. 119: SCARA kinematics

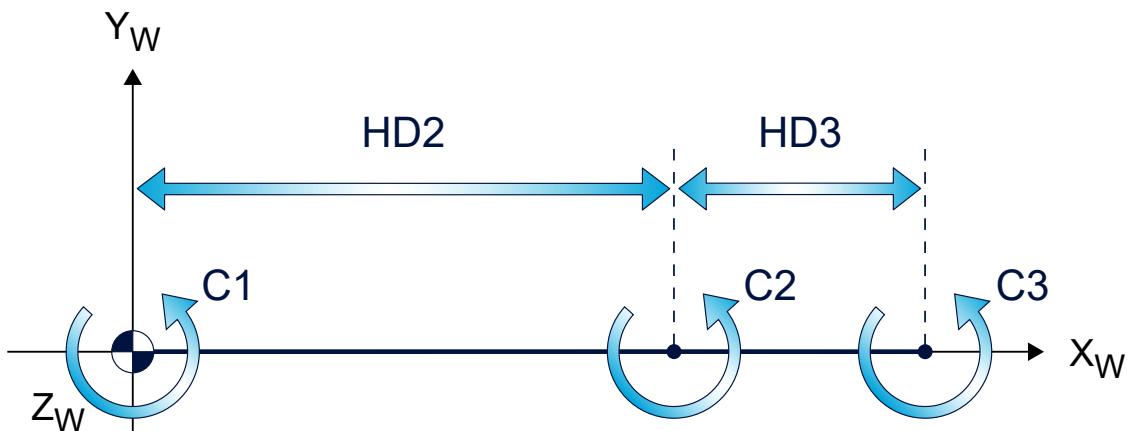






Fig. 120: SCARA kinematics in zero position ($C_1=0$, $C_2=0$, $C_3=0$, $HD_8=0$)

SCARA works as a left-handed or right-handed robot depending on the angular position of robot joint 2 (C_2). The machine axis position before selecting the transformation therefore decides whether SCARA is positioned as a left-handed or right-handed robot. A change can be made from left-handed to right-handed robot when the kinematic transformation is inactive.

HD_7 can be used to define the reference of the robot joint (C_2).

In the default case of $HD_7 = 0$ C_2 refers to the angle between the extension of the first arm and the second arm. In the case of $HD_7 = 1$ C_2 refers to the angle between the X axis and the second arm.

HD_8 is a rotary offset of C_2 . This permits the description of a zero position of the kinematics where the SCARA is not completely stretched out but is angled in the second joint. $HD_8=0$ is the default.

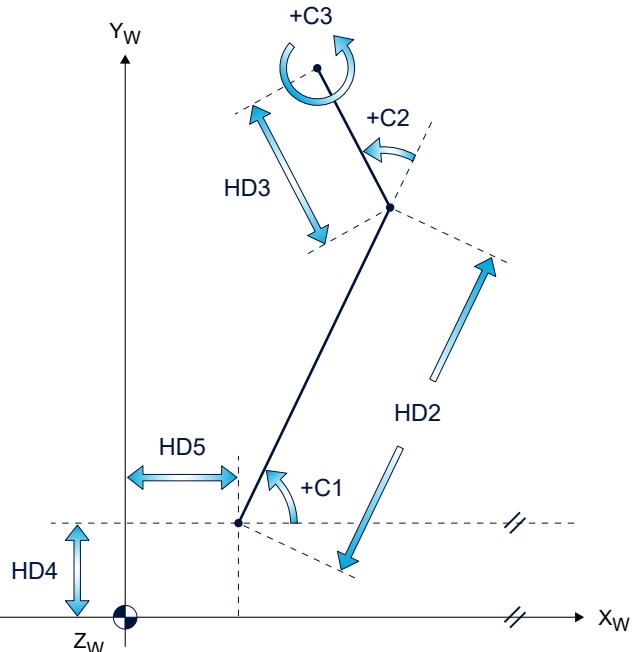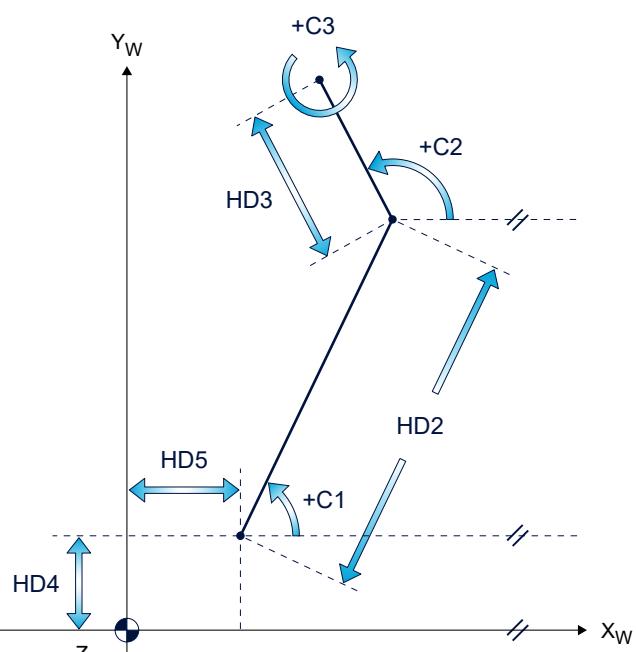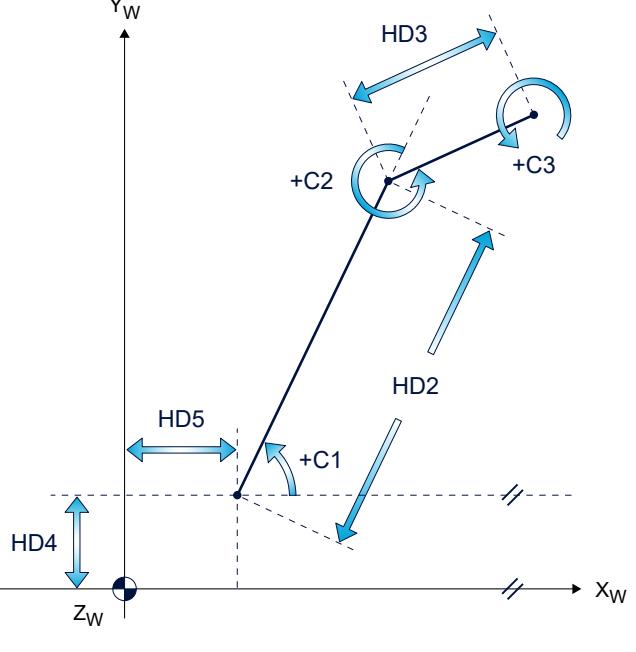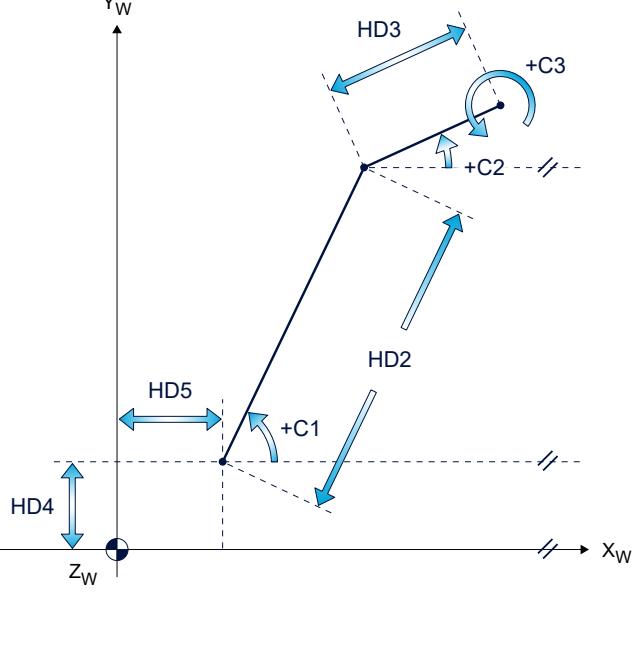HD7 = 0 (default)	HD7 = 1
<p>Right-handed robot</p> 	<p>Right-handed robot</p> 
<p>Left-handed robot</p> 	<p>Left-handed robot</p> 

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Tool length offset in Z direction	10 E-4 mm
HD2	1	Length offset from joint 1 to joint 2	10 E-4 mm
HD3	2	Length offset joint 2 to rotary axis C3	10 E-4 mm
HD4	3	X offset origin C1 axis	10 E-4 mm
HD5	4	Y offset origin C1 axis	10 E-4 mm
HD6	5	Rotary offset C1 axis	10 E-4°
HD7	6	Calculate reference of the robot joint for C2 0 = C2 as an offset of C1 (default) Calculate 1 = C2 as an angle to the X axis	[-]
HD8	7	Rotary offset C2 axis	10 E-4°

3.2

KIN_TYP_45 – 6-axis articulated robot kinematics

Kinematic structure

Articulated robot with 6 machine axes. All articulated axes of the robot except for the manual axes A1 and A2 are linear axes. The axes A1 and A2 are modulo axes with ranges of 0 to 180, 0 to -180 degrees. The joint axis C1 can also be configured as a modulo axis if no trailing cable must be considered.

Axis configuration in the NC channel		
Axis identifier	X, Y, Z, A, B, C (C1, B1, B2, A1, B3, A2)	
Axis index	0, 1, 2, 3, 4, 5	
Kinematic structure		
	Tool axes	Workpiece axes
NC axes	X, Y, Z, A, B, C	-

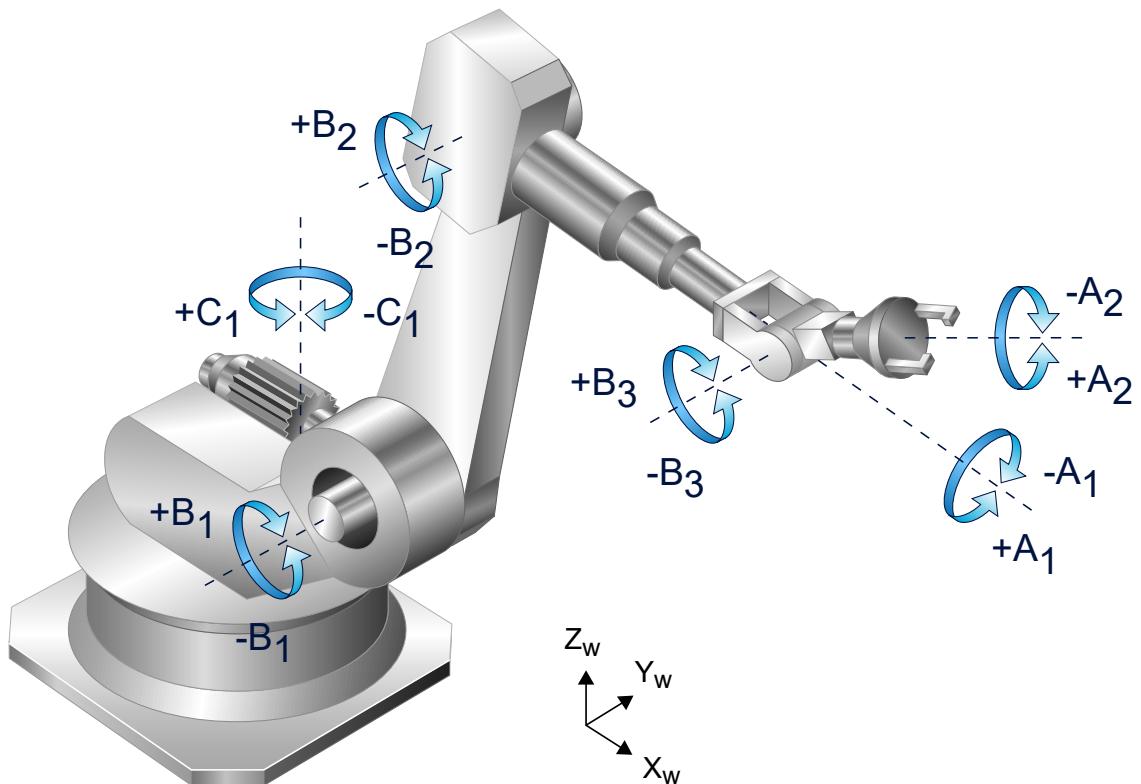


Fig. 121: 6-axis articulated robot

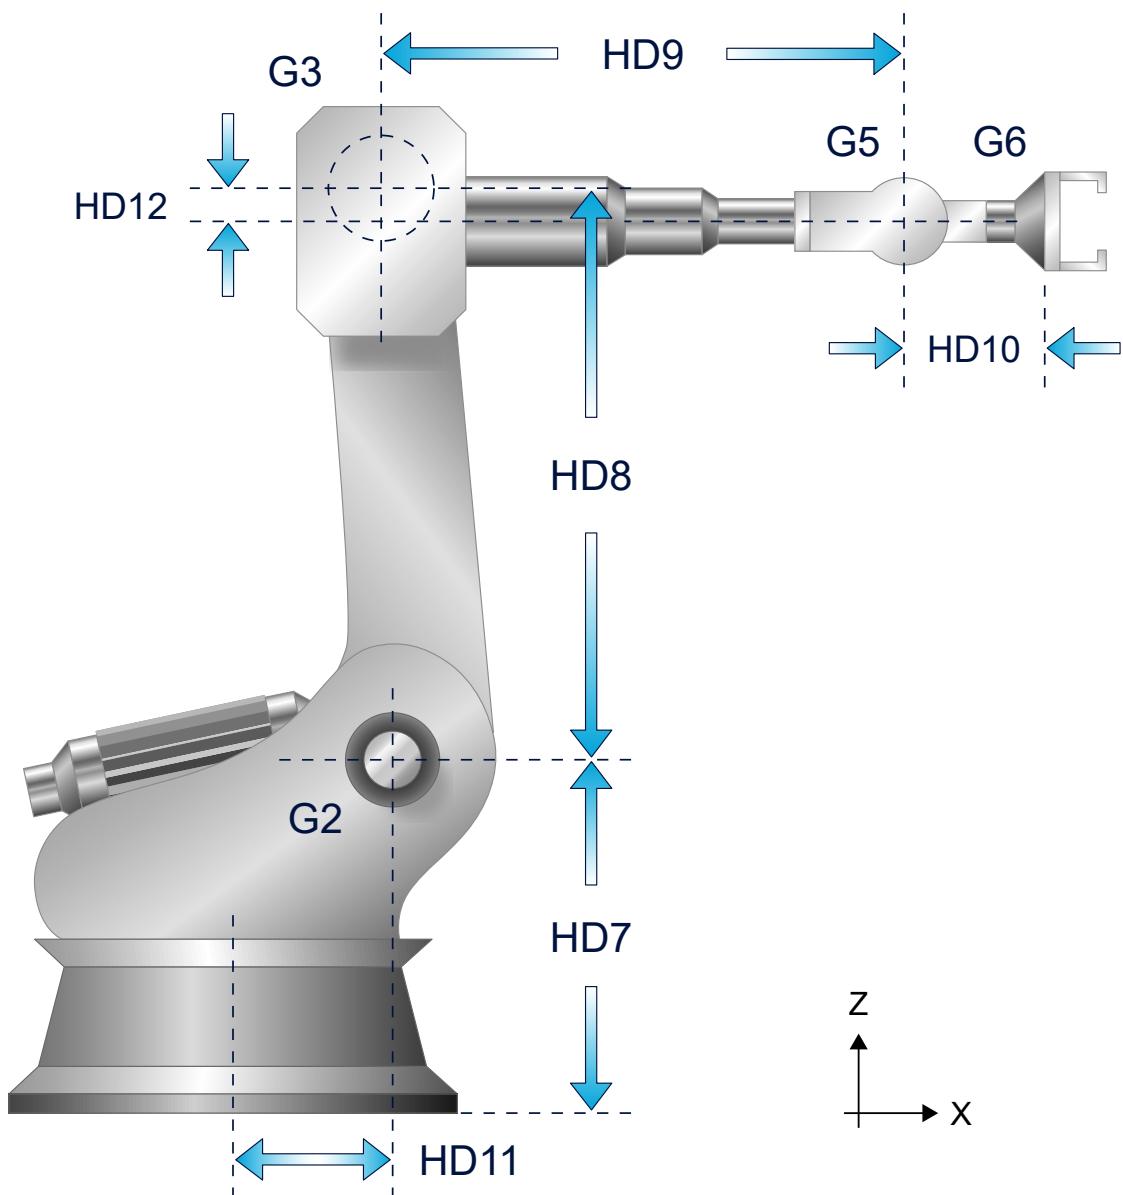


Fig. 122: HD offset data in side view

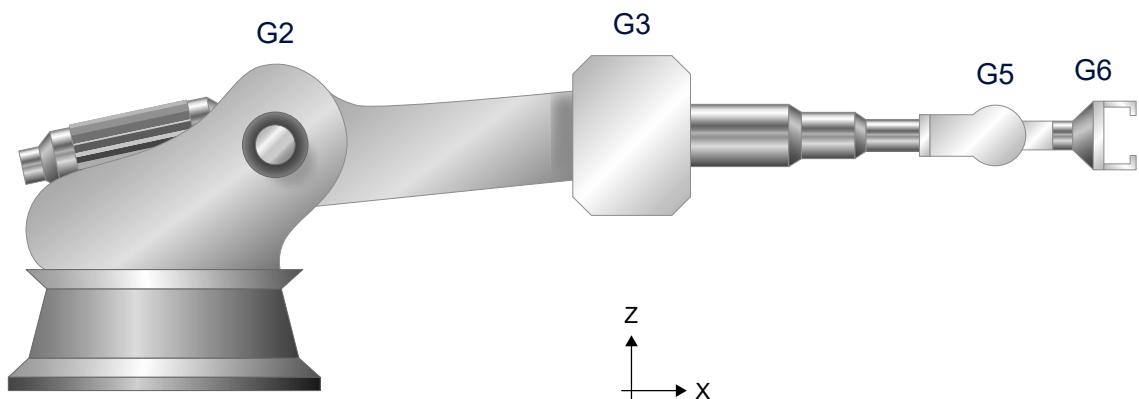


Fig. 123: Zero position for HD145 and HD15

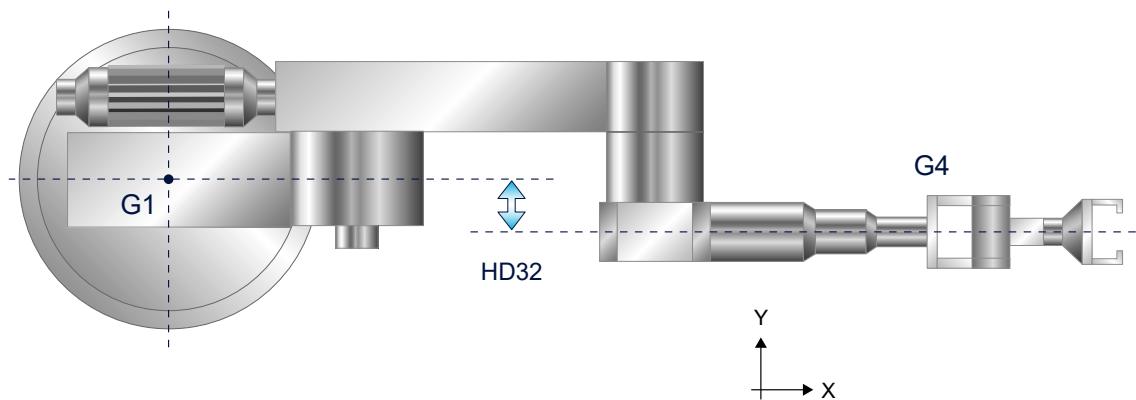


Fig. 124: Articulated robot, top view

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	Tool Z offset in flange coordinate system [▶ 168] (variant 1)	10 E-4 mm
HD2	1	Tool X offset in flange coordinate system [▶ 168] (variant 1)	10 E-4 mm
HD3	2	Tool Y offset in flange coordinate system [▶ 168] (variant 1)	10 E-4 mm
HD4	3	Angle of tool rotation about the X" axis	10 E-4°
HD5	4	Angle of tool rotation about the Y" axis	10 E-4°
HD6	5	Angle of tool rotation about the Z axis	10 E-4°
HD7	6	Z offset from origin of Cartesian spatial coordinate system to rotation point of joint axis 2	10 E-4 mm
HD8	7	Z offset from rotary axis joint 2 to rotary axis joint 3	10 E-4 mm
HD9	8	X offset from rotary axis joint 3 to rotary axis joint 5	10 E-4 mm
HD10	9	X offset from manual axis joint 5 to flange surface on joint 6	10 E-4 mm
HD11	10	X offset from origin of Cartesian spatial coordinate system to rotation point of joint axis 2	10 E-4 mm
HD12	11	Z offset from rotary axis joint 5 to rotary axis joint 3. Please refer to note under the table.	10 E-4 mm
HD14	13	Rotary offset for zero position of robot joint axis 2	10 E-4°
HD15	14	Rotary offset for zero position of robot joint axis 3	10 E-4°
HD21	20	Rotation direction of joint axis 1: 0 (positive), 1 (negative)	[-]
HD22	21	Rotation direction of joint axis 2: 0 (positive), 1 (negative)	[-]
HD23	22	Rotation direction of joint axis 3: 0 (positive), 1 (negative)	[-]
HD24	23	Rotation direction of joint axis 4: 0 (positive), 1 (negative)	[-]
HD25	24	Rotation direction of joint axis 5: 0 (positive), 1 (negative)	[-]
HD26	25	Rotation direction of joint axis 6: 0 (positive), 1 (negative)	[-]
HD31	30	Flange coordinate system [▶ 168]: 0 (variant 1) 1 (variant 2)	[-]
HD32	31	Y offset from rotary axis joint 4 to rotary axis joint 1. Please refer to note under the table.	10 E-4 mm

HD33	32	Control flag for machining type 0: Default 1: Moved workpiece Once you set the parameter HD33, the machining mode switches to the mode of the moved workpiece. We therefore advise you to set this parameter first by selecting the fixed tool and positioning the robot in readiness or to set this parameter in the tool management system.	[-]
HD34	33	Tool length compensation direction 0: none (default) 1: -Z 2: -X 3: -Y 4: Z 5: X 6: Y By default, the entered tool length is not included when you select a tool with Kinematic 45 enabled. If this parameter is unequal to 0, the tool length is included in the set direction.	[-]
HD35	34	Rotation sequence of tool orientation HD4-6 0: Z Y' X'' (default) 1: X Y' Z''	[-]

Notice

Set the correct sign for parameters HD12 and HD32.

HD12: Positive sign; the rotary axis of joint 3 is located in the positive Z direction **above** the rotary axis of joint 5

HD32: Positive sign; the rotary axis of joint 1 is located in the positive Y direction **above** the rotary axis of joint 4

Robot poses can be specified as an alternative to axis-specific positioning, see [PROG// Status & Turn (IS, IT)].

For more information on kinematic offset data, see [CMS-A2].

3.2.1


Moved workpiece

The moved workpiece is a subfunction of kinematic 45. It allows the control of an industrial robot where the workpiece is attached to the flange by a standard processing program, whereas the (milling) tool has a fixed position in space.



Notice

The further the robot is away from the fixed tool, the greater the movement of the robot when changing the orientation ABC.


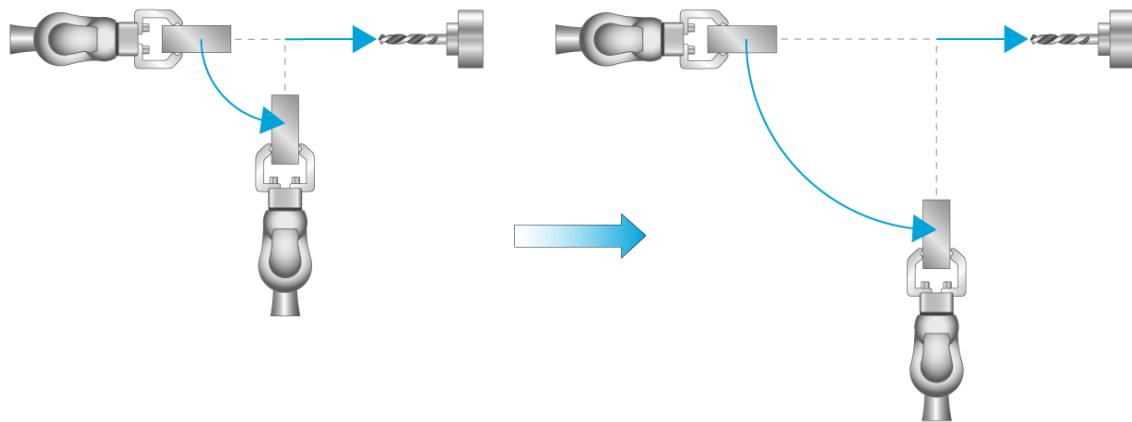


This function is activated by the kinematic parameter HD33 of kinematic 45.

Tool set-up

The tool parameters for kinematic 45 can be directly entered in the parameters HD1-6 or they can be activated by a suitable tool by means of tool-head offsets when the tool is selected.

Tool-head offsets are added to the kinematic parameters (no concatenation takes place). If this function is used, it is recommended to set the parameters HD1-6 in the channel parameter list to "0".

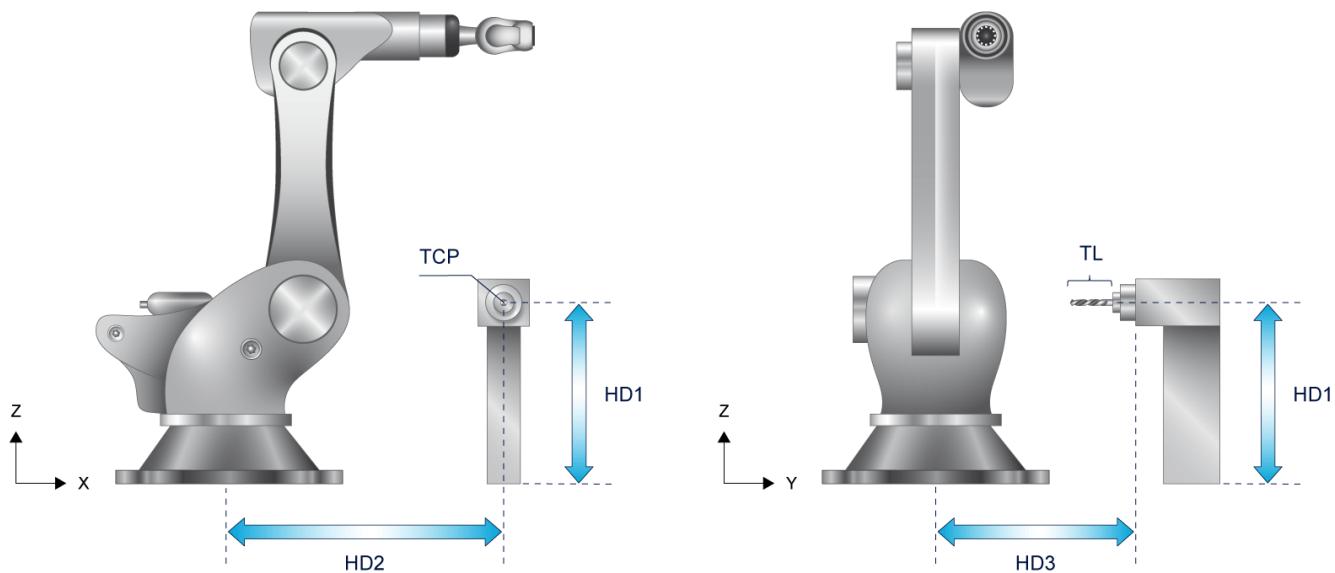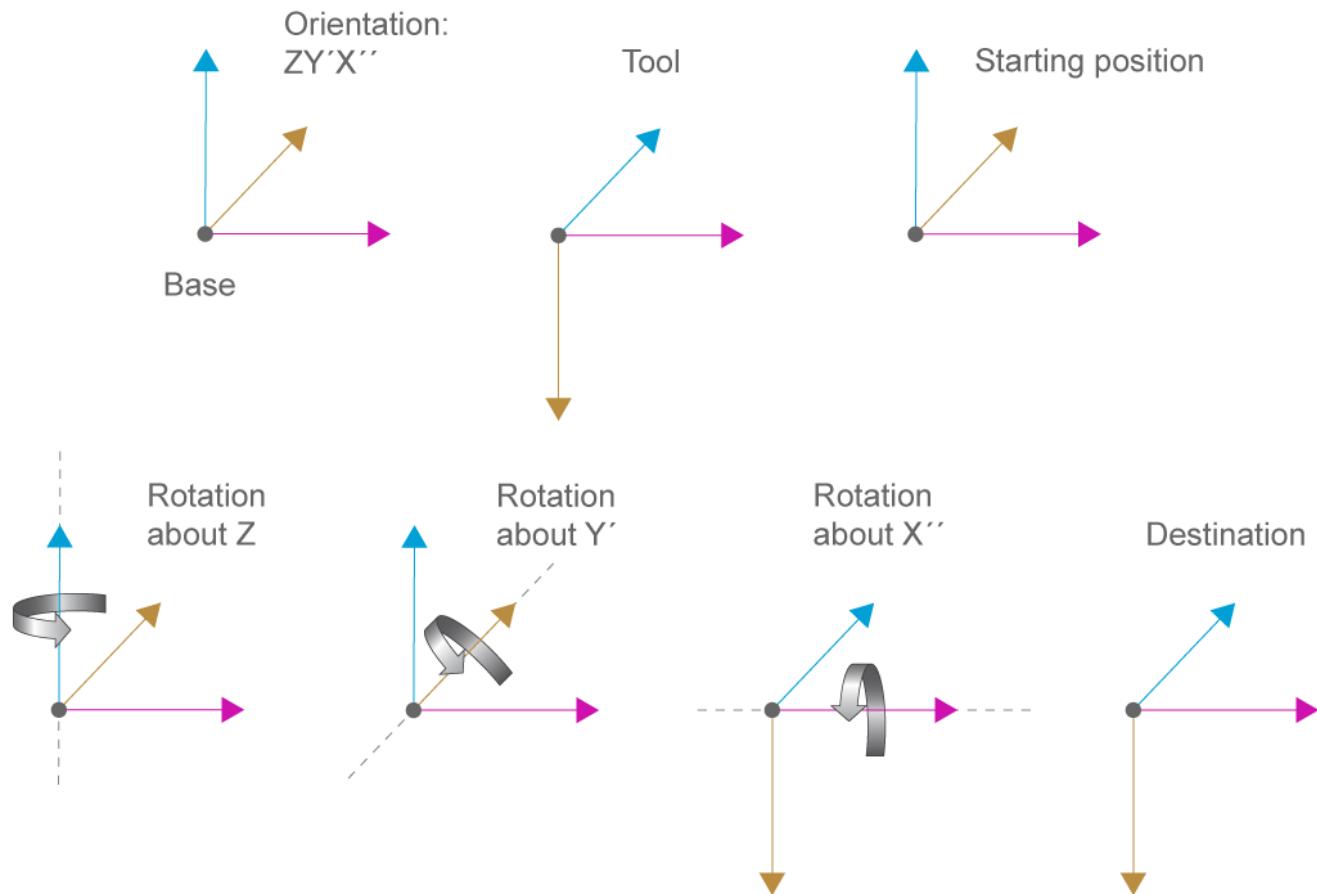Parameterisation example of HD1-3 for a fixed tool:**Fig. 125: Tool offsets of the fixed position tool.****Example: Parameterisation of HD4-6 for a fixed tool:****Fig. 126: Procedure for defining the orientation with rotation sequence $Z Y' X''$**

Tool set-up

Offsets of the coordinate system into the workpiece now have the robot flange system as the lowest reference point for the moved workpiece.

Every further offset/rotation happens as usual.

Only one tool can be active at any one time. This is the machining tool of the moved workpiece. A gripper on the flange can be defined by an offset (e.g. #CS).

The parameterisation example below refers to the standard flange orientation (HD 31 = 0).

Flange system

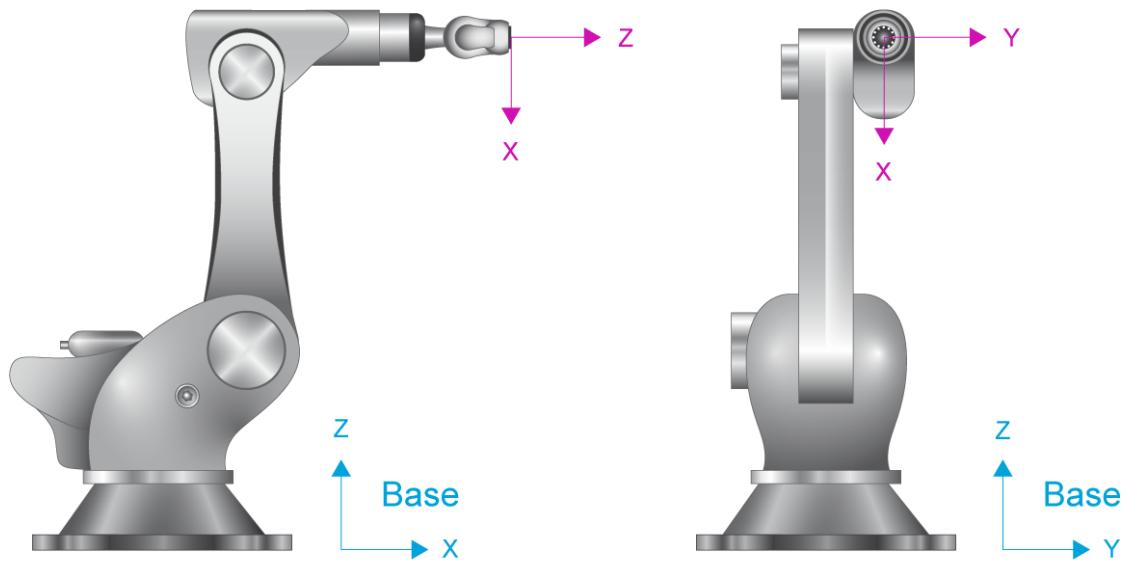


Fig. 127: The orientation of the robot flange and the world

Flange system offset


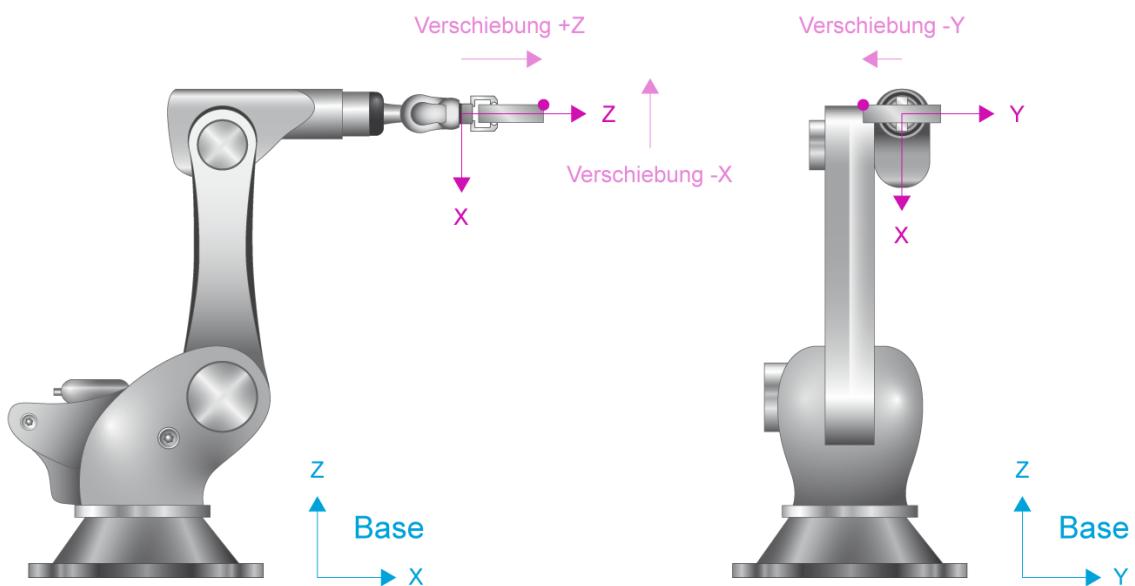


Fig. 128: Offset from the flange to the black dot in the workpiece.

3.2.2 Flange coordinate system

For compatibility reasons, the orientation of the flange coordinate system can be changed back from variant 1 (standard) to variant 2.

List parameters	Meaning
kinematik[45].param[30]	0: Variant 1, default (KUKA, Stäubli) 1: Variant 2

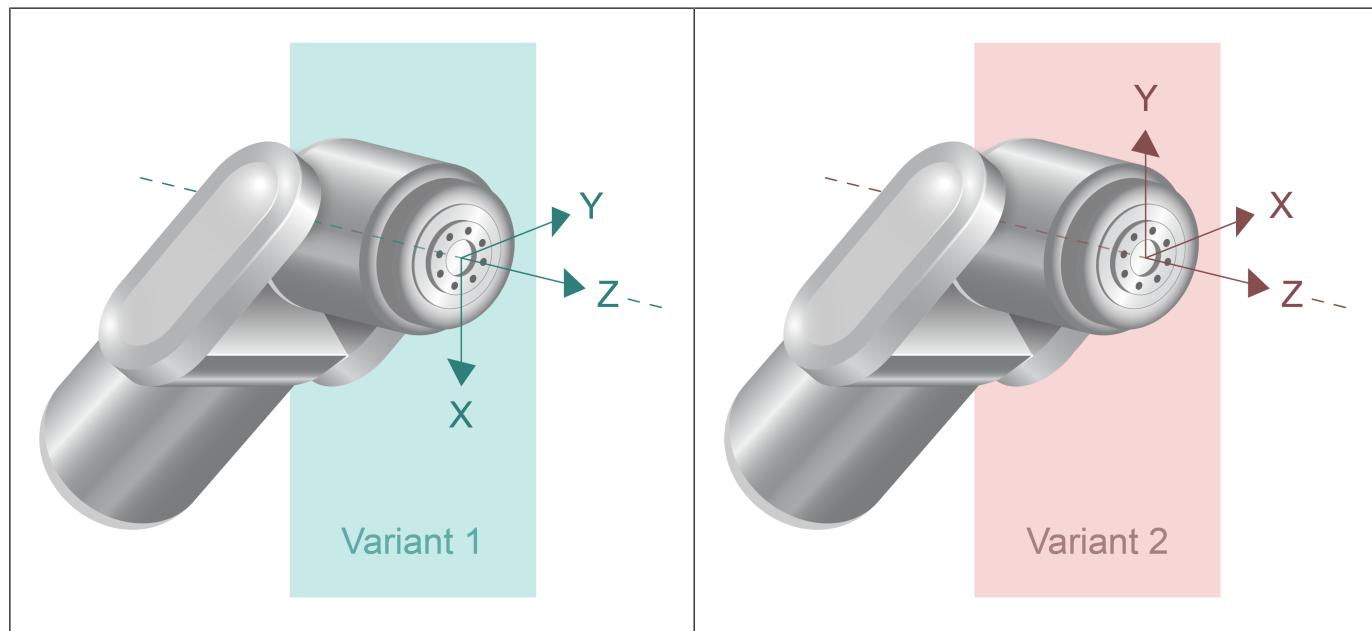

KIN_TYP_96 - Palletising kinematic


Kinematic structure

The articulated axes are numbered from 1 to 4. Axis 1 rotates about the z axis of the Cartesian coordinate system. The robot is represented with all articulated axes in zero position.

Rotation in positive direction corresponds to the mathematically positive direction of rotation in the Cartesian coordinate system. Articulated axes G1, G2, G3 must be configured as linear axes (with limited motion range). Articulated axis G4 must be configured as a modulo axis with a range of -180° to $+180^\circ$.


The transformation may only be used when software limit switches are correctly set. In particular, the movements of axis 2 are dependent on the limit switch of axis 3. NB: Without limit switches, this transformation can damage the robot.


Axis configuration in the NC channel		
Axis identifier	X, Y, Z, C (G1, G2, G3, G4)	
Axis index	0, 1, 2, 3	
Kinematic structure		
NC axes	Tool axes	Workpiece axes
	X, Y, Z, C	-

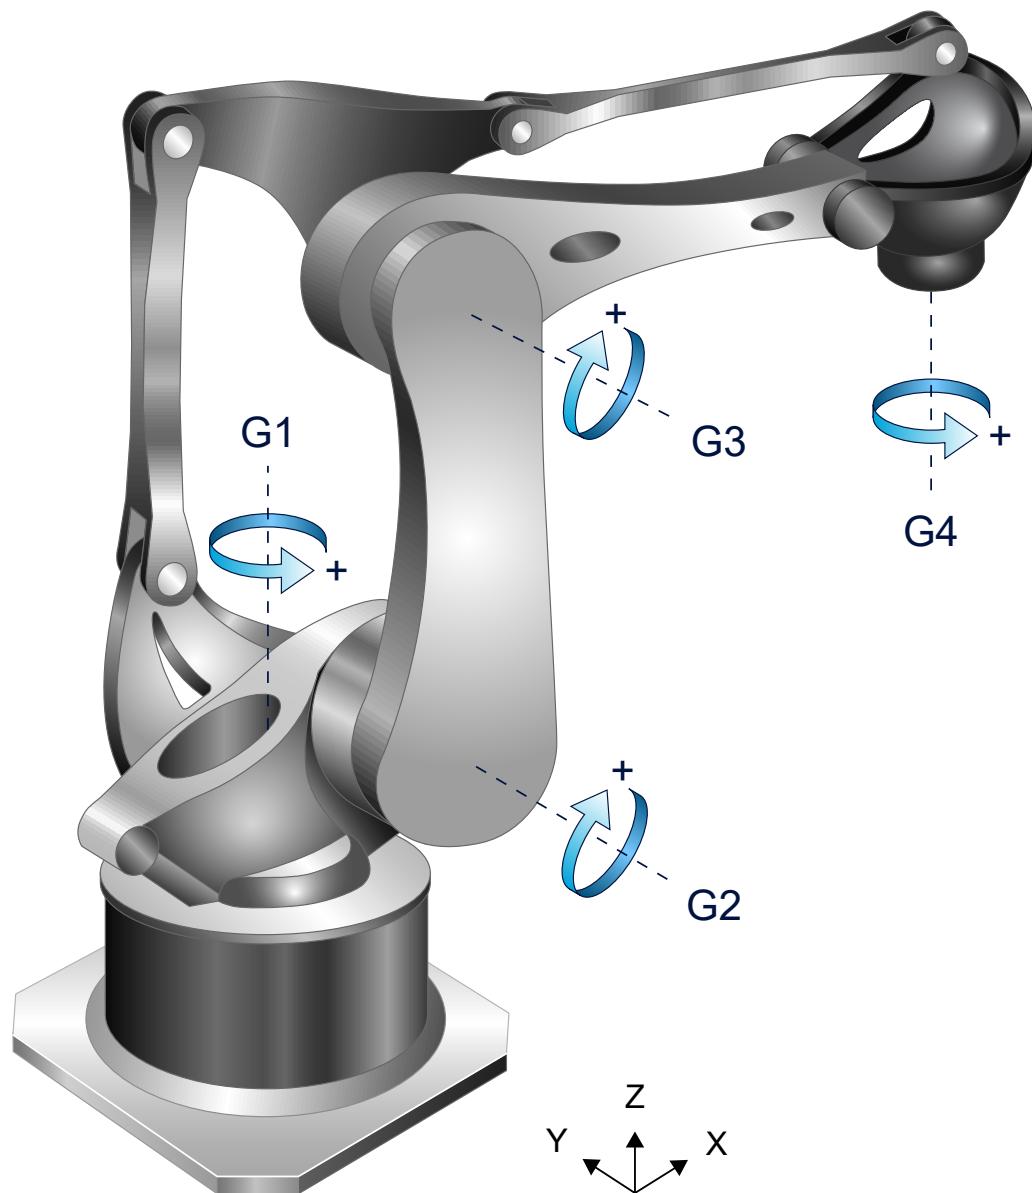

Offset data of kinematics

HD offset	param[i]	Description	Unit
HD1	0	X offset articulated axis G2	10 E-4 mm
HD2	1	Z offset articulated axis G2	10 E-4 mm
HD3	2	Length of the first arm (distance between G3 and G2)	10 E-4 mm
HD4	3	Y offset between G2 and G1.	10 E-4 mm
HD5	4	Length of second arm (distance between the right-hand joint of the second arm and G3)	10 E-4 mm
HD6	5	Length of head (distance between G4 and the right-hand joint of the second arm)	10 E-4 mm
HD7	6	Y offset of tool to G4	10 E-4 mm
HD8	7	X offset of tool to G4	10 E-4 mm
HD9	8	Z offset of tool to G4	10 E-4 mm
HD10	9	Z offset between G4 and G3	10 E-4 mm

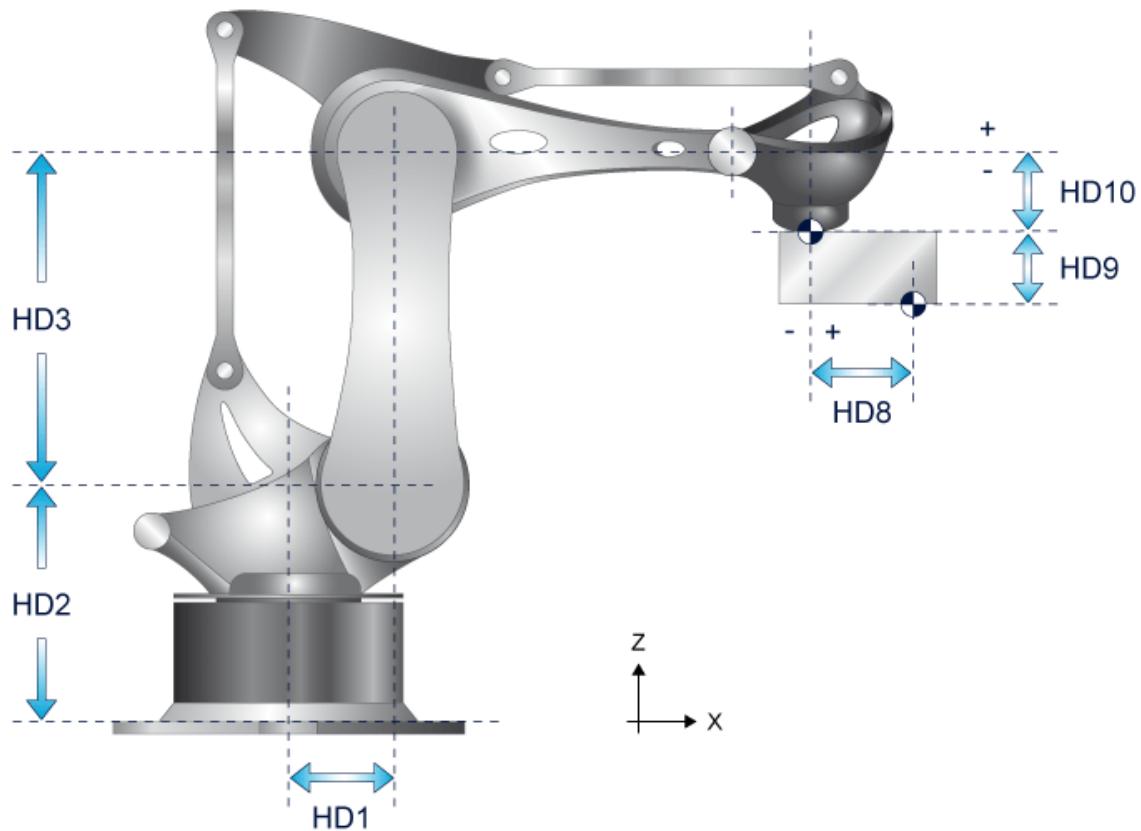

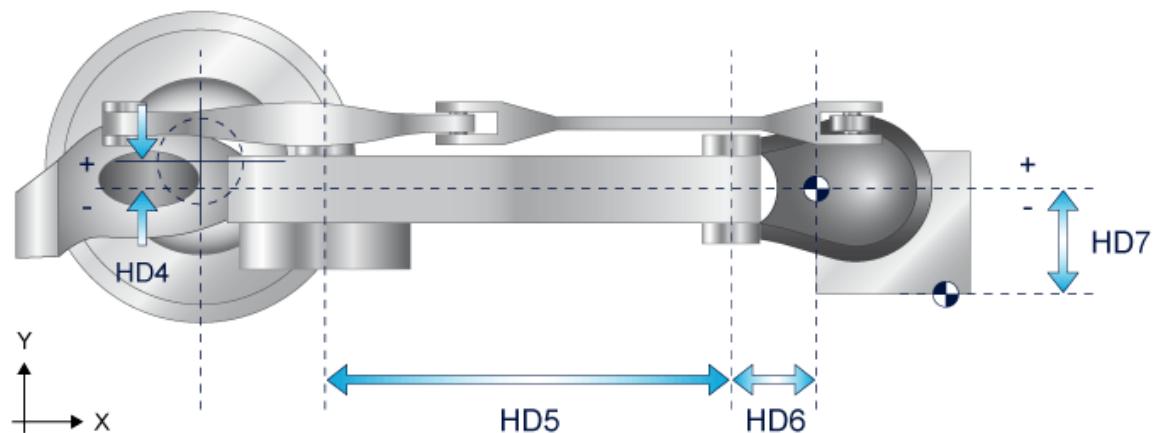

4

Classification of transformations

Depending on their characteristics the transformations in the first two chapters can be classified in the following way:

4.1

Transformation type

Transformation ID	Type	Number of axes	Number of workpiece axes	Peculiarities
1 [▶ 14]	RTCP	5		
2 [▶ 17]	RTCP	5		
3 [▶ 19]	RTCP	4		
4 [▶ 21]	RTCP	4		
5 [▶ 23]	RTCP	4		
6 [▶ 27]	RTCP	4		
7 [▶ 29]	RTCP	5		
8 [▶ 32]	RTCP	5		
9 [▶ 35]	RTCP	5		
10 [▶ 38]	RTCP	5		
11 [▶ 41]	RTCP	5		
12 [▶ 44]	Complete	3		3-axis parallel kinematics with constant orientation
16 [▶ 49]	RTCP	5		
17 [▶ 52]	RTCP	5		3 machine axes, 2 auxiliary axes
18 [▶ 55]	RTCP	5		3 machine axes, 2 auxiliary axes
19 [▶ 58]	Complete	5		3-column parallel kinematics, 5 machine axes
21 [▶ 61]	Complete	4		LAMBDA shear kinematics with compensation of rot. C axis, constant orientation, 4 machine axes
22 [▶ 64]	RTCP	5	2	2 axes in workpiece, 3 machine axes
23 [▶ 66]	RTCP	5		
25 [▶ 69]	RTCP	5		
28 [▶ 73]	RTCP	5		
30 [▶ 76]	RTCP	4		
33 [▶ 78]	RTCP	5		
34 [▶ 81]	RTCP	4		
36 [▶ 155]	RTCP	4		SCARA
Transformation ID	Type	Number of axes	Number of workpiece axes	Peculiarities
37 [▶ 83]	Complete	3		Flexpicker
45 [▶ 160]	Complete	6		6-axis articulated robot
52 [▶ 86]	RTCP	5		
57 [▶ 88]	RTCP	5		Rotary/swivel table

Transformation ID	Type	Number of axes	Number of workpiece axes	Peculiarities
58 [▶ 92]	RTCP	5		Rotary/swivel table
59 [▶ 96]	RTCP	5		Cardanic head
60 [▶ 106]	RTCP	5		Cardanic head
61 [▶ 111]	RTCP	5		
63 [▶ 115]	RTCP	5		
64 [▶ 119]	RTCP	6		
70 [▶ 123]	RTCP	5		
76 [▶ 127]	Complete	5		Mechanical TCP
80 [▶ 130]	RTCP	5		
81 [▶ 134]	RTCP	5		
82 [▶ 139]	RTCP	6		
85 [▶ 142]	RTCP	2		
96 [▶ 168]	Complete	4		4-axis palletising robot
207 [▶ 144]	RTCP	5		
209 [▶ 146]	RTCP	5		Tripod with rotary/swivel table

4.2

Kinematic type

Transformation ID	With rotary table	Robot kinematics	Parallelkinematics	Shearkinematics	With manual axis
1 [▶ 14]	1				
2 [▶ 17]					
3 [▶ 19]					
4 [▶ 21]					
5 [▶ 23]					
6 [▶ 27]					
7 [▶ 29]					1
8 [▶ 32]					1
9 [▶ 35]					
10 [▶ 38]					
11 [▶ 41]	1				
12 [▶ 44]			1		
16 [▶ 49]					
17 [▶ 52]					1
18 [▶ 55]					1
19 [▶ 58]			1		
21 [▶ 61]				1	
22 [▶ 64]					
23 [▶ 66]	1				
25 [▶ 69]					
28 [▶ 73]					
30 [▶ 76]					
33 [▶ 78]					
34 [▶ 81]	1				
36 [▶ 155]		1			
37 [▶ 83]			1		
45 [▶ 160]		1			
52 [▶ 86]	1				
57 [▶ 88]	1				
58 [▶ 92]	1				
59 [▶ 96]					
Transformation ID	With rotary table	Robot kinematics	Parallelkinematics	Shearkinematics	With manual axis

Transformation ID	With rotary table	Robot kinematics	Parallelkinematics	Shearkinematics	With manual axis
60 [▶ 106]					
61 [▶ 111]	1				
63 [▶ 115]	1				
64 [▶ 119]	1				
70 [▶ 123]					
76 [▶ 127]					
80 [▶ 130]	1				
81 [▶ 134]	1				
82 [▶ 139]	1				
85 [▶ 142]		1			
96 [▶ 168]		1			
207 [▶ 144]					1
209 [▶ 146]	1				

4.3

Application

Transformation ID	5-axismachining	Milling	Drilling	Sawing	Plasma cutting	Lasercutting
1 [▶ 14]	1	1	1			
2 [▶ 17]	1	1	1			
3 [▶ 19]		1	1			
4 [▶ 21]		1	1			
5 [▶ 23]		1	1			
6 [▶ 27]		1	1			
7 [▶ 29]		1	1			
8 [▶ 32]				1		
9 [▶ 35]	1	1	1			
10 [▶ 38]				1		
11 [▶ 41]	1	1				
12 [▶ 44]		1	1			
16 [▶ 49]	1	1	1			
17 [▶ 52]		1	1			
18 [▶ 55]				1		
19 [▶ 58]		1	1			
21 [▶ 61]		1				
22 [▶ 64]	1	1	1			1
23 [▶ 66]	1	1	1			
25 [▶ 69]	1	1	1		1	1
28 [▶ 73]	1	1	1			
30 [▶ 76]		1	1			
33 [▶ 78]	1	1				
34 [▶ 81]		1	1			
36 [▶ 155]		1	1			
37 [▶ 83]		1	1			
45 [▶ 160]	1	1	1			
52 [▶ 86]	1	1	1			
57 [▶ 88]	1	1	1			
58 [▶ 92]	1	1	1			
59 [▶ 96]	1	1	1			
Transformation ID	5-axismachining	Milling	Drilling	Sawing	Plasma cutting	Lasercutting

Transformation ID	5-axismachining	Milling	Drilling	Sawing	Plasma cutting	Lasercutting
60 [▶ 106]	1	1	1			
61 [▶ 111]	1	1	1			
63 [▶ 115]	1	1	1			
64 [▶ 119]	1	1	1			
70 [▶ 123]	1	1	1			
76 [▶ 127]	1					
80 [▶ 130]	1	1	1			
81 [▶ 134]	1	1	1			
82 [▶ 139]	1	1	1			
85 [▶ 142]						
96 [▶ 168]						
207 [▶ 144]	1	1	1			
209 [▶ 146]	1	1	1			

4.4

Tube machining transformations

Transformation ID	Description
15	Round tube, lateral surface (3/4-axis)
78	Round tube, projection (3/4-axis)
79	Polygonal tube, profiled tube (3/4-axis)
90	Round tube, lateral surface (5/6-axis)
93	Polygonal tube, profiled tube (5/6-axis)

For more information on tube machining, go to the section
TF5290 | TC3 CNC Cutting Plus on our product page <https://www.beckhoff.de/tf5290>

You will find function descriptions on these transformations in the Beckhoff Information System
TwinCAT 3 > TFxxxxx | TC3 Functions > TF5xxx - Motion > TF52xx - TC3 CNC > **Tube machining**

https://infosys.beckhoff.de/content/1031/tf5290_tube_processing/index.html

5**Definition of terms****General:**

ID	Identifier; gen. identifier
RT	Backward transformation
TCP	Tool centre point; centre point of milling cutter
VT	Forward transformation
MCS	Machine coordinate system
TCS	workpiece coordinate system

Other abbreviations:

HD	Head distance
----	---------------

6 Appendix

6.1 Suggestions, corrections and the latest documentation

Did you find any errors? Do you have any suggestions or constructive criticism? Then please contact us at documentation@isg-stuttgart.de. The latest documentation is posted in our Online Help (DE/EN):



QR code link: <https://www.isg-stuttgart.de/documentation-kernel/>

The link above forwards you to:

<https://www.isg-stuttgart.de/fileadmin/kernel/kernel-html/index.html>



Notice

Change options for favourite links in your browser;

Technical changes to the website layout concerning folder paths or a change in the HTML framework and therefore the link structure cannot be excluded.

We recommend you to save the above "QR code link" as your primary favourite link.

PDFs for download:

PDFs DE:

<https://www.isg-stuttgart.de/produkte/softwareprodukte/isg-kernel/dokumente-und-downloads>

PDFs EN:

<https://www.isg-stuttgart.de/en/products/softwareproducts/isg-kernel/documents-and-downloads>

E-Mail:

documentation@isg-stuttgart.de



© Copyright
ISG Industrielle Steuerungstechnik GmbH
STEP, Gropiusplatz 10
D-70563 Stuttgart
All rights reserved
www.isg-stuttgart.de
support@isg-stuttgart.de

